## Teamson Home HR30701AA

# Teamson Home HR30701AA Wood Burning Fire Pit

Instruction Manual

## Introduction

Thank you for choosing the Teamson Home HR30701AA Wood Burning Fire Pit. This versatile outdoor product combines the warmth of a fire pit with the functionality of a barbecue grill, designed to enhance your outdoor living space. Please read this manual carefully before assembly and use to ensure safe operation and optimal performance. Keep this manual for future reference.

## Important Safety Information

**WARNING:** Failure to follow these safety instructions may result in fire, property damage, or personal injury.

- Always maintain a safe distance from combustible materials such as buildings, fences, trees, and dry vegetation.
- Use only approved fuel types (wood). Do not use gasoline, kerosene, diesel fuel, lighter fluid, or alcohol to ignite or re-ignite the fire.
- Keep children and pets away from the fire pit at all times.
- Allow the fire pit to cool completely before moving or storing it.
- Always supervise the fire pit during use. Never leave a burning fire pit unattended.
- Ensure the fire pit is placed on a stable, non-combustible surface.
- Have a fire extinguisher, garden hose, or bucket of sand readily available in case of fire.
- Do not use the fire pit on wooden decks or other flammable surfaces.
- Do not overload the fire pit with wood.
- Use caution when handling hot components. Always use the provided poker.

## Package Contents

Please check to ensure all components are present before assembly.

- Fire Pit Bowl (Main Unit)
- Base/Stand
- Spark Screen (Round protective cover with handle)
- BBQ Grill Grate
- Poker

- Assembly Hardware (Screws, bolts, etc.)
- Instruction Manual



Figure 1: All components included with the fire pit.

## Setup and Assembly

Assembly is required. Follow these steps to set up your fire pit:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches. Verify all parts listed in the "Package Contents" section are present.
2. **Attach Base to Fire Bowl:** Secure the fire pit bowl to its base using the provided hardware (screws/bolts). Ensure all connections are tight and stable.
3. **Place Grill Grate (Optional):** If using for barbecue, place the BBQ grill grate inside the fire bowl. For heating, the grill grate can be removed or left in place.
4. **Position Spark Screen:** The round protective spark screen can be placed over the fire bowl once the fire is lit to contain sparks.
5. **Select Location:** Choose a level, non-combustible surface outdoors, away from any flammable structures, overhanging branches, or dry vegetation. No ground preparation is required for this fire pit.



Figure 2: Assembled fire pit ready for use.

## Operating Instructions

### For Heating (Fire Pit Use):

1. **Prepare Fuel:** Use only dry, seasoned wood. Avoid using treated wood or trash, which can release harmful chemicals.
2. **Load Wood:** Place a small amount of kindling and paper in the center of the fire pit bowl. Gradually add larger pieces of wood, ensuring good airflow. The open design allows for easy loading of logs.
3. **Ignite Fire:** Carefully ignite the kindling using a long match or lighter.
4. **Manage Fire:** Once the fire is established, add more wood as needed. Use the provided poker to adjust logs and maintain the fire. The design promotes a slower burn, less smoke, and longer-lasting heat.
5. **Use Spark Screen:** Place the spark screen over the fire pit to contain sparks and embers, especially in windy conditions.
6. **Extinguish Fire:** Allow the fire to burn down naturally. Do not use water to extinguish the fire, as this can damage the fire pit and create steam hazards. Once the embers are cool, ensure no glowing material remains.

### For Barbecue Use:

1. **Prepare Coals:** Build a wood fire or use charcoal briquettes in the fire pit bowl. Allow them to burn down to hot embers.
2. **Place Grill Grate:** Carefully place the BBQ grill grate over the hot embers.
3. **Cook Food:** Place food on the grill grate. Monitor cooking closely and turn food as needed.
4. **Clean After Use:** After cooking and once the grill grate has cooled, clean it thoroughly.



Figure 3: Fire pit in operation, providing warmth and ambiance.

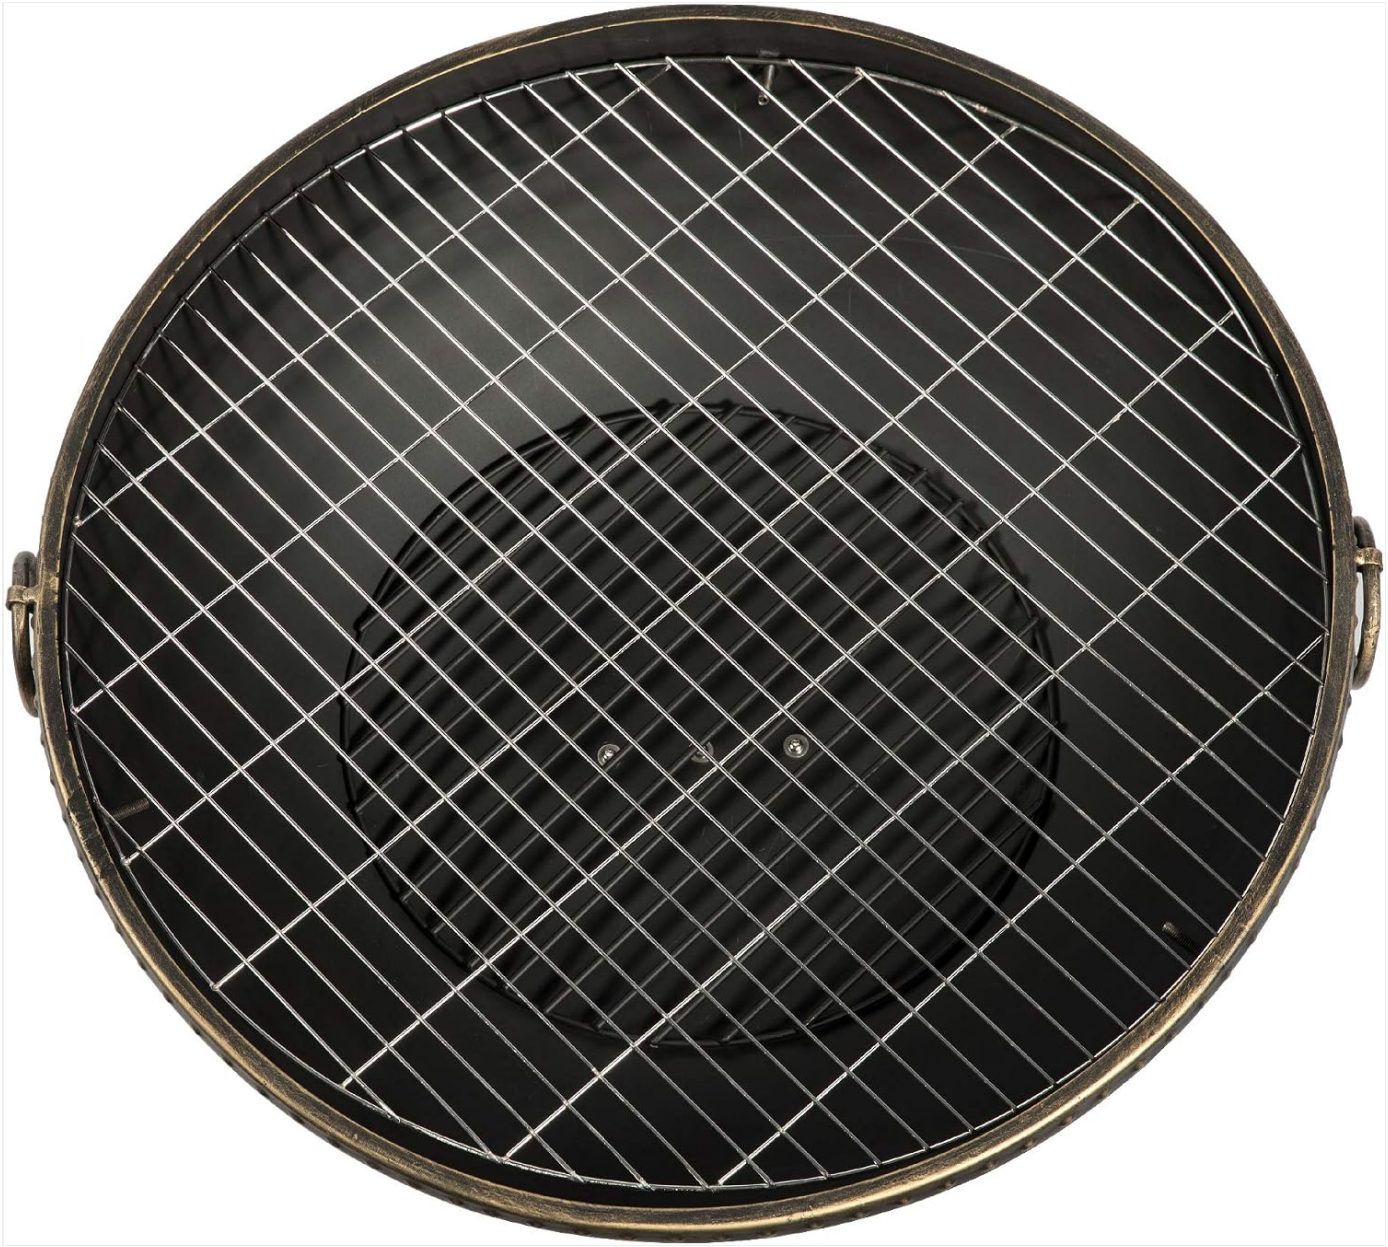


Figure 4: Top view of the fire pit with the BBQ grill grate installed.

## Maintenance

- **Cleaning:** After the fire pit has completely cooled, remove ash and debris. Use a stiff brush to clean the interior. Wipe down exterior surfaces with a damp cloth.
- **Rust Prevention:** The fire pit features an anti-corrosion steel structure. However, to prolong its life, store it in a dry place or use a weather-resistant cover when not in use, especially during adverse weather conditions.
- **Grill Grate Care:** Clean the BBQ grill grate after each use to prevent food buildup and rust.
- **Inspection:** Periodically inspect all components for signs of wear, damage, or loose connections. Tighten any loose hardware.

## Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| Difficulty starting fire | Wood is damp; insufficient kindling; poor airflow. | Use dry wood. Add more kindling. Arrange wood to allow for better airflow. |

| Problem | Possible Cause | Solution |
|---|---|---|
| Excessive smoke | Wood is wet or green; fire is not hot enough. | Use dry, seasoned wood. Ensure the fire is burning hot. Avoid overloading. |
| Fire goes out quickly | Insufficient fuel; poor airflow. | Add more wood. Adjust logs to improve airflow. |
| Rust appearing on surface | Exposure to moisture; lack of protective cover. | Clean and dry the affected area. Apply a high-temperature rust-resistant paint if necessary. Store in a dry place or use a weather-resistant cover. |

## Specifications

| | |
|---|---|
| **Model Number** | HR30701AA |
| **Brand** | Teamson Home |
| **Material** | Metal (Anti-corrosion steel) |
| **Product Dimensions (L x W x H)** | 76 cm x 76 cm x 70 cm (29.9 x 29.9 x 27.6 inches) |
| **Combustion Area (L x W x H)** | 74.5 cm x 74.5 cm x 24 cm (29.3 x 29.3 x 9.4 inches) |
| **Item Weight** | 10 kg (22 lbs) |
| **Fuel Type** | Wood |
| **Color** | Brown (Bronzed finish) |
| **Shape** | Round |
| **UPC** | 810014812229 |
| **Country of Origin** | China |




Figure 5: Product dimensions.

## Warranty and Support

**Manufacturer's Warranty:** This product comes with a 30-day manufacturer's warranty.
For further assistance, product information, or to explore other Teamson Home products, please visit the official Teamson Home store:
Teamson Home Official Store

© 2026 Teamson Home. All rights reserved.
Model: HR30701AA

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question