PRUNUS J-777

PRUNUS J-777 Pocket Radio User Manual

Model: J-777

Introduction

Welcome to the user manual for your new PRUNUS J-777 Pocket AM/FM Radio. This compact and portable radio is designed for ease of use and excellent reception, allowing you to enjoy your favorite AM and FM stations wherever you go. Its simple controls and durable design make it ideal for daily listening, outdoor activities, or as a reliable emergency radio.

Product Features

- **Battery Operated:** Powered by 2 AAA batteries (not included), ensuring functionality during power outages or on the go.
- **Excellent Reception:** Features a retractable antenna for FM (88 - 108 MHz) and an internal magnetic antenna for AM (520 - 1710 kHz), providing clear and stable signal reception.
- **Portable Design:** Extremely lightweight and compact (approximately 3.7 x 2.24 x 0.86 inches, 0.14 lbs), designed to fit easily into a pocket or small bag.
- **User-Friendly Controls:** Simple operation with a volume knob, tuning knob, and a power/band switch for straightforward use by all ages.
- **Clear Sound Quality:** Equipped with a built-in high-performance speaker for clear audio and includes 3.5mm earphones for private listening.

Package Contents

Please check the package to ensure all items are present:

- PRUNUS J-777 Pocket AM/FM Radio
- 3.5mm Earphones
- User Manual (this document)



Image: The PRUNUS J-777 Pocket Radio in white, shown alongside its included 3.5mm earphones.

Setup

1. Battery Installation

The PRUNUS J-777 radio requires two (2) AAA batteries for operation. Batteries are not included.

1. Locate the battery compartment on the back of the radio.
2. Open the hinged battery compartment cover.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.

4. Close the battery compartment cover securely.



Image: The rear view of the PRUNUS J-777 radio, showing the open battery compartment and two AAA batteries ready for insertion, highlighting the hinged cover.

2. Connecting Earphones (Optional)

For private listening, you can connect the included 3.5mm earphones to the radio.

1. Locate the 3.5mm earphone jack on the top side of the radio.
2. Insert the earphone plug firmly into the jack.
3. When earphones are connected, the radio's built-in speaker will automatically mute.

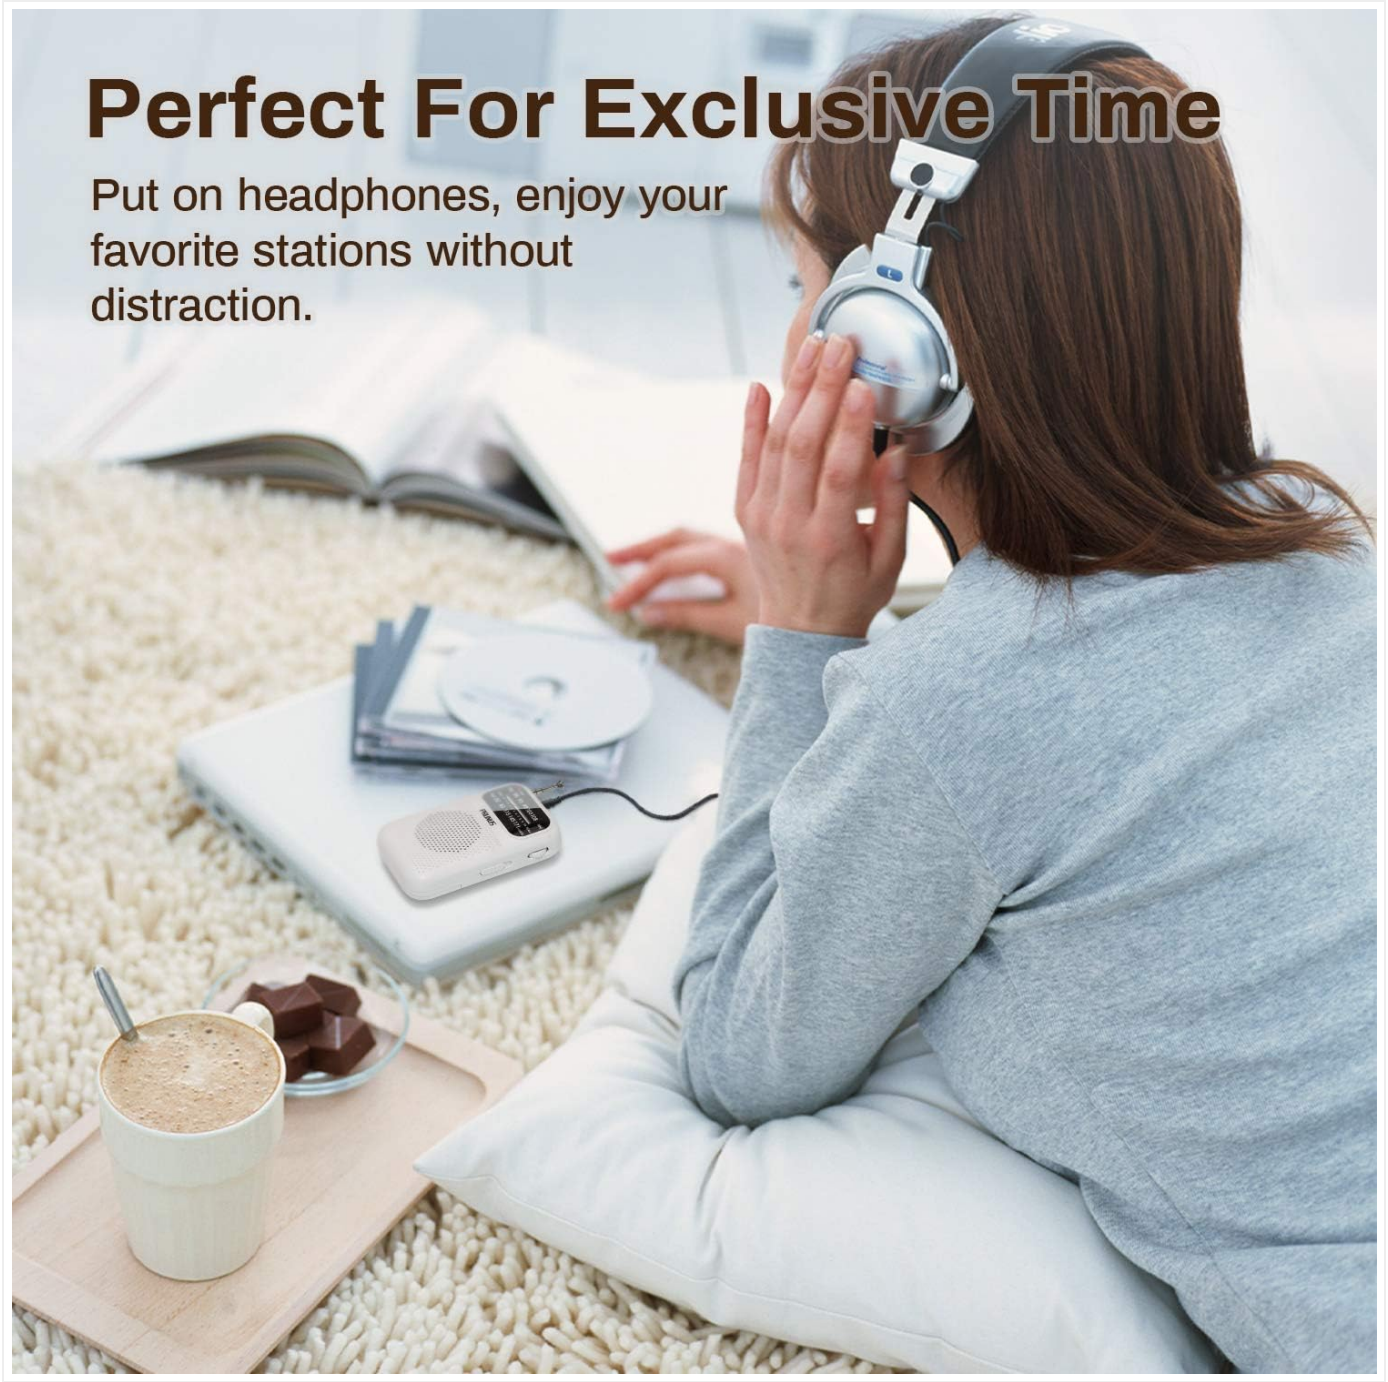


Image: A person wearing headphones, enjoying music from the PRUNUS J-777 radio, which is placed on a carpet next to a cup of coffee and chocolate, illustrating private listening.

Operating Instructions

1. Power On/Off and Band Selection

The radio features a simple slide switch for power and band selection.

- Slide the switch to "FM" to turn on the radio and select the FM band.
- Slide the switch to "AM" to turn on the radio and select the AM band.
- Slide the switch to "OFF" to turn off the radio.



Image: A visual guide demonstrating the three main controls of the PRUNUS J-777 radio: the power/band switch, the volume adjustment wheel, and the tuning wheel, emphasizing ease of use.

2. Adjusting Volume

Use the volume wheel located on the side of the radio to adjust the sound level.

- Roll the wheel upwards to increase the volume.
- Roll the wheel downwards to decrease the volume.

3. Tuning to Stations

To find your desired radio station, use the tuning wheel.

- Slowly rotate the tuning wheel on the side of the radio.
- Observe the frequency scale on the front of the radio to identify the station's frequency.
- A tuning indicator light will turn green when a strong, valid channel is found, assisting with precise tuning.
- For optimal FM reception, extend the telescopic antenna fully. For AM reception, the radio uses an internal magnetic

antenna, so orient the radio for best signal.



Image: A hand holding the PRUNUS J-777 radio, with graphic overlays depicting radio waves emanating from it, illustrating its excellent reception capabilities for both AM and FM bands.

Your browser does not support the video tag.

Video: A demonstration of the PRUNUS pocket radio, showcasing its compact size, earphone jack, FM/AM band selection, tuning wheel, and the tuning indicator light. It also illustrates how easily the radio can be stored and carried for on-the-go listening.

Maintenance

- **Cleaning:** Wipe the radio with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** Remove batteries if the radio will not be used for an extended period to prevent leakage.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.
- **Antenna:** Handle the telescopic antenna gently to avoid bending or breaking.

Troubleshooting

Problem	Possible Cause	Solution
No sound or very low volume.	Volume is too low; batteries are dead or inserted incorrectly; earphones are connected.	Increase volume. Replace batteries or check polarity. Disconnect earphones if you want to use the speaker.
Poor reception or static.	Weak signal; antenna not extended (FM); radio orientation (AM); low batteries.	Extend FM antenna fully. Rotate the radio for better AM reception. Replace batteries if they are low. Move to an area with better signal.
Radio does not turn on.	Batteries are dead or inserted incorrectly; power switch is in OFF position.	Replace batteries and check polarity. Ensure power switch is set to FM or AM.

Specifications

Feature	Detail
Model Number	J-777
Dimensions (L x W x H)	3.7 x 0.86 x 2.24 inches (approx.)
Weight	2.2 ounces (approx. without batteries)
Power Source	2 x AAA Batteries (not included)
FM Frequency Range	88 - 108 MHz
AM Frequency Range	520 - 1710 kHz
Connectivity	3.5mm Audio Jack
Speaker	Built-in



Image: The PRUNUS J-777 radio displayed next to a credit card, with its dimensions (3.7 inches height, 2.24 inches width, 0.86 inches depth) clearly marked, emphasizing its compact size.

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official PRUNUS website.

© 2024 PRUNUS. All rights reserved.