Kärcher 2.644-084.0

Kärcher T-Racer T 5 Surface Cleaner Instruction Manual

Model: 2.644-084.0

Introduction

The Kärcher T-Racer T 5 Surface Cleaner is designed for efficient and splash-free cleaning of large outdoor surfaces. Its innovative design allows for quick and thorough cleaning of patios, driveways, and decks, significantly reducing cleaning time compared to traditional spray lances. The adjustable nozzle distance and ergonomic handle ensure optimal performance and user comfort.

Safety Instructions

Always observe the following safety precautions when operating the T-Racer T 5 Surface Cleaner:

- Read the entire instruction manual before first use.
- Ensure the surface cleaner is securely connected to a compatible Kärcher pressure washer.
- Wear appropriate personal protective equipment, including eye protection and sturdy footwear.
- Do not direct the water jet at people, animals, electrical equipment, or the appliance itself.
- Keep children and pets away from the operating area.
- Disconnect the appliance from the power source before cleaning, maintenance, or when not in use.

Setup and Assembly

Follow these steps to assemble your Kärcher T-Racer T 5 Surface Cleaner:

1. **Attach the Extension Wand:**
   Connect the extension wand to the main body of the T-Racer T 5. Ensure it clicks securely into place.



Image: Securely attach the extension wand to the surface cleaner unit. An arrow indicates the direction of connection.

2. **Connect to Pressure Washer:**

   Attach the assembled T-Racer T 5 to your Kärcher pressure washer's trigger gun. Ensure a tight connection to prevent leaks.

3. **Nozzle Installation/Check:**

   The T-Racer T 5 comes with two flat jet nozzles. Ensure they are correctly installed and free from obstructions. A small wire tool is provided for cleaning the nozzles if necessary.

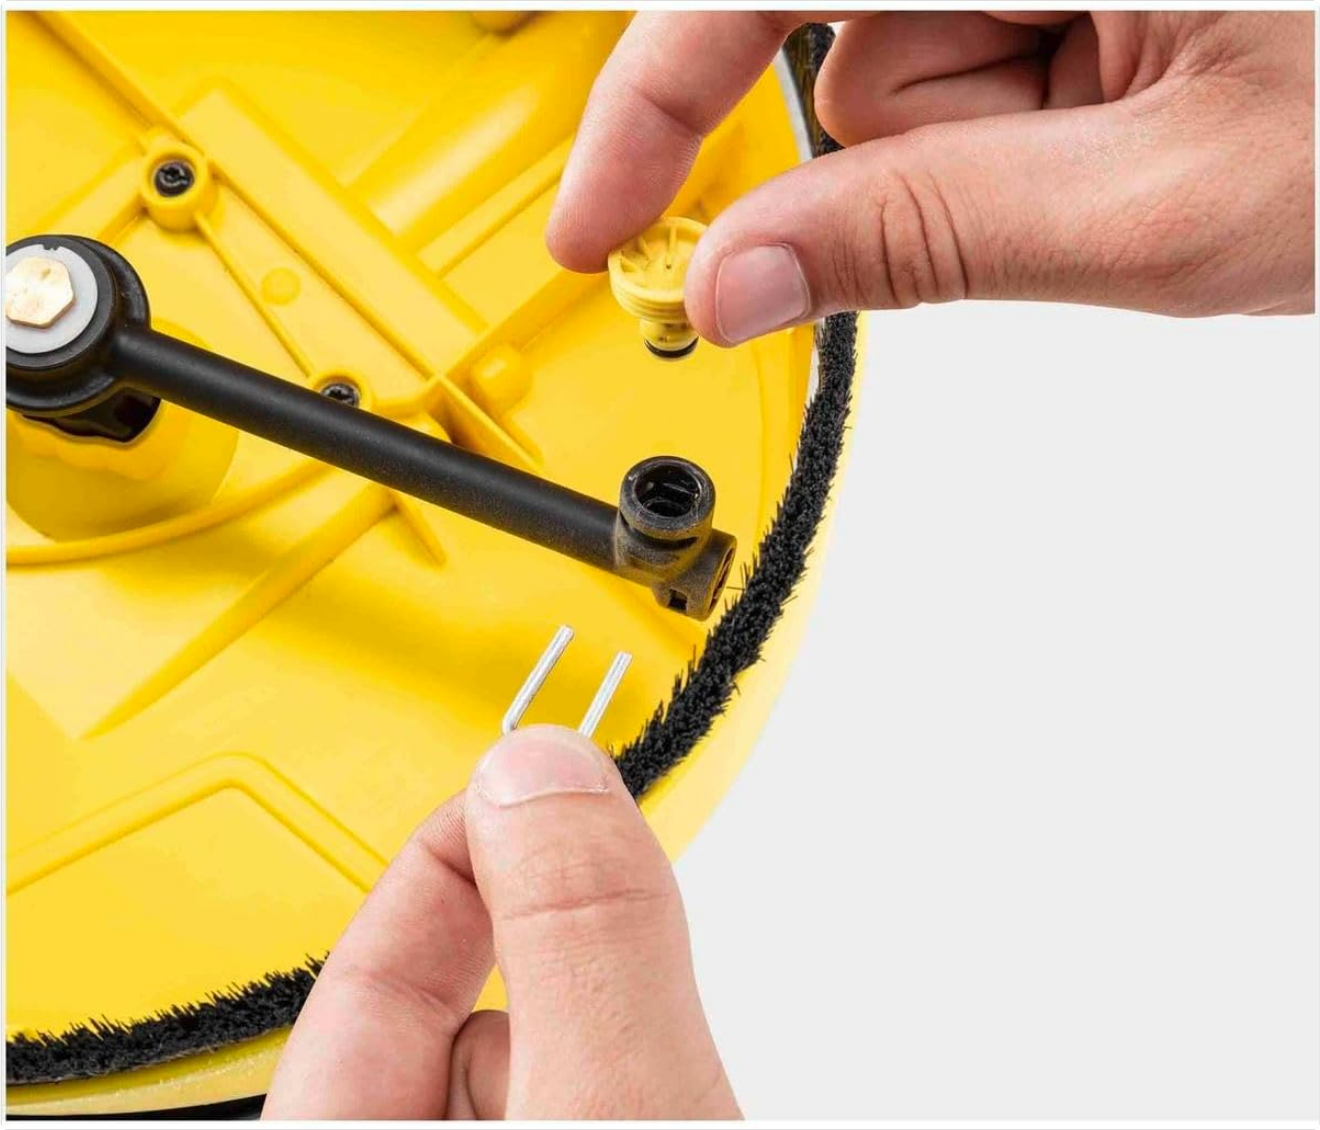


Image: Hands demonstrating the installation or cleaning of the small yellow nozzles on the underside of the T-Racer T 5, with a wire tool.

Operating Instructions

Operating the Kärcher T-Racer T 5 is straightforward:

1. **Surface Preparation:**

   Clear the area to be cleaned of any loose debris, furniture, or obstacles.

2. **Adjust Nozzle Distance:**

   Rotate the grey knob on top of the T-Racer T 5 to adjust the distance of the nozzles from the cleaning surface. Turn towards "HARD" for robust surfaces like stone or concrete, and towards "SOFT" for delicate surfaces like wood or painted areas. This adjustment helps prevent damage and optimizes cleaning performance.



Image: A hand adjusting the central grey knob on the T-Racer T 5, with "HARD" and "SOFT" indicators visible, while the unit rests on a stone patio.



Image: The Kärcher T-Racer T 5 in operation on a wooden deck, showing foam and water being used for cleaning.

3. **Begin Cleaning:**

   Turn on your pressure washer. Hold the T-Racer T 5 firmly and move it slowly and evenly over the surface. The 'hovercraft effect' will make it easy to glide across the area. The splash protection hood will contain water and debris.



Image: A man using the Kärcher T-Racer T 5 to clean a wooden deck, demonstrating the ease of movement.

4. **Vertical Surface Cleaning:**

   For vertical surfaces like garage doors, utilize the integrated ergonomic handle for comfortable and effective cleaning.



Image: A man using the Kärcher T-Racer T 5 to clean a corrugated metal garage door in a vertical motion, highlighting the ergonomic handle.

Maintenance and Care

Regular maintenance ensures the longevity and optimal performance of your T-Racer T 5:

- **Nozzle Cleaning:**

  After each use, check the nozzles for any blockages. Use the provided nozzle cleaning needle to clear any debris. Refer to the "Setup and Assembly" section for an image of nozzle cleaning.
- **Rinsing:**

  Rinse the surface cleaner thoroughly with clean water after each use to remove dirt and detergent residues.
- **Storage:**

  Store the T-Racer T 5 in a dry, frost-free location, away from direct sunlight.

Troubleshooting

Problem	Possible Cause	Solution
No water coming out or weak spray.	Clogged nozzles.	Clean the nozzles using the provided needle.

Problem	Possible Cause	Solution
Uneven cleaning pattern.	Nozzles partially clogged or worn.	Clean or replace nozzles. Ensure even movement during operation.
Excessive splashing.	Nozzle distance set too close to the surface.	Adjust the nozzle distance further from the surface using the adjustment knob.

Specifications

Brand: Kärcher

Model: 2.644-084.0

Power Source: Hand-operated (Pressure washer dependent)

Color: Yellow/Black

Maximum Pressure: 2102.6 PSI

Item Weight: 3.23 pounds (1.47 Kilograms)

Product Dimensions: 10.97"L x 4.34"W x 15.42"H

Material: Plastic

Included Components: 1 x Karcher T 5 T-Racer Patio Cleaner

Warranty and Support

For warranty information, technical support, or to purchase replacement parts, please visit the official Kärcher website or contact their customer service. The EU Spare Part Availability Duration is 5 Years.
You can find more information and support at theKärcher Store on Amazon.

© 2024 Kärcher. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question