Owala C03766

Owala FreeSip Insulated Stainless Steel Water Bottle User Manual

Model: C03766

Product Overview

The Owala FreeSip Insulated Stainless-Steel Water Bottle with Locking Push-Button Lid is designed for versatile hydration. It features a unique FreeSip spout allowing for two distinct drinking methods: sipping upright through the built-in straw or tilting back to drink from the wide-mouth opening. This reusable bottle combines convenience with advanced insulation technology.






The Owala FreeSip Insulated Stainless Steel Water Bottle in Very, Very Dark color, showcasing its sleek design and integrated carry loop.



Detailed view of the patented FreeSip spout, illustrating the dual drinking options: sipping through the straw or swigging from the wide opening.

Key Features:

- **Dual-Function FreeSip Spout:** Allows for sipping upright through the built-in straw or tilting back to swig from the wide-mouth opening.
- **Locking Push-Button Lid:** Provides a secure seal and keeps the spout clean.
- **Double-Wall Insulation:** Keeps beverages cold for up to 24 hours.
- **Integrated Carry Loop:** Doubles as a lock for added security.
- **Cup Holder-Friendly Base:** Designed to fit most standard cup holders.
- **Wide Opening:** Facilitates easy cleaning and ice addition.
- **BPA, Lead, and Phthalate-Free:** Ensures safe drinking.

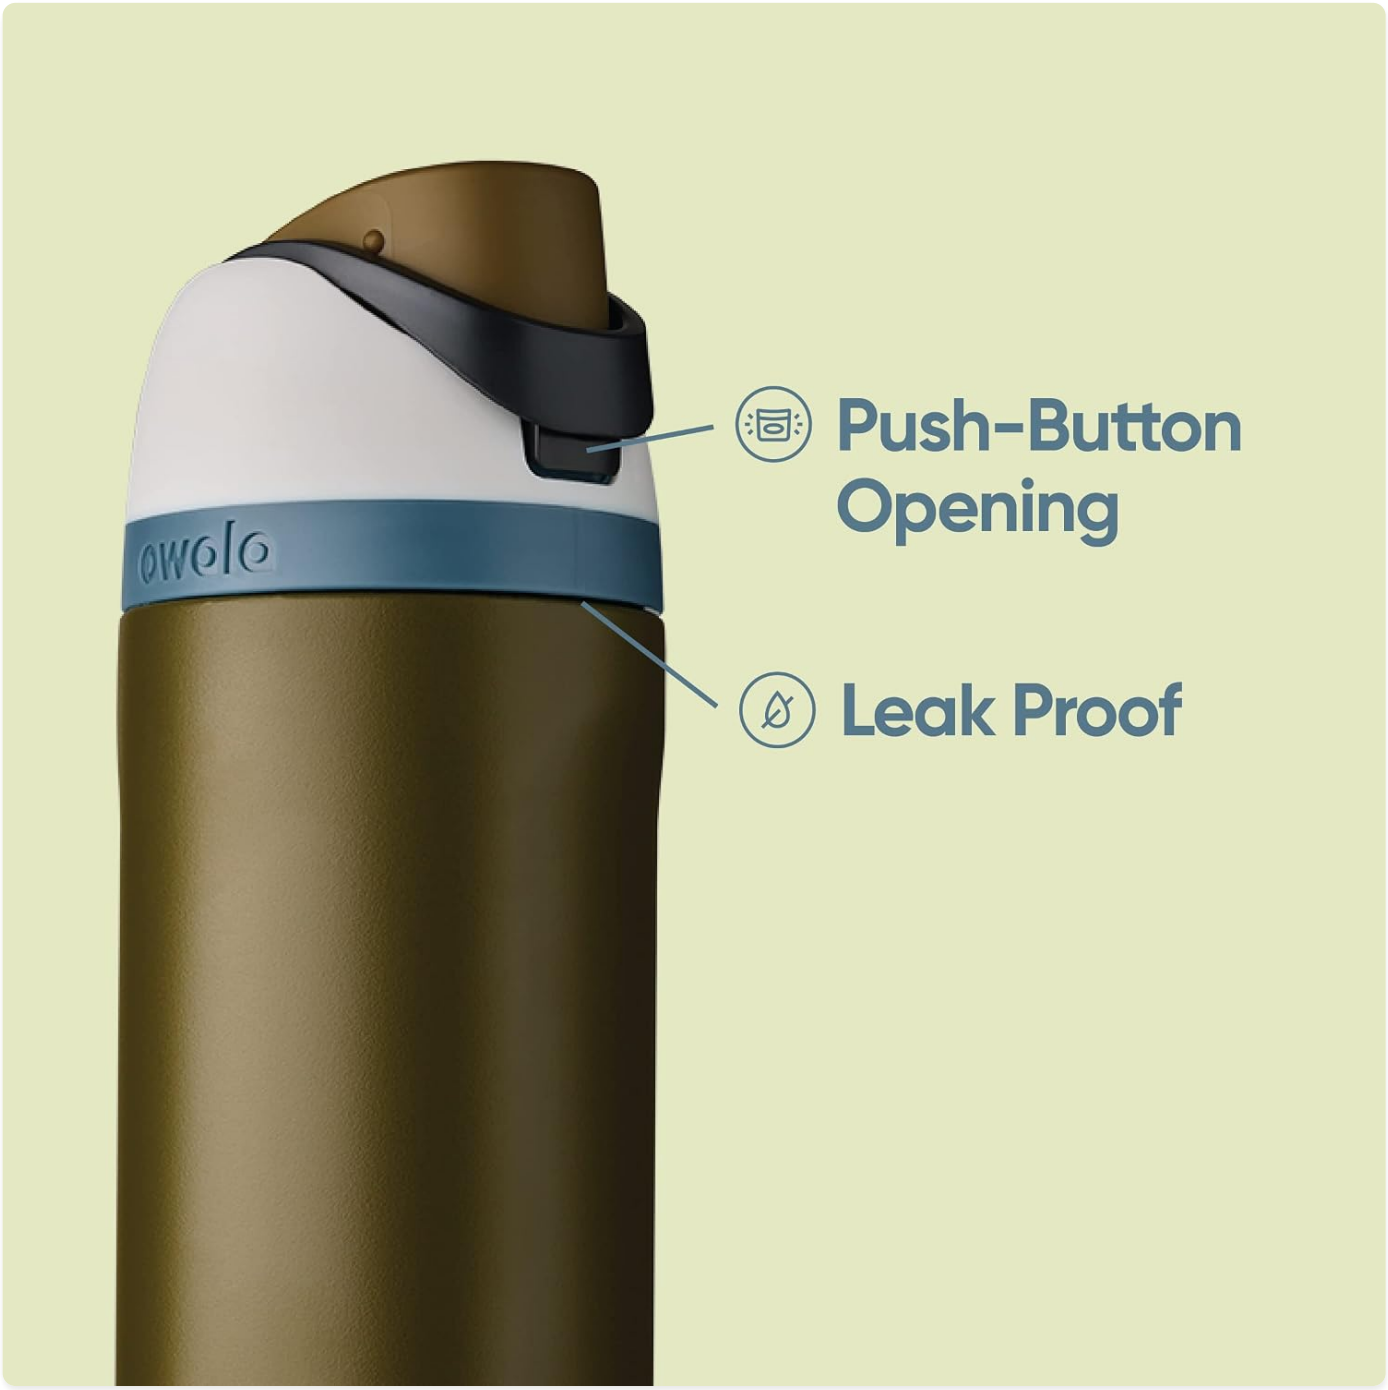

The lid mechanism, highlighting the push-button opening for quick access and its leak-proof design when closed.



Visual representation of key FreeSip features, including the ability to keep drinks cold for 24 hours and the convenient carry loop.

Setup and First Use

1. **Unpack:** Remove all packaging materials and labels from the water bottle.
2. **Initial Cleaning:** Before first use, hand wash the cup with warm, soapy water. The lid is dishwasher safe (top rack recommended). Ensure all components are thoroughly rinsed.
3. **Assemble:** Reassemble the straw and lid components. Ensure the straw is securely attached to the lid's underside.
4. **Fill:** Fill the bottle with your desired cold beverage. The wide opening allows for easy addition of ice cubes.

Important Note: Not for use with hot liquids.

Operating Instructions

Using the FreeSip Spout:

- **Open the Lid:** Press the push-button on the front of the lid to release the spout cover.
- **Sip:** For upright sipping, place your mouth over the integrated straw opening and draw liquid.
- **Swig:** For a wider flow, tilt the bottle back and drink directly from the wide-mouth spout opening.
- **Close the Lid:** Push the spout cover down firmly until it clicks into place.

Locking Mechanism:

- The integrated carry loop also functions as a lock. To lock the lid, swing the carry loop forward over the push-button until it covers it. This prevents accidental opening.
- To unlock, swing the carry loop back to its upright position.



The bottle's lid in a locked position, demonstrating its leak-proof capability when the carry loop is engaged over the push-button.

Maintenance and Cleaning

Proper cleaning ensures the longevity and hygiene of your Owala FreeSip water bottle.

- **Lid:** The lid is dishwasher safe and can be placed on the top rack for cleaning.

- **Cup:** The stainless steel cup should be hand washed with warm, soapy water. Do not place the cup in the dishwasher.
- **Straw:** The built-in straw is easy to clean. Detach it from the lid and wash thoroughly with a straw brush and soapy water.
- **Drying:** Allow all parts to air dry completely before reassembling to prevent odor or mildew.

Caution: Do not microwave, freeze, or boil the bottle. Do not use to store warm dairy products, baby food, or other perishable liquids to minimize bacterial growth.

Troubleshooting

Pressure Build-Up / Leaking:

Altitude changes (such as during airplane travel or while ascending mountains) or exposure to hot temperatures (such as leaving the bottle in a car on a hot day) may cause pressure to build up in the bottle. This can lead to contents leaking or spraying when opening the bottle.

- **Solution:** To prevent this, loosen the lid by a quarter turn to release pressure. Then, retighten the lid before drinking.

Spout Cover Opening Rapidly:

Pressurized contents may cause the spout cover to open rapidly enough to potentially injure fingers positioned in or near the recess behind the spout cover.

- **Caution:** When opening the bottle, always keep fingers away from the recess behind the spout cover. Always open with caution.

Specifications

Feature	Detail
Brand	Owala
Model Name	FreeSip Insulated Stainless Steel Water Bottle
Model Number	C03766
Material	Stainless Steel
Color	Very, Very Dark
Capacity	24 Fluid Ounces
Product Dimensions	3.24"W x 10.68"H
Item Weight	13.6 ounces
Care Instructions	Hand wash cup, dishwasher-safe lid
Special Features	BPA-free, Dual-function spout, Insulated



Comparison of Owala FreeSip bottle sizes: 24oz, 32oz, and 40oz, illustrating their relative proportions.



Detailed dimensions of the Owala FreeSip bottle, showing its height of 10.68 inches and width of 3.24 inches.

Warranty and Support

The Owala FreeSip Insulated Stainless Steel Water Bottle is covered by the manufacturer's limited lifetime warranty. For warranty claims, product support, or additional information, please visit the official Owala website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Official Owala Store: Owala Store on Amazon

© 2025 Owala. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question