ZdalaMit RMT-B102A

ZdalaMit RMT-B102A Replacement Remote Control User Manual

For Sony Blu-ray Player Models: BDP-S350, BDP-BX1, BDP-S550, BDP-S5000ES

1. Introduction

This manual provides instructions for the ZdalaMit RMT-B102A replacement remote control. This remote is designed to function with various Sony Blu-ray Player models, offering direct control without the need for programming. Please read this manual thoroughly to ensure proper use and longevity of your remote control.



Figure 1: ZdalaMit RMT-B102A Replacement Remote Control, front view.

2. Compatible Models

The ZdalaMit RMT-B102A remote control is compatible with the following Sony Blu-ray Player models:

- BDP-S350
- BDP-BX1
- RMT-B102P
- RMT-B103A
- BDP-S550
- BDP-S5000ES

This remote is a direct replacement and does not require any special setup or programming for these models.

3. Setup

3.1 Battery Installation

The remote control requires two (2) 1.5V AA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with your compatible Sony Blu-ray Player.



Figure 2: Rear view of the remote control, indicating the battery compartment.

4. Operating Instructions

The ZdalaMit RMT-B102A remote control provides full functionality for your Sony Blu-ray Player. Point the remote directly at the Blu-ray player's infrared sensor for optimal performance.

4.1 Button Functions Overview



Figure 3: Detailed view of the remote control's button layout.

Below is a general description of the primary buttons and their functions:

- **Power (I/O)**: Turns the Blu-ray player on or off.
- **Open/Close**: Opens or closes the disc tray.
- **TV I/O**: Power button for a connected TV (functionality may vary).
- **Number Buttons (0-9)**: For direct track selection or input.
- **Audio**: Selects audio tracks or languages.
- **Subtitle**: Toggles subtitle display.

- **Angle**: Changes camera angle on compatible discs.
- **Display/Clear**: Displays disc information or clears input.
- **Time**: Displays elapsed or remaining time.
- **Red, Green, Blue, Yellow Buttons**: Context-sensitive function buttons, typically used for menu navigation or special features.
- **Top Menu** / **Pop Up/Menu**: Accesses the disc's main menu or pop-up menu.
- **Navigation Pad (Up, Down, Left, Right, Enter)**: Navigates through menus and confirms selections.
- **Return**: Goes back to the previous menu or screen.
- **Options**: Accesses additional options or settings.
- **Home**: Returns to the player's home screen.
- **Theater**: Activates a specific theater mode (functionality may vary).
- **Display**: Shows current playback status or information.
- **Playback Controls (Prev, Replay, Advance, Next, Play, Pause, Stop, Scene Search)**: Standard controls for media playback.
- **VOL +** / **-**: Adjusts volume (functionality may vary, typically for TV).
- **CH +** / **-**: Changes channels (functionality may vary, typically for TV).
- **Muting**: Mutes audio (functionality may vary, typically for TV).
- **Input**: Selects input source on a connected TV (functionality may vary).

For specific functions related to your Blu-ray player model, refer to your player's original user manual.

5. Maintenance

5.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or alcohol, as these can damage the finish or internal components.
- Avoid spilling liquids on the remote control.

5.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
Dispose of used batteries according to local regulations.

6. Troubleshooting

If you experience issues with your ZdalaMit RMT-B102A remote control, refer to the following common troubleshooting steps:

Problem	Solution
Remote control is not working.	Ensure batteries are installed correctly with the correct polarity (+/-). Replace old batteries with new 1.5V AA alkaline batteries. Check for any obstructions between the remote control and the Blu-ray player's infrared sensor. Ensure you are pointing the remote directly at the Blu-ray player.

Problem	Solution
Certain buttons do not respond.	Verify that the remote control is compatible with your specific Sony Blu-ray player model. Some buttons (e.g., TV I/O, VOL, CH, Input) are designed for TV control and may not function with the Blu-ray player itself. Clean the remote control to ensure no debris is obstructing button presses.
Remote control range is reduced.	Replace the batteries. Low battery power can reduce the effective range. Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the infrared signal.

7. Specifications

Feature	Detail
Model Number	RMT-B102A
Compatible Devices	Sony Blu-ray Players (BDP-S350, BDP-BX1, BDP-S550, BDP-S5000ES, etc.)
Power Supply	2 x 1.5V AA Alkaline Batteries
Dimensions (L x W x H)	Approximately 5.5 x 1.5 x 0.6 inches (14 x 3.8 x 1.5 cm)
Item Weight	Approximately 1.41 ounces (40 grams)
Color	Black
Special Feature	Pre-programmed, no setup required



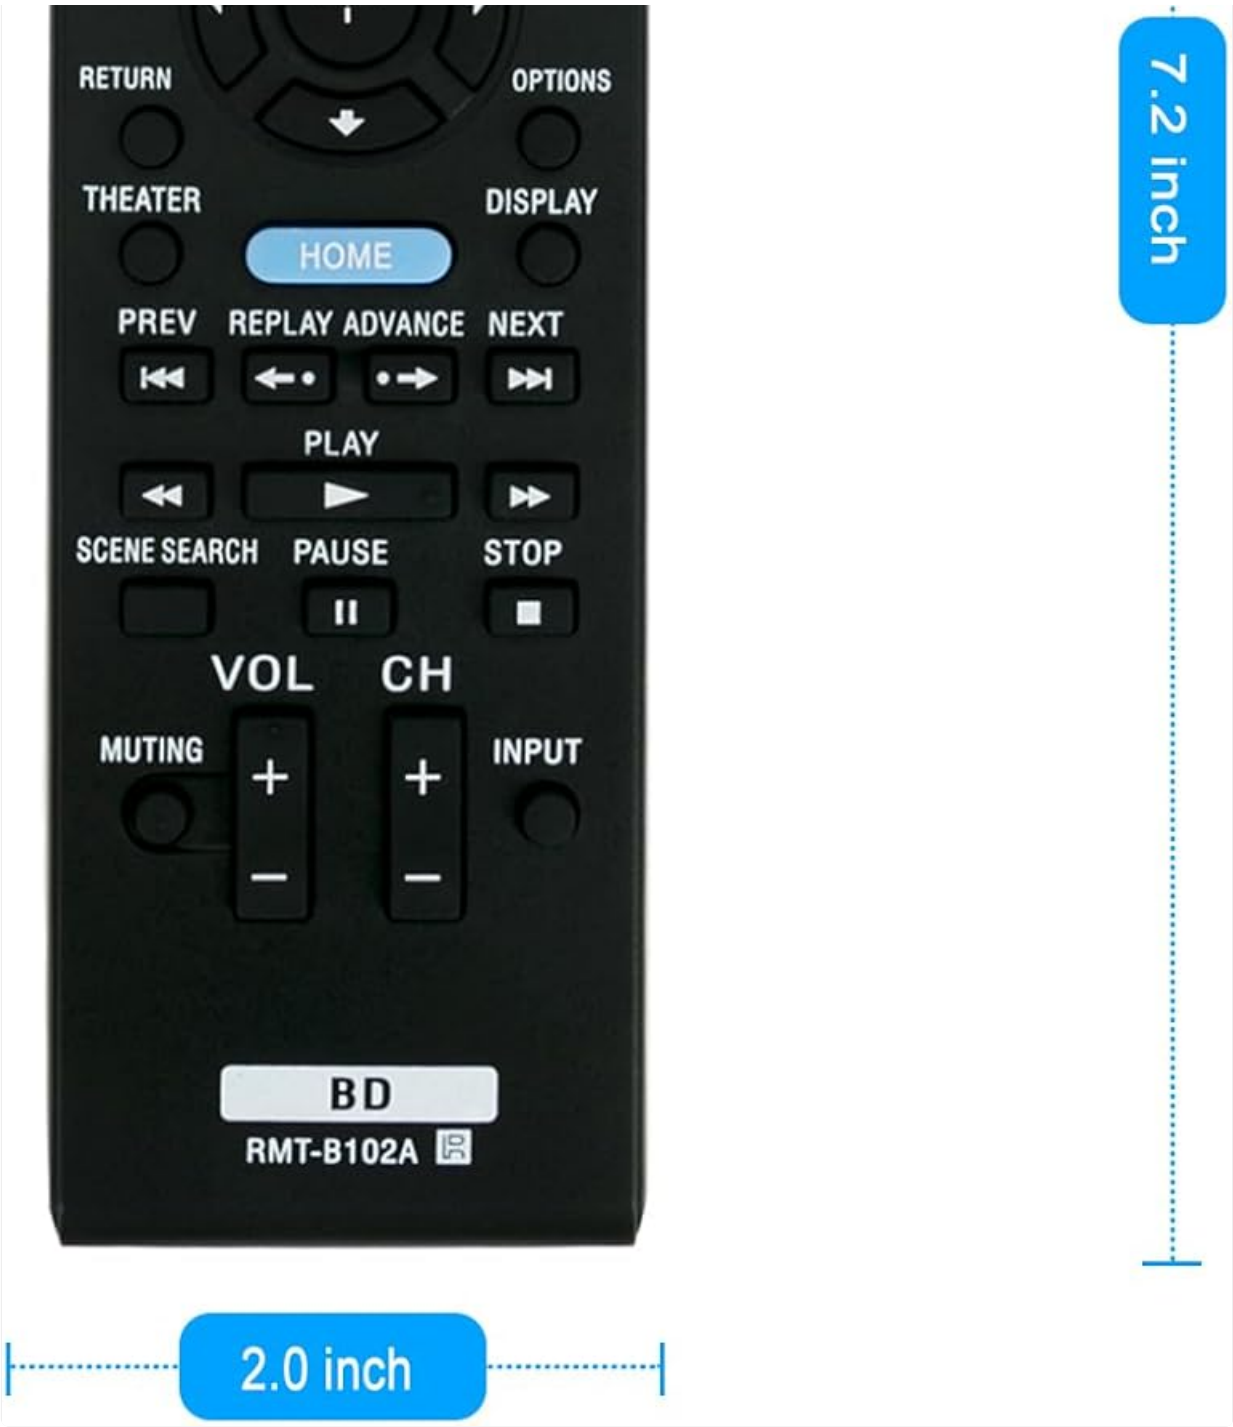


Figure 4: Remote control with approximate dimensions (7.2 inches length, 2.0 inches width).

8. Support

For further assistance or if you encounter issues not covered in this manual, please contact the manufacturer or your retailer. Provide your product model number (RMT-B102A) and a detailed description of the problem when seeking support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question