Balay 3VS506BP

Balay 3VS506BP Freestanding Dishwasher User Manual

Model: 3VS506BP

Important Safety Instructions

Please read this manual carefully before using your appliance and keep it for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons.

General Safety

- Ensure the dishwasher is properly installed and grounded by a qualified technician.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating.
- Never use flammable liquids or vapors in or near the dishwasher.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.
- Use only detergents and rinse aids specifically designed for dishwashers.

Product Overview

Components




Front view of the Balay 3VS506BP freestanding dishwasher, showcasing its white finish and control panel.



Close-up of the control panel with digital display and program selector dial.



The Balay 3VS506BP dishwasher open in a modern kitchen setting, showing the interior racks.

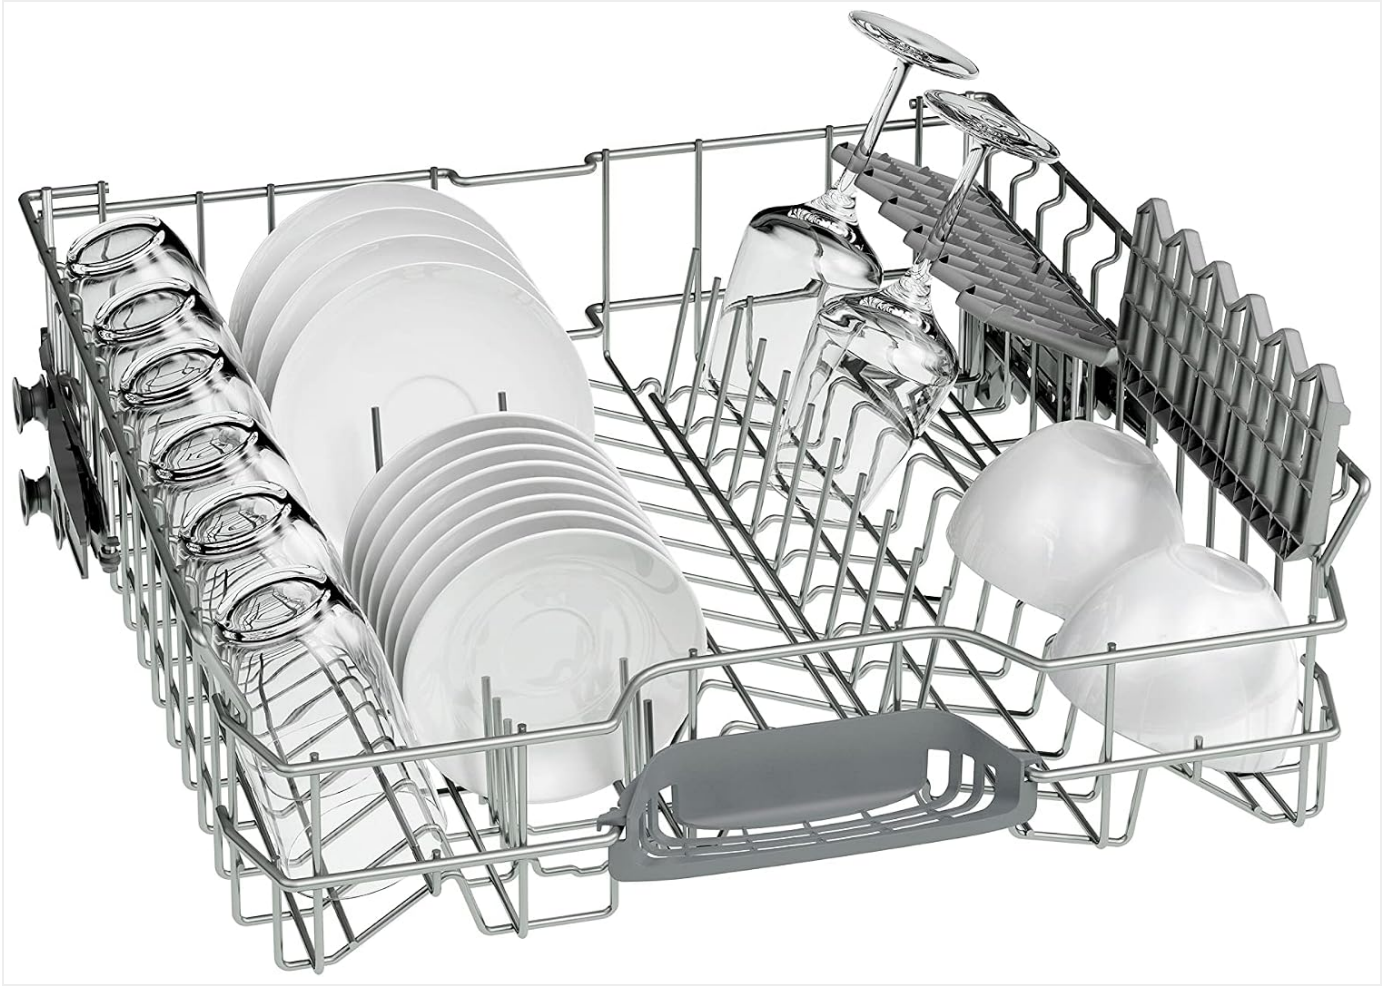

Upper basket of the dishwasher loaded with glasses and small bowls, demonstrating adjustable features.



Lower basket of the dishwasher loaded with plates, pots, and cutlery, highlighting the cutlery basket.

Installation


Before Installation

- Unpack the dishwasher and check for any transport damage.
- Ensure all packaging materials are removed before installation.

Placement

- Place the dishwasher on a firm, level surface.
- Avoid placing the appliance near heat sources like radiators or direct sunlight.
- Ensure adequate ventilation around the appliance.

Dimensions

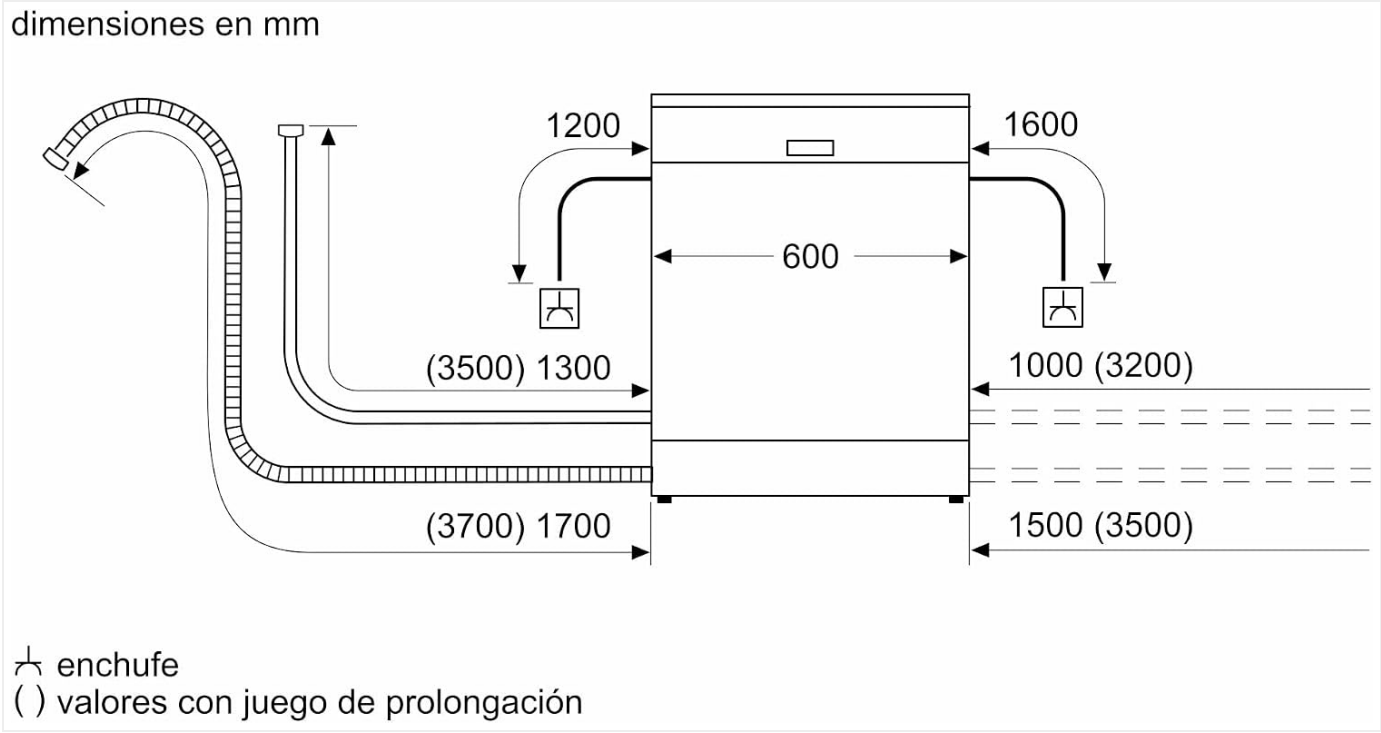

Technical diagram showing the dimensions of the dishwasher (height, width, depth) and connection points.

- Height: 845 mm
- Width: 600 mm
- Depth: 600 mm

Electrical and Water Connection

- Connect to a 220 Volt power supply.
- Ensure water inlet and drain hoses are securely connected without kinks.
- The water pressure must be within the recommended range for optimal operation.

Operating Instructions

Control Panel

The control panel features a program selector dial, a digital display, and various function buttons. Use the dial to select your desired wash program and the buttons to activate special functions.

Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place dishes securely in the baskets, ensuring water can reach all surfaces.
- Avoid overloading the dishwasher to ensure effective cleaning.
- Place cutlery in the designated basket with handles facing down for forks and spoons, and up for knives.

Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid indicator and refill as needed to ensure streak-free drying.

Program Selection

The Balay 3VS506BP offers a variety of wash programs to suit different needs:

- **Intensive 70°C:** Ideal for heavily soiled pots, pans, and dishes with dried-on food.

- **Automatic 45-65°C:** Automatically adjusts water temperature and cycle time based on the soil level of the dishes.
- **Eco 50°C:** An energy-efficient program for normally soiled dishes, optimizing water and energy consumption.
- **Rapid 65°C:** A quicker program for lightly soiled dishes that do not require intensive cleaning.
- **Prewash:** A short rinse cycle to remove loose food particles, preventing odors if you don't run a full wash immediately.

Special Functions

- **Pause+Load:** Allows you to pause the current wash cycle and add forgotten items before resuming.
- **+Rapid:** Reduces the overall wash time of selected programs, useful when you need dishes cleaned faster.
- **Half Load:** Optimizes water and energy usage for smaller loads, preventing unnecessary consumption.

Maintenance and Care

Cleaning the Filters

- Regularly clean the filter system to ensure optimal performance and prevent blockages.
- Twist and remove the cylindrical filter, then separate the fine and coarse filters.
- Rinse all filter components under running water to remove food particles.
- Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

Cleaning the Spray Arms

- Periodically check the spray arm nozzles for any blockages caused by food debris or limescale.
- If necessary, remove the spray arms and clean the nozzles with a thin, pointed object.

Exterior Cleaning

- Wipe the exterior surfaces of the dishwasher with a soft, damp cloth and a mild detergent.
- Avoid using abrasive cleaners or solvents that could damage the finish.

Winter Storage

- If the dishwasher will be stored in an unheated area during winter, drain all water from the appliance to prevent freezing damage.
- Disconnect the water supply and power cord.

Troubleshooting

Before contacting customer service, please refer to the following table for common issues and their solutions:


Problem	Possible Cause	Solution
Dishwasher does not start	No power supply; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a wash program.
Dishes are not clean	Incorrect loading; Insufficient detergent; Clogged spray arms/filters.	Reload dishes correctly; Add more detergent; Clean spray arms and filters.
Water remains in the dishwasher	Clogged drain filter or hose; Drain pump malfunction.	Clean drain filter and check hose for kinks; Contact service if pump is faulty.
Excessive noise during operation	Dishes rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check for foreign objects; Ensure dishwasher is level.

Technical Specifications

General Data

- **Model:** 3VS506BP
- **Brand:** Balay
- **Type:** Freestanding Dishwasher
- **Dimensions (H x W x D):** 845 mm x 600 mm x 600 mm
- **Weight:** 46 kg
- **Capacity:** 12 Place Settings
- **Noise Level:** 48 dB
- **Voltage:** 220 Volts
- **Number of Programs:** 5 (Intensive, Automatic, Eco, Rapid, Prewash)

Energy and Water Consumption

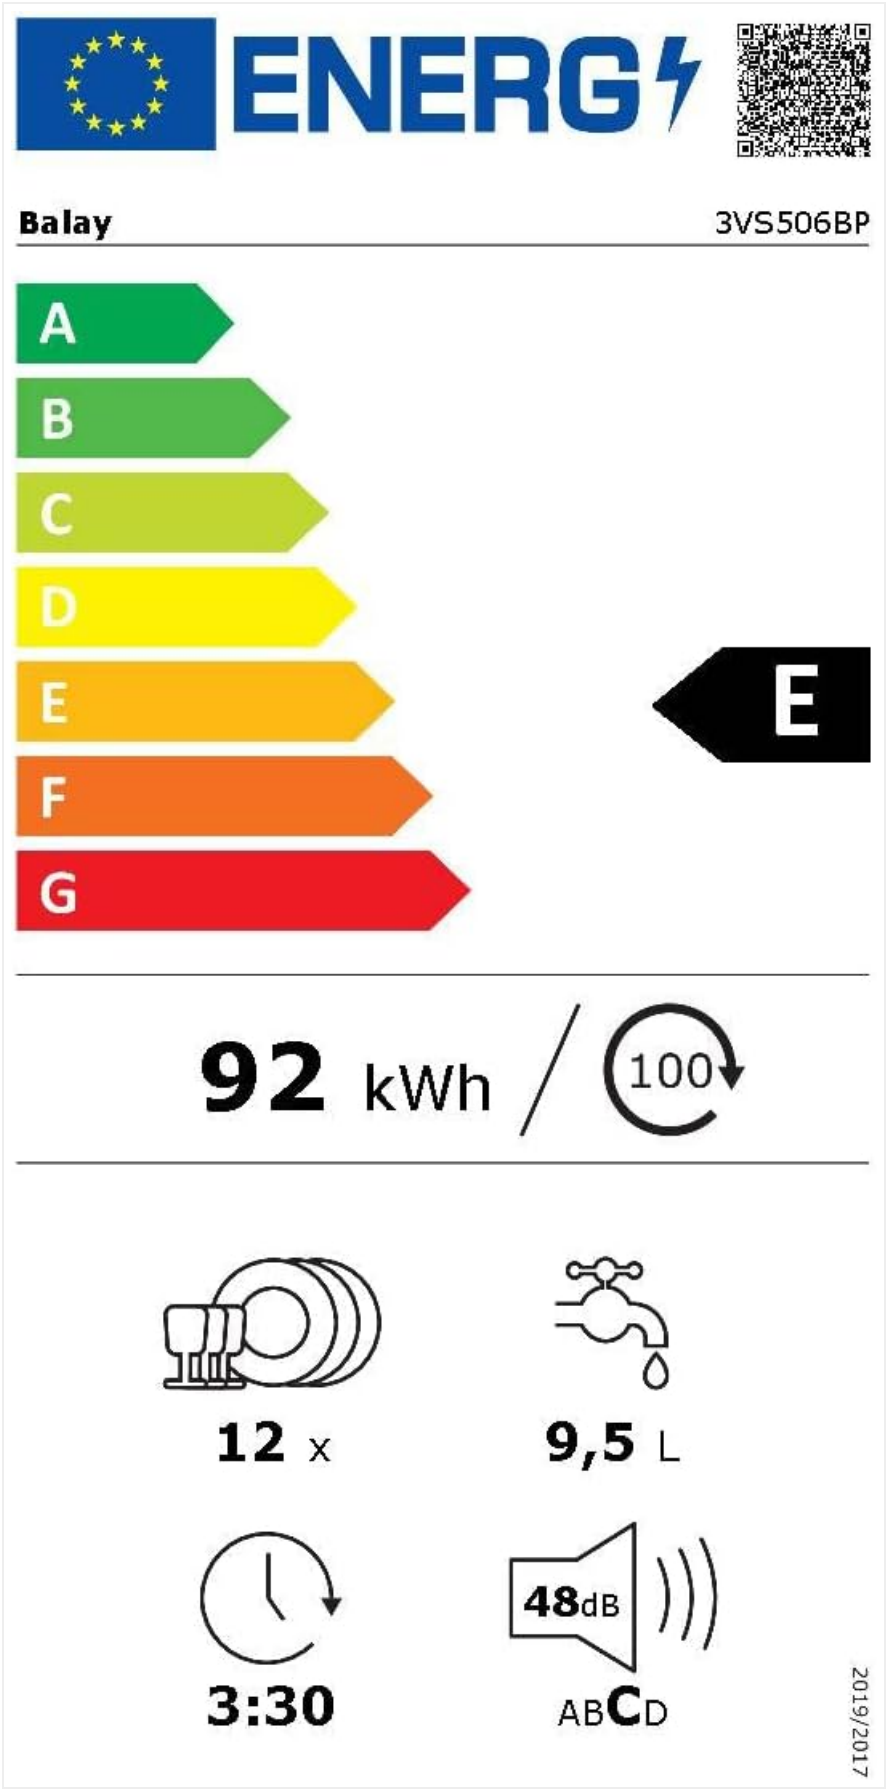

EU Energy Label for the Balay 3VS506BP dishwasher, showing energy efficiency class E, 92 kWh/100 cycles, 9.5 liters water/cycle, and 48 dB noise level.

- **Energy Efficiency Class:** E
- **Energy Consumption:** 92 kWh per 100 cycles
- **Water Consumption:** 9.5 liters per cycle
- **Eco Program Duration:** 3:30 hours

Warranty and Support

Warranty Information

- **Manufacturer Warranty:** 24 months
- **Availability of Spare Parts (EU):** 10 years

Contact Support

For technical assistance, spare parts, or warranty claims, please contact Balay customer service or visit their official website.

- **Manufacturer:** Balay
- **Balay Store:** Visit Balay Store on Amazon

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question