Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SUPRENT HC415BA

SUPRENT Corded Hair Clippers for Men - Instruction Manual

Model: HC415BA

Introduction

Thank you for choosing the SUPRENT Corded Hair Clippers for Men. This 21-piece hair cutting kit is designed to provide a precise and efficient hair cutting experience with its durable stainless steel blades and powerful motor. This manual provides essential information for the safe and effective use, maintenance, and care of your new hair clipper kit.

Package Contents

Your SUPRENT Corded Hair Clippers kit includes the following items:

- 1x Hair Clipper
- 10x Guide Combs (1.5mm, 3mm, 6mm, 9mm, 12mm, 16mm, 20mm, Left Taper, Right Taper, Eyebrow Guide)
- 1x Apron
- 1x Cleaning Brush
- 1x User Manual
- 3x Hair Combs
- 1x Oil Bottle
- 1x Scissor
- 2x Hairpins
- 1x Storage Case



Image: The complete SUPRENT 21-piece Corded Hair Clipper Kit, showcasing the clipper, various guide combs, scissors, combs, and storage case.

Key Features

- **27 Cutting Lengths:** Achieve precise hair styling with 3 length control settings (0.9mm, 1.2mm, 1.5mm) and 10 guide combs (1.5mm, 3mm, 6mm, 9mm, 12mm, 16mm, 20mm, left ear, right ear, eyebrow guide).



Image: The SUPRENT hair clipper displayed with multiple guide combs, illustrating the range of cutting lengths available.

- **High-Hardness Stainless Steel Blade:** Features a wave-shaped, self-sharpening blade designed for long-term sharpness, wear resistance, and durability, ensuring a delicate hair style.



Image: A detailed view of the SUPRENT clipper's self-sharpening stainless steel blade, highlighting its R-shaped edge for safety and wear resistance.

- **9W High-Power Capacitor Motor:** Equipped with a powerful 9W motor that operates quietly with low vibration, providing sufficient power for efficient hair cutting and a comfortable experience.



Image: An exploded view diagram illustrating the powerful 9W heavy-duty motor, emphasizing high power and less trimming time.

- **Low Vibration and Low Noise Design:** Engineered for quiet operation and minimal vibration, making it suitable for family use, including children.

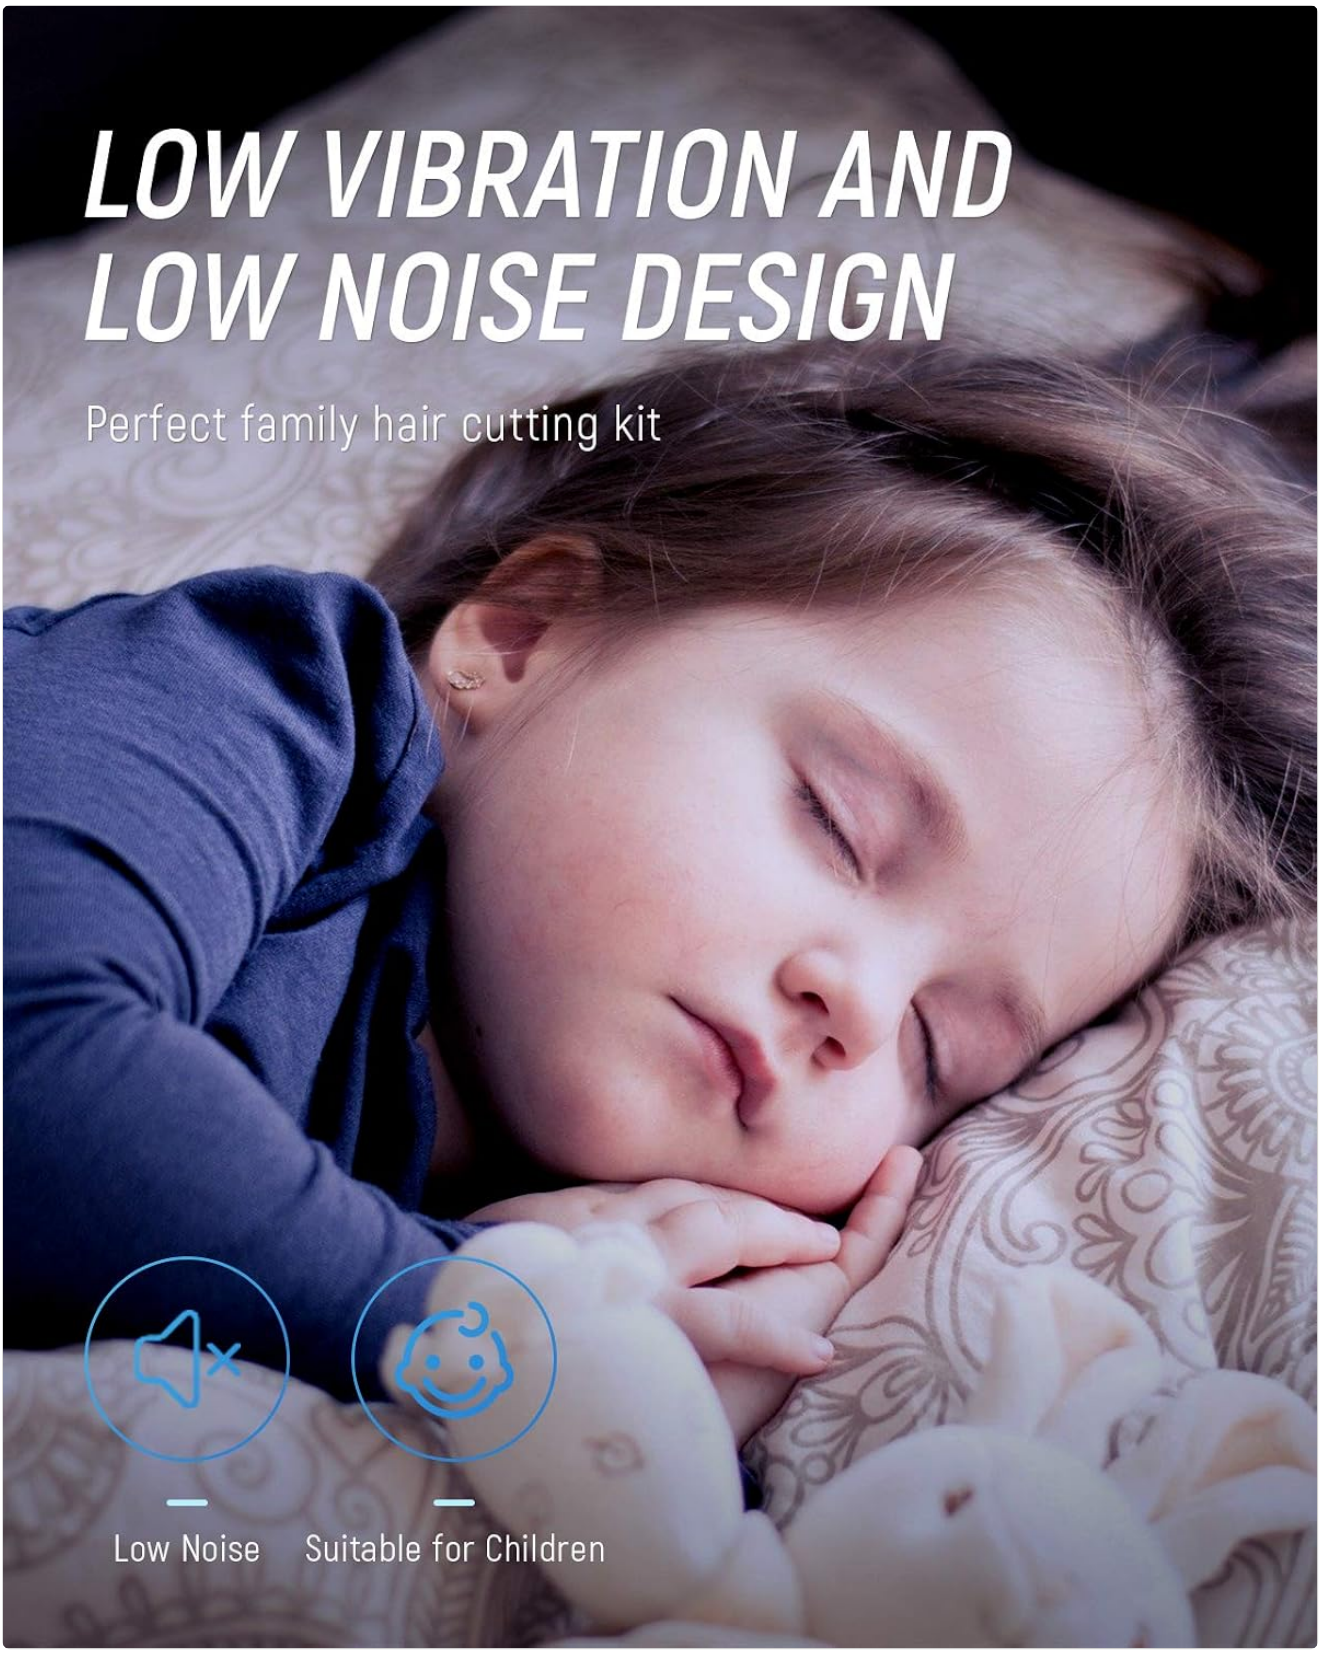


Image: A visual representation of the clipper's low noise and low vibration features, showing a sleeping child to convey its quiet operation.

- **Ergonomic Non-Slip Handle:** Designed with an ergonomic, non-slip grip for safe and comfortable handling during use.

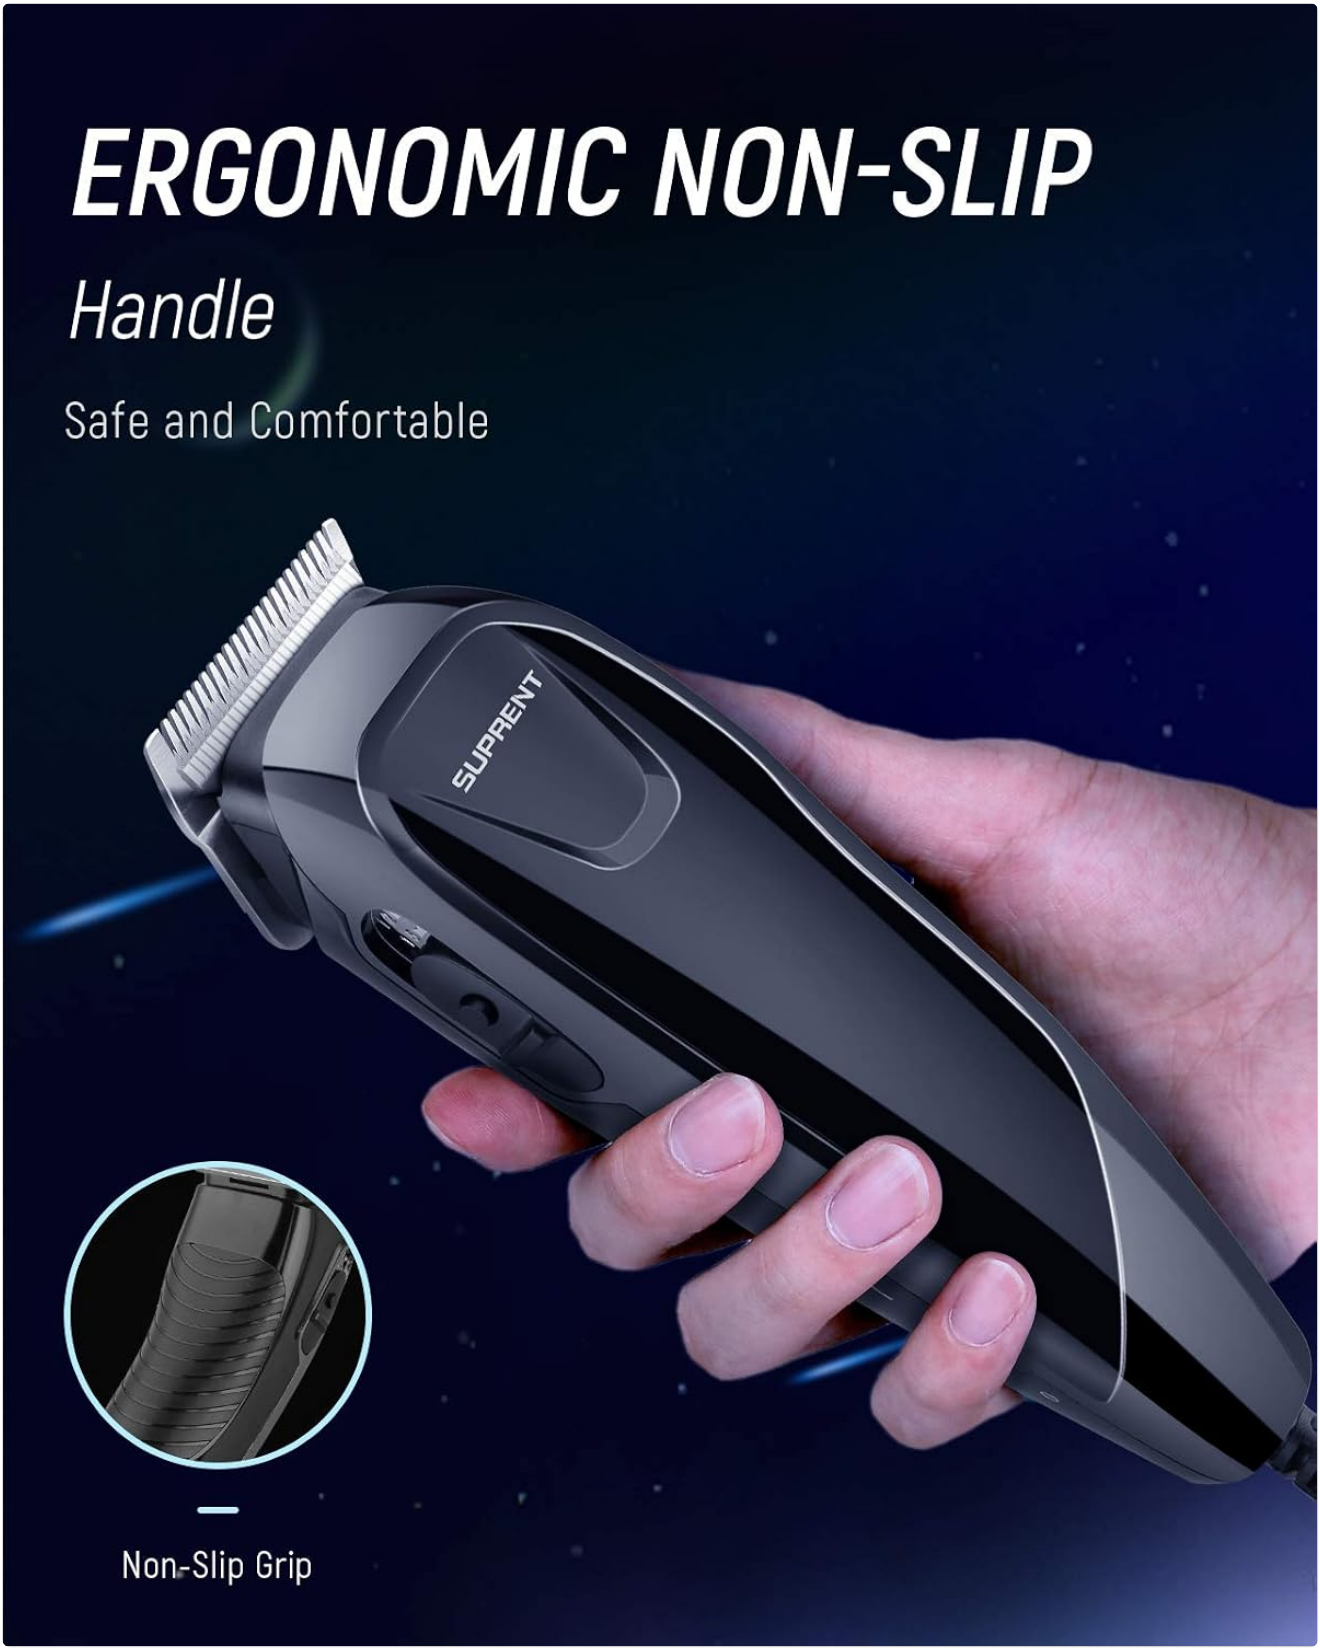


Image: A hand demonstrating the comfortable and secure grip of the SUPRENT hair clipper, emphasizing its ergonomic and non-slip design.

- **1.7M Length Corded Use:** The clipper is corded with a 1.7-meter long cable, providing consistent power for household use without the need for battery charging.



Image: The power cord of the SUPRENT hair clipper, showing its 1.7-meter length and indicating its suitability for worldwide voltage (100V-240V).

Setup

1. **Unpacking:** Carefully remove all items from the storage case. Ensure all listed package contents are present.
2. **Oiling the Blades:** Before first use, and regularly thereafter, apply a few drops of the provided oil to the clipper blades. Turn the clipper on for a few seconds to distribute the oil evenly. This ensures smooth operation and prolongs blade life.

3. **Attaching Guide Combs:** Select the desired guide comb for your preferred cutting length. Align the comb with the clipper blade and firmly push it until it clicks into place. To remove, gently pull the comb away from the blade.
4. **Power Connection:** Plug the clipper's power cord into a suitable electrical outlet (100V-240V). The clipper is designed for corded use, providing continuous power.

Operating Instructions

1. **Preparation:** Ensure hair is clean, dry, and free of tangles. Use one of the provided combs to detangle hair before cutting.
2. **Selecting Length:** Choose the appropriate guide comb for the desired hair length. The kit offers 27 different length settings using the 3 precise length controls and 10 guide combs.
3. **Starting the Clipper:** Turn on the clipper using the power switch.
4. **Cutting Hair:**
    - Hold the clipper with the blade teeth pointing upwards.
    - Begin cutting from the nape of the neck, moving upwards against the direction of hair growth.
    - Use smooth, overlapping strokes for an even cut.
    - For blending, utilize the left and right taper guide combs.
    - Use the scissors for precision cutting or trimming longer sections of hair.
5. **Finishing:** After achieving the desired style, turn off the clipper. Use the apron to catch cut hair and the cleaning brush to remove loose hairs from the clipper.

Your browser does not support the video tag.

Video: An official product video demonstrating the SUPRENT Hair Clippers (Model HC415BA) in use, showcasing its features and operation.

Maintenance

- **Cleaning Blades:** After each use, turn off and unplug the clipper. Use the provided cleaning brush to remove any trapped hair from the blades. For thorough cleaning, the blades can be detached (refer to the user manual for specific instructions).
- **Oiling Blades:** Regularly apply a few drops of the included oil to the blades to maintain their sharpness and ensure smooth operation. This should be done before or after each use, especially if the clipper feels like it's pulling hair.
- **Storage:** Store the clipper and all accessories in the provided storage case in a dry, cool place, away from direct sunlight and moisture.

Troubleshooting

If you encounter any issues with your SUPRENT Hair Clippers, please refer to the following common troubleshooting tips:

- **Clipper Pulling Hair:** This often indicates that the blades need oiling. Apply a few drops of clipper oil and run the clipper for a few seconds. Ensure blades are clean and free of hair.
- **Clipper Not Turning On:** Check if the power cord is securely plugged into both the clipper and the electrical outlet. Ensure the outlet is functional.
- **Excessive Noise/Vibration:** Ensure the blades are properly aligned and secured. Oiling the blades can also help reduce noise and vibration. If the issue persists, consult the full user manual.

Specifications

Feature	Detail
Brand	SUPRENT
Model	HC415BA
Power Source	Corded Electric
Special Feature	Self Sharpening Blades
Recommended Uses	Trimming
Color	Black
Package Dimensions	10.43 x 5.2 x 3.43 inches
Item Weight	1.41 Pounds

Safety Information

Please read and understand all safety warnings provided with the product before use. Keep the appliance away from water. Do not use near bathtubs, showers, basins, or other vessels containing water. Always unplug the appliance immediately after use and before cleaning. Do not use the appliance with a damaged cord or plug. Keep out of reach of children.

Warranty and Support

For any questions, concerns, or warranty information regarding your SUPRENT Hair Clippers, please refer to the detailed user manual included in your kit or visit the official SUPRENT website for customer support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B087BX4X6F

More documents and user manuals: **https://manuals.plus/**