Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HomeSpot HS3-NS003P-RB

HomeSpot Pro Switch Bluetooth Adapter User Manual

Model: HS3-NS003P-RB

Introduction

The HomeSpot Pro Switch Bluetooth Adapter is an innovative 2-in-1 audio mixer designed to enhance your gaming experience on the Nintendo Switch family of consoles. This adapter allows you to simultaneously connect your favorite Bluetooth headphones to both your Nintendo Switch and a smartphone or PC, enabling mixed audio from both sources. This means you can enjoy game audio while also listening to music, taking calls, or engaging in voice chat through applications like Discord, Spotify, or FaceTime.

Equipped with Bluetooth 5.0 and aptX Low Latency technology, the adapter ensures high-quality audio with minimal delay. Its built-in microphone provides a convenient solution for in-game voice chat or mobile communication, making it a versatile accessory for any Nintendo Switch user.

Product Features

- **2-in-1 Audio Mixer:** Connects Bluetooth headphones to Nintendo Switch and a smartphone simultaneously, mixing audio from both sources.
- **User Friendly Design:** Simple two-button operation with intuitive indicators for easy use.
- **Voice Chat Support:** Built-in microphone enables voice chat for all Nintendo Switch games, including those using Nintendo Online App or third-party apps like Discord.
- **Enhanced Game Play:** Allows for simultaneous game audio, phone calls, and music streaming from your smartphone.
- **Low Profile Design:** Compact and designed to seamlessly integrate with the Nintendo Switch and Switch Lite.
- **No Battery Needed:** Powered directly by the Nintendo Switch via its USB-C port.
- **aptX Low Latency:** Supports aptX Low Latency codec for synchronized audio and video.



Figure 1: Key Features Overview

Setup

1. **Connect the Adapter:** Insert the HomeSpot Pro Switch Bluetooth Adapter into the USB-C port of your Nintendo Switch. Ensure it is fully inserted.

   Note: The adapter is not compatible with most protective casings that prevent full insertion into the USB-C port.



Figure 2: Adapter Connected to Nintendo Switch



Figure 3: Compatibility Note for Protective Casings

2. **Pair Bluetooth Headphones:**
    - Put your Bluetooth headphones into pairing mode.
    - On the HomeSpot adapter, press and hold the **TX Button** (blue button on the left) for 3 seconds until the Headphones LED starts fast blinking.
    - Once paired, the Headphones LED will turn solid ON.
3. **Pair Smartphone/PC:**
    - Enable Bluetooth on your smartphone or PC and search for new devices.
    - On the HomeSpot adapter, press and hold the **RX Button** (red button on the right) for 3 seconds until the Smartphone LED starts fast blinking.
    - Select "HomeSpot Adapter Pro" from your device's Bluetooth list.
    - Once paired, the Smartphone LED will turn solid ON.



Figure 4: Audio Mixing Diagram

Operating Instructions

Button Functions:

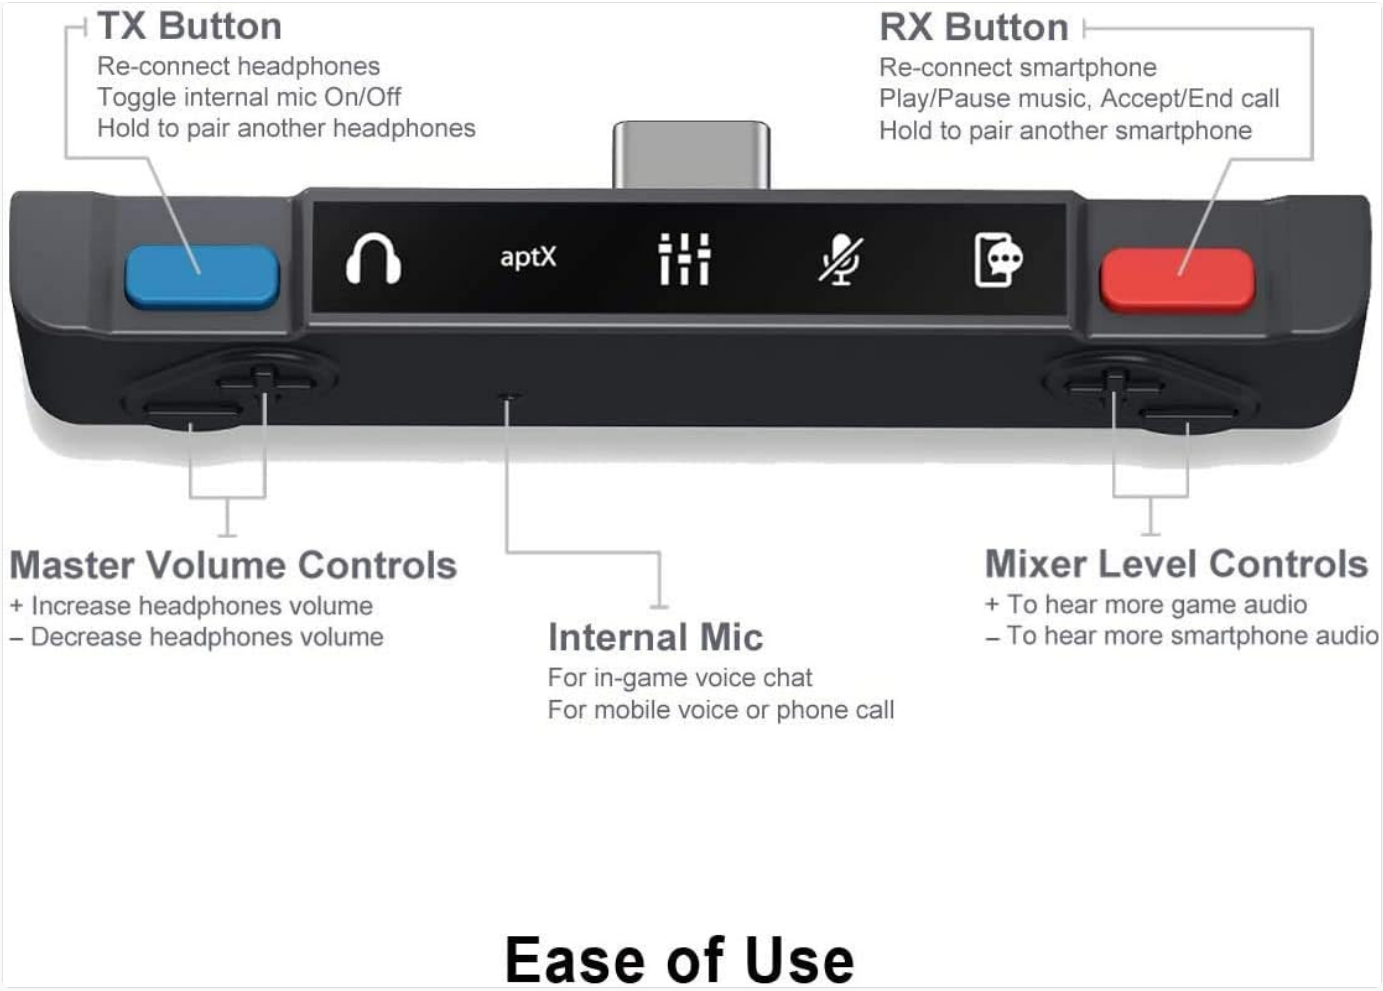


Figure 5: Ease of Use - Button Layout

- **TX Button (Blue, Left Side):**
  - Short press: Re-connect headphones.
  - Double press: Toggle internal mic On/Off.
  - Hold for 3 seconds: Pair new headphones.
- **RX Button (Red, Right Side):**
  - Short press: Re-connect smartphone.
  - Double press: Play/Pause music, Accept/End call (when connected to smartphone).
  - Hold for 3 seconds: Pair new smartphone.
- **Master Volume Controls (Left Side, under TX button):**
  - +: Increase headphones volume.
  - -: Decrease headphones volume.
- **Mixer Level Controls (Right Side, under RX button):**
  - +: Hear more game audio.
  - -: Hear more smartphone audio.
- **Internal Mic:** Used for in-game voice chat or mobile voice calls.

Indicator Lights (LEDs):

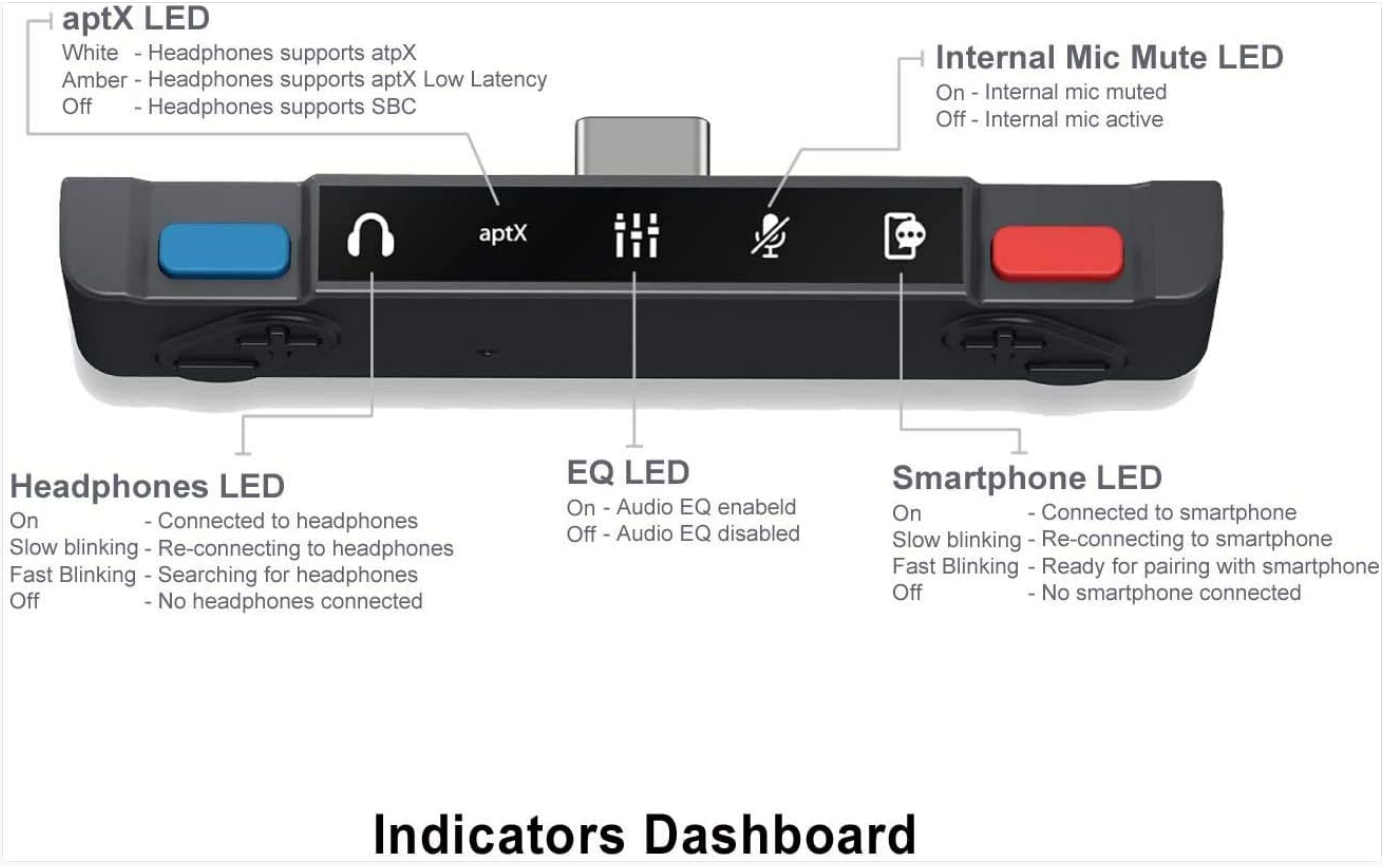


Figure 6: Indicators Dashboard

- **aptX LED:**
  - White: Headphones support aptX.
  - Amber: Headphones support aptX Low Latency.
  - Off: Headphones support SBC (Standard Bluetooth Codec).
- **Headphones LED:**
  - On: Connected to headphones.
  - Slow blinking: Re-connecting to headphones.
  - Fast blinking: Searching for headphones (pairing mode).
  - Off: No headphones connected.
- **EQ LED:**
  - On: Audio EQ enabled.
  - Off: Audio EQ disabled.
- **Internal Mic Mute LED:**
  - On: Internal mic muted.
  - Off: Internal mic active.
- **Smartphone LED:**
  - On: Connected to smartphone.
  - Slow blinking: Re-connecting to smartphone.
  - Fast blinking: Ready for pairing with smartphone.
  - Off: No smartphone connected.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the adapter. Do not use liquid cleaners or aerosols.
- **Storage:** Store the adapter in a cool, dry place when not in use. The included pouch can be used for protection.
- **Handling:** Avoid dropping the adapter or subjecting it to strong impacts. Ensure careful insertion and removal from the USB-C port to prevent damage to the adapter or the console.

Troubleshooting

Problem	Possible Cause / Solution
No audio from headphones.	◦ Ensure headphones are paired and connected (Headphones LED solid ON). ◦ Check headphone volume and adapter's Master Volume Controls. ◦ Verify the adapter is fully inserted into the Switch's USB-C port.
Audio lag or delay.	◦ Ensure your Bluetooth headphones support aptX Low Latency (aptX LED Amber). If not, some latency may be unavoidable. ◦ Reduce distance between adapter and headphones. ◦ Minimize interference from other wireless devices.
Cannot pair headphones/smartphone.	◦ Ensure the adapter is in pairing mode (LED fast blinking for respective device). ◦ Put your headphones/smartphone into pairing mode. ◦ Try resetting the adapter by unplugging and re-plugging it. ◦ Clear previous pairings on your headphones/smartphone and try again.
Voice chat not working.	◦ Ensure the internal mic is not muted (Internal Mic Mute LED Off). Double press TX button to toggle. ◦ Check in-game or app settings for microphone input. ◦ Verify smartphone is connected (Smartphone LED solid ON).
Adapter does not fit or is loose.	◦ Remove any protective casing from your Nintendo Switch that might obstruct the USB-C port. ◦ Ensure the adapter is inserted correctly and fully.

Specifications

- **Model Number:** HS3-NS003P-RB
- **Product Dimensions:** 2.76 x 0.39 x 0.59 inches (70 x 10 x 15 mm)
- **Item Weight:** 0.247 ounces (7 grams)
- **Connectivity:** USB Type-C (for Nintendo Switch), Bluetooth 5.0 (for headphones/smartphone)

- **Supported Bluetooth Profiles:** A2DP, HFP, HSP, AVRCP
- **Supported Audio Codecs:** aptX Low Latency, aptX, SBC
- **Microphone:** Built-in digital mic
- **Power Source:** Powered by Nintendo Switch (no external battery required)
- **Color:** Blue & Red accents



Figure 7: Adapter Dimensions and Design

Warranty and Support

HomeSpot products are designed for reliability and performance. For warranty information and technical support, please refer to the official HomeSpot website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

For additional assistance, you may also refer to the official user manual PDF available online:

Download Official User Manual (PDF)

© 2024 HomeSpot. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B087Q1QPT8

More documents and user manuals: **https://manuals.plus/**