Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Thinlerain HD1303

Thinlerain 13.3 inch PC Monitor User Manual

Model: HD1303 | Brand: Thinlerain

1. Overview

This manual provides detailed instructions for the Thinlerain 13.3 inch PC Monitor, designed for versatile use with various devices such as PCs, laptops, gaming consoles, and Raspberry Pi. It features a 1366x768 resolution, multiple input options, and built-in speakers, making it an ideal compact display solution.



Image 1.1: Front view of the Thinlerain 13.3 inch PC Monitor.

2. Package Contents

Please verify that all items listed below are included in your package:

- 13.3 inch LED Monitor
- Mount Stand
- Operating Instruction Manual
- Double-sided Adhesive
- DC Power Supply Adapter
- HDMI Cable
- Remote Control



Image 2.1: All components included in the product package.

3. Setup

3.1 Stand Installation

Follow these steps to assemble and attach the monitor stand:



Image 3.1: Step-by-step guide for assembling and attaching the monitor stand.

1. Unpack the stand components.
2. Assemble the base and neck of the stand.
3. Secure the stand to the monitor using the provided screws.
4. Ensure the monitor is stable on the stand.

3.2 Connecting Devices

The monitor supports multiple input types. Identify the correct port for your device:

- **HDMI:** For high-definition digital video and audio. Connect to laptops, mini PCs, gaming consoles, or Fire Sticks.
- **VGA:** For analog video input from older computers.

- **AV (RCA):** For composite video and stereo audio input.
- **BNC:** For professional video equipment, commonly used in security systems.
- **USB:** For multimedia playback from USB storage devices.
- **DC Power:** Connect the provided power adapter here.

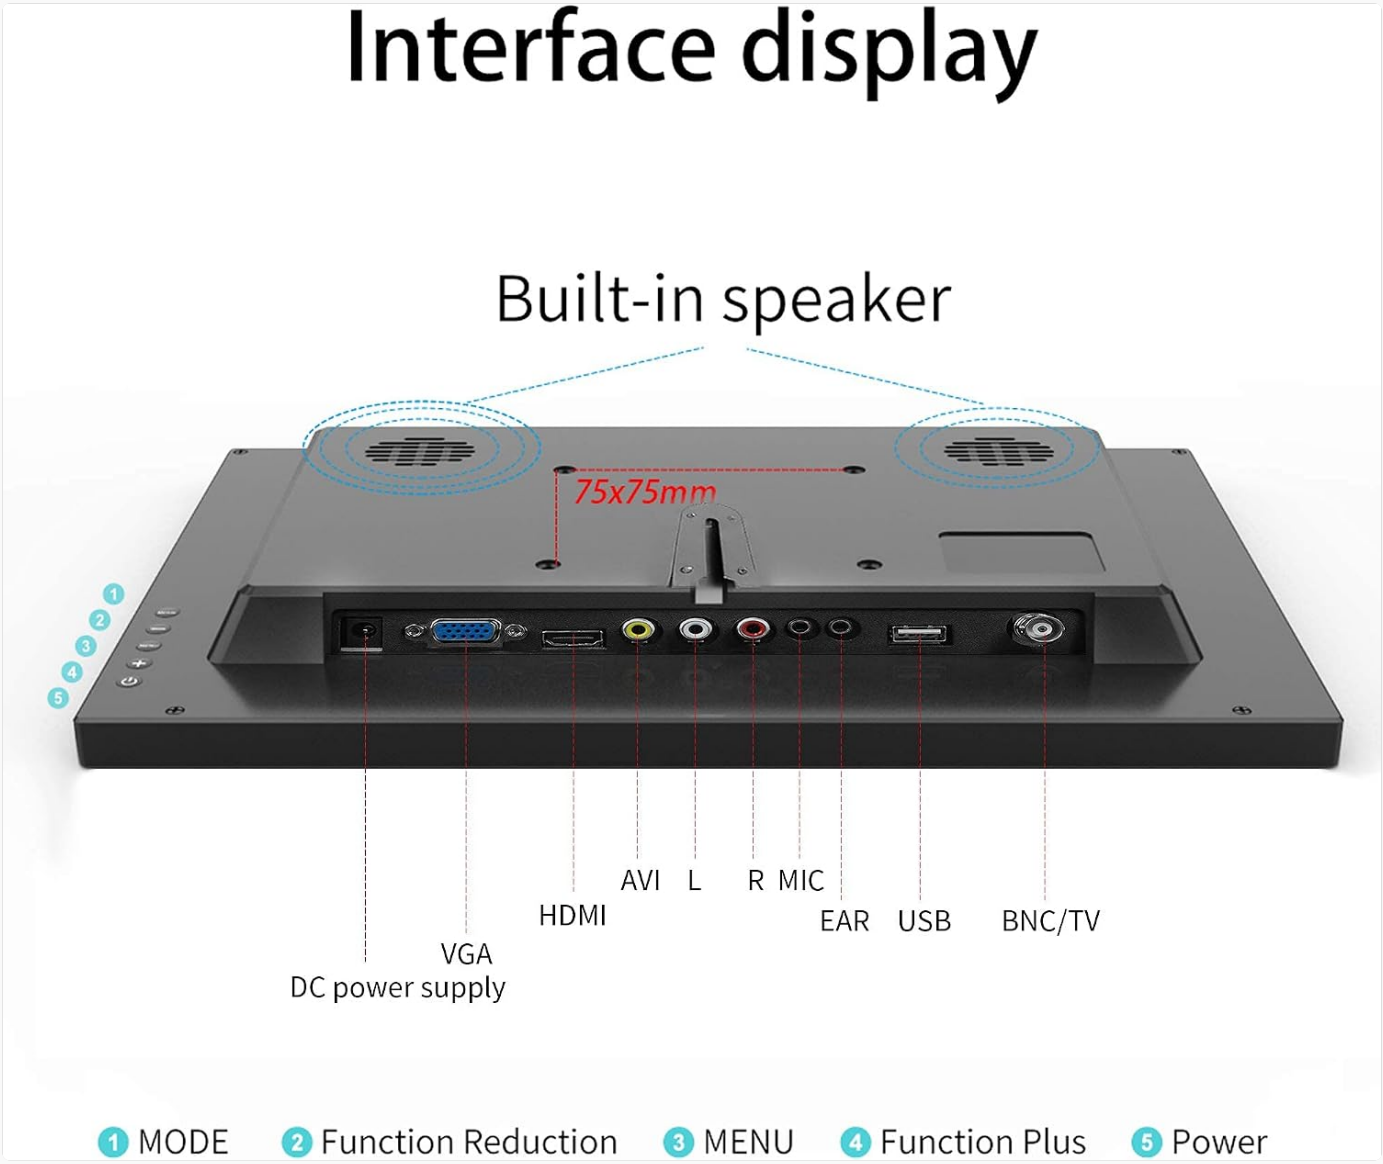


Image 3.2: Rear view of the monitor showing various input ports and control buttons.

After connecting your device, ensure the power adapter is securely plugged into the monitor and a power outlet.

4. Operating Instructions

4.1 Basic Operation

- **Power On/Off:** Press the power button on the monitor or the remote control to turn the monitor on or off.
- **Menu Navigation:** Use the 'MENU' button to access the on-screen display (OSD) menu. Use the 'Function Plus' and 'Function Reduction' buttons (or arrow keys on the remote) to navigate through options and adjust settings.
- **Input Selection:** Press the 'MODE' button (or 'Source' button on the remote) to cycle through available input sources (HDMI, VGA, AV, BNC, USB).

4.2 Audio

The monitor features built-in dual speakers for audio output. Volume can be adjusted via the OSD menu or the remote control. Ensure your connected device's audio output is routed to the monitor.

5. Key Features

- **High Resolution Display:** 13.3 inch screen with 1366x768 resolution and 16:9 aspect ratio for clear and detailed images.
- **Wide Viewing Angle:** TFT panel offers a wide viewing angle of 95 degrees horizontally and 100 degrees vertically, ensuring consistent image clarity from various positions.
- **Multiple Inputs:** Equipped with HDMI, VGA, AV, BNC, and USB inputs for broad compatibility.
- **Built-in Speakers:** Integrated dual speakers provide convenient audio without external devices.
- **VESA Mount Compatible:** Features 75mm x 75mm VESA mounting holes for flexible installation options.

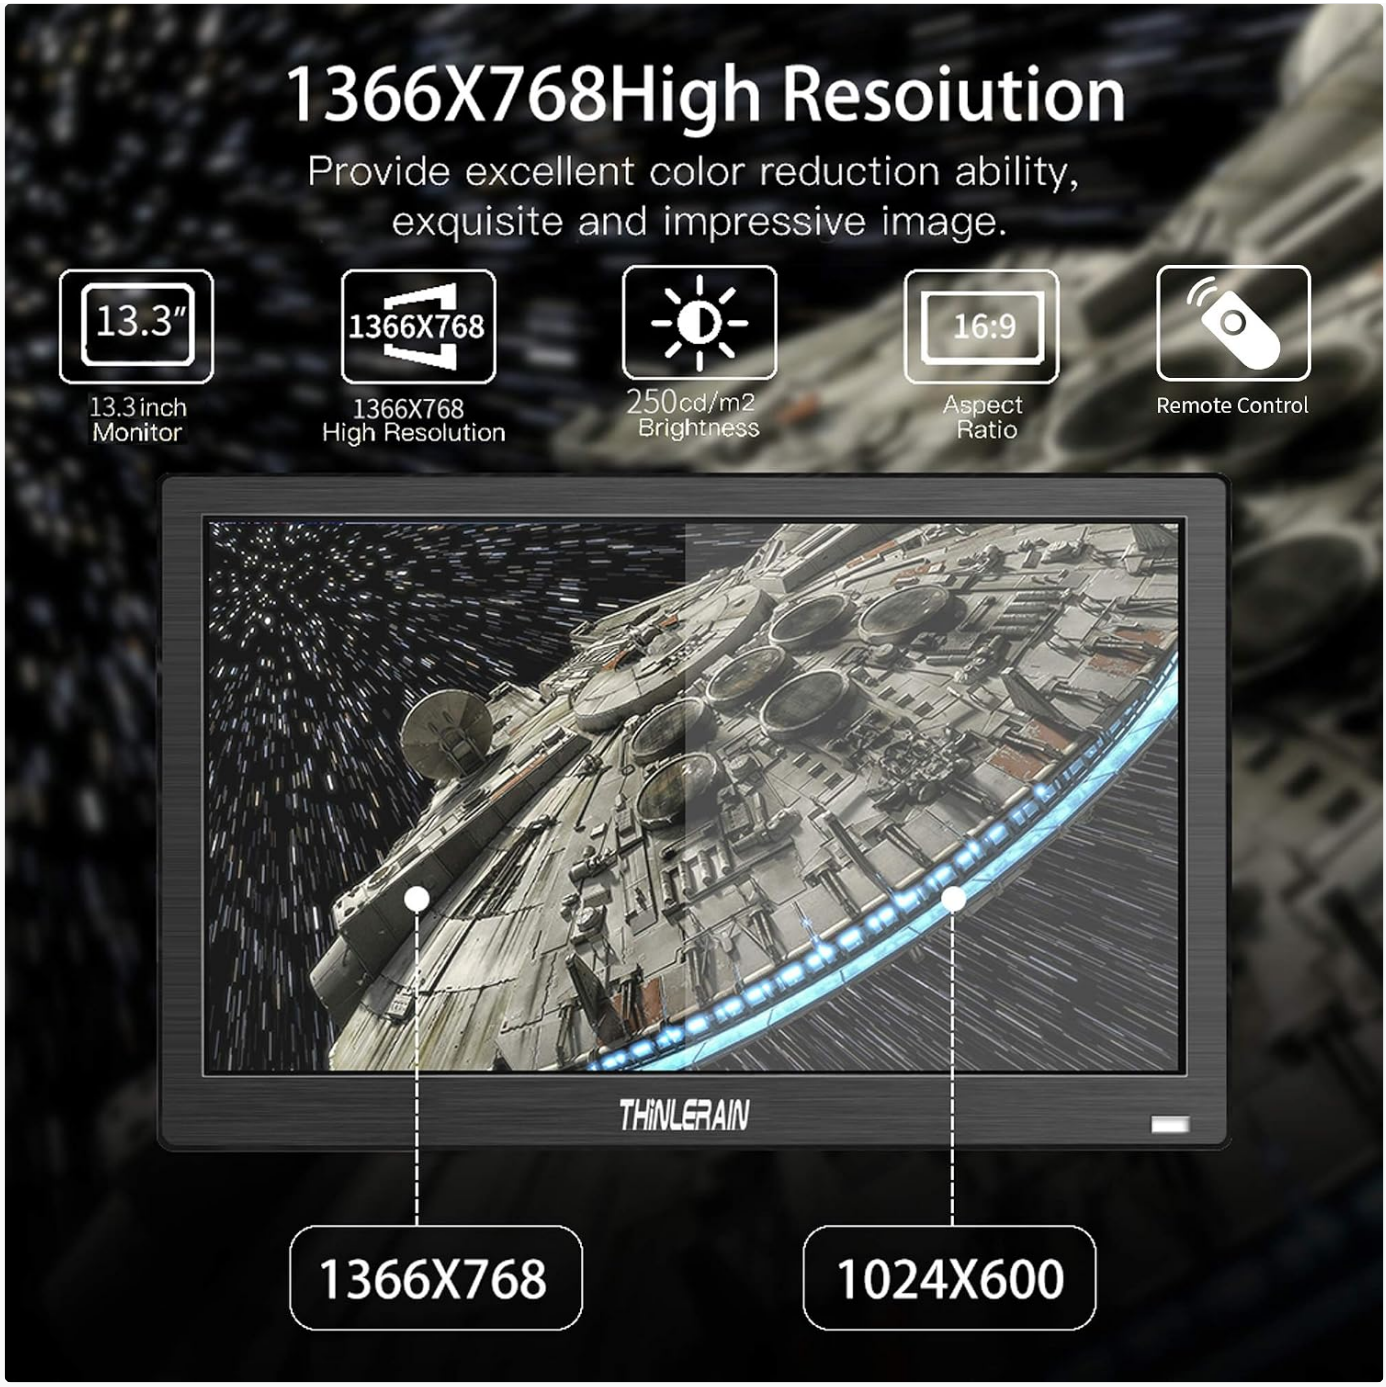


Image 5.1: Illustrates the 1366x768 high resolution and 250 cd/m² brightness.

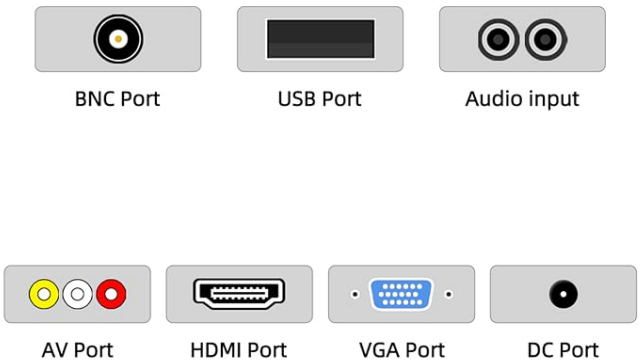


Image 5.2: Demonstrates the 95-degree wide viewing angles of the monitor.

6. Maintenance

To ensure the longevity and optimal performance of your monitor, follow these maintenance guidelines:

- **Cleaning the Screen:** Use a soft, lint-free cloth slightly dampened with water or a non-abrasive screen cleaner. Do not spray liquid directly onto the screen.
- **Cleaning the Casing:** Wipe the monitor casing with a soft, dry cloth. Avoid using strong detergents or solvents.
- **Ventilation:** Ensure the ventilation openings on the monitor are not blocked to prevent overheating.
- **Storage:** When not in use for extended periods, store the monitor in a cool, dry place away from direct sunlight and extreme temperatures.

7. Troubleshooting

If you encounter issues with your monitor, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
No image on screen	Power cable disconnected; Incorrect input source; Device not powered on.	Check power connections; Select correct input source using 'MODE' button; Ensure connected device is on.
No sound from speakers	Volume too low; Muted; Incorrect audio output setting on device.	Increase volume; Unmute; Check audio settings on connected device.
Image is distorted or blurry	Incorrect resolution; Loose cable connection.	Set device resolution to 1366x768; Reconnect video cable securely.
Remote control not working	Dead batteries; Obstruction between remote and monitor.	Replace batteries; Remove any obstructions.

8. Specifications

Feature	Specification
Screen Size	13.3 Inches

Feature	Specification
Resolution	1366 x 768 Pixels (XGA Wide)
Aspect Ratio	16:9
Image Brightness	250 Candela
Panel Type	TFT Panel
Viewing Angle	95 degrees (Horizontal), 100 degrees (Vertical)
Inputs	HDMI, VGA, AV, BNC, USB
Audio	Built-in Dual Speakers
VESA Mount	75mm x 75mm
Product Dimensions	1.5 x 12.79 x 9 inches
Item Weight	3.01 pounds
Power Input	12 Volts DC
Screen Surface	Glossy

9. Warranty and Support

Thinlerain provides **24-month customer service** for this product. If you encounter any issues or have questions regarding the monitor, please contact Thinlerain customer support through the retailer's platform or the official Thinlerain website for assistance.
For the most up-to-date support information, please visit theThinlerain Store on Amazon.

© 2024 Thinlerain. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B087RC8B79

More documents and user manuals: **https://manuals.plus/**