Beurer BY52

Beurer BY52 Baby Bottle Warmer & Food Warmer User Manual

Model: BY52
Brand: Beurer

Introduction

The Beurer BY52 Baby Bottle Warmer & Food Warmer is designed to gently and efficiently heat breast milk, formula, and baby food jars. This 2-in-1 device also features a keep-warm function, ensuring your baby's meal is always at the ideal temperature. Its precise heating method helps preserve the essential nutrients in food, providing a healthy and convenient feeding solution for parents.
Key features include an illuminated LED display for temperature, an optical signal, an indicator lamp, and an integrated automatic shut-off for safety. The BY52 is compatible with various bottle types and sizes, including wide, narrow, and angled bottles, as well as standard baby food jars.

Important Safety Information

Please read all instructions carefully before using the Beurer BY52. Retain this manual for future reference.

- Always ensure the device is placed on a stable, level, and heat-resistant surface.
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children.
- Always check the temperature of the food or milk before feeding your baby.
- The device features an integrated automatic shut-off function for safety.
- Only use the provided accessories or genuine Beurer replacement parts.
- Unplug the device from the power outlet when not in use and before cleaning.

Setup and First Use

Before initial use, ensure all packaging materials are removed. Clean all removable parts as described in the "Maintenance" section.

1. Unpack the Beurer BY52 unit and its accessories.
2. Place the warmer on a flat, stable surface near a power outlet.

3. Wash the lifter and any other removable accessories thoroughly with warm soapy water or place them in the dishwasher. Rinse and dry completely.
4. Ensure the main unit is clean and dry before plugging it in.



Image: The Beurer BY52 bottle warmer shown with its removable, dishwasher-safe accessories, including the lifter and a measuring cup. These parts are designed for easy cleaning and hygiene.

Operating Instructions

The Beurer BY52 offers a simple 3-step process for warming and keeping food warm.

1. **Prepare the Bottle/Jar:** Place the baby bottle or food jar into the warmer. Use the included lifter to easily insert and remove jars. The warmer is designed to accommodate various bottle types, including wide, narrow, and angled designs.



Image: A user's hands carefully placing a baby bottle into the Beurer BY52 warmer, demonstrating its ease of use for both bottles and food jars.



Image: The Beurer BY52 warmer shown with a bottle, highlighting its compatibility with a wide range of bottle and jar sizes and shapes.

2. **Add Water:** Fill the water reservoir with the appropriate amount of water. Refer to the markings inside the warmer or the instruction manual for precise water levels based on the bottle/jar size and desired warming time.
3. **Select Temperature:** Plug in the device. Use the control panel to select your desired temperature setting. The illuminated LED display will show the current temperature. An optical signal and indicator lamp will provide visual feedback during the warming process.



Image: A detailed view of the Beurer BY52's digital temperature display, showing the clear red LED numbers indicating the set or current temperature.

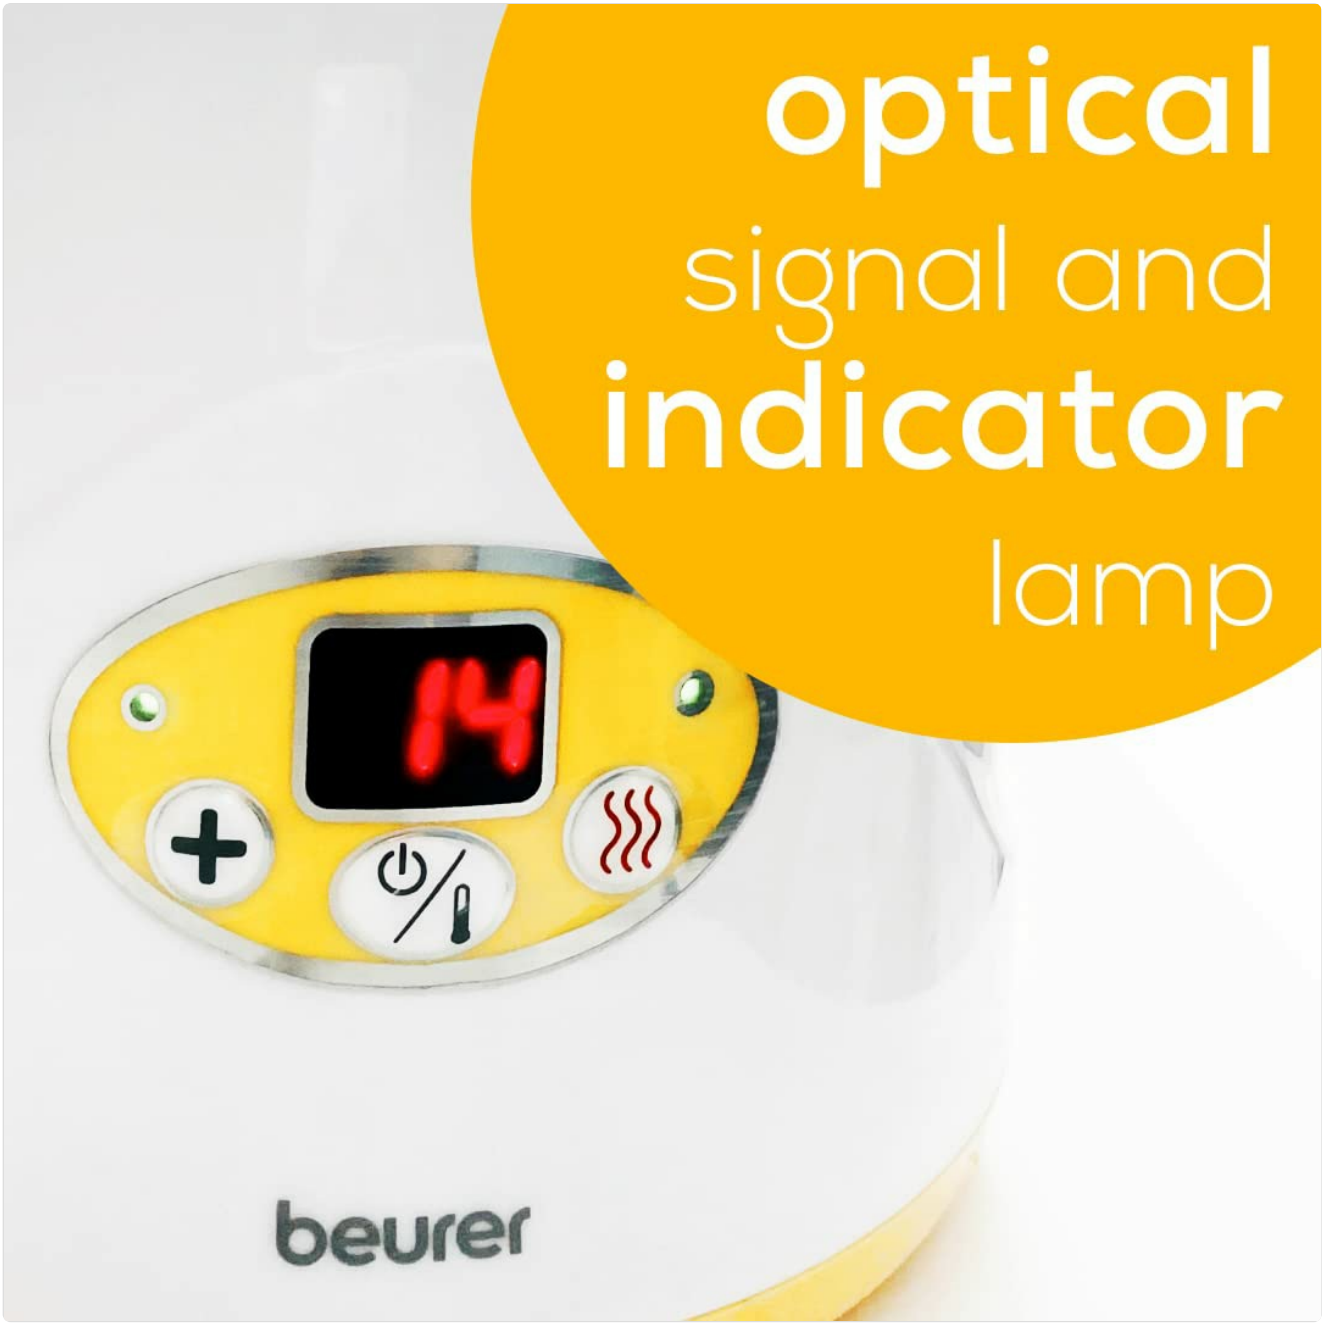


Image: A close-up of the control panel, highlighting the optical signal and indicator lamps that provide visual cues during operation.

4. **Warming Process:** The device will begin heating. Warming times can vary from 3 to 18 minutes depending on the initial temperature and volume of the contents.
5. **Keep Warm Function:** Once the desired temperature is reached, the BY52 can maintain the temperature between 95°F and 185°F (35°C and 85°C) using its 2-in-1 keep-warm function.
6. **Automatic Shut-off:** For safety, the device will automatically switch off once the warming cycle is complete or if the water level is too low.



Image: The Beurer BY52 warmer in operation, illustrating the automatic switch-off feature that enhances safety and prevents overheating.

7. **Remove Bottle/Jar:** Carefully remove the bottle or jar using the lifter. Always check the temperature of the milk or food before feeding your baby to prevent burns.



Image: A hand demonstrating the use of the integrated lifter to safely remove a warm bottle from the Beurer BY52 warmer.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and hygiene of your Beurer BY52.

- Always unplug the device and allow it to cool completely before cleaning.
- The lifter and other removable accessories are dishwasher-safe. Alternatively, wash them with warm soapy water, rinse thoroughly, and dry.
- Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- To descale the heating element, use a descaling solution suitable for kitchen appliances or a mixture of water and white vinegar. Follow the descaling product's instructions or run a cycle with the vinegar solution, then rinse thoroughly. Descale regularly to prevent mineral buildup, especially in areas with hard water.
- Ensure all parts are completely dry before storing or next use.

Troubleshooting

If you encounter issues with your Beurer BY52, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Not plugged in; power outlet issue; automatic shut-off activated.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the device recently completed a cycle, allow it to cool before attempting to restart.
Milk/food not warming sufficiently.	Insufficient water; incorrect temperature setting; mineral buildup on heating element.	Ensure adequate water level. Verify the temperature setting on the LED display. Descale the unit if mineral buildup is visible.
Warming takes too long.	Too much water; very cold starting temperature of contents; mineral buildup.	Adjust water level according to instructions. Allow more time for very cold contents. Descale the unit.
Water leaks from the unit.	Overfilled water reservoir; unit not on a level surface.	Do not overfill the water reservoir. Ensure the unit is placed on a flat, stable surface.

Specifications

Feature	Detail
Model Number	BY52
Product Dimensions	5.7 x 5.7 x 5.5 inches
Item Weight	1.26 pounds
Style	Bottle & Food Warmer
Dishwasher Safe Accessories	Yes
Bottle Compatibility	All common baby bottle brands and styles (wide, narrow, angled) and commercially available baby food jars.
Temperature Range (Keep Warm)	95°F to 185°F (35°C to 85°C)
Display Type	LED Digital Display
Safety Features	Automatic Shut-off



Image: A visual representation of the Beurer BY52's dimensions, showing its compact size of 5.7 inches in width and 5.5 inches in height.

Warranty and Support

Beurer products are manufactured with high quality standards. For information regarding warranty coverage and terms, please refer to the warranty card included with your product or visit the official Beurer website. In case of any issues or for technical support, please contact Beurer customer service.

For the most up-to-date contact information and support resources, please visit the official Beurer website or refer to the contact details provided in your product packaging.

© 2023 Beurer GmbH. All rights reserved.
This manual is for informational purposes only and is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question