xinxinwuliankeji B08883GPTC

xinxinwuliankeji 2.4L Ultra Quiet Pet Water Fountain User Manual

Model: B08883GPTC

Introduction

Thank you for choosing the xinxinwuliankeji 2.4L Ultra Quiet Pet Water Fountain. This automatic pet drinking dispenser is designed to provide fresh, filtered water for your cats and dogs, promoting hydration and health. This manual provides essential information for the proper setup, operation, and maintenance of your new pet fountain.

Product Components

Familiarize yourself with the components of your pet water fountain before assembly.

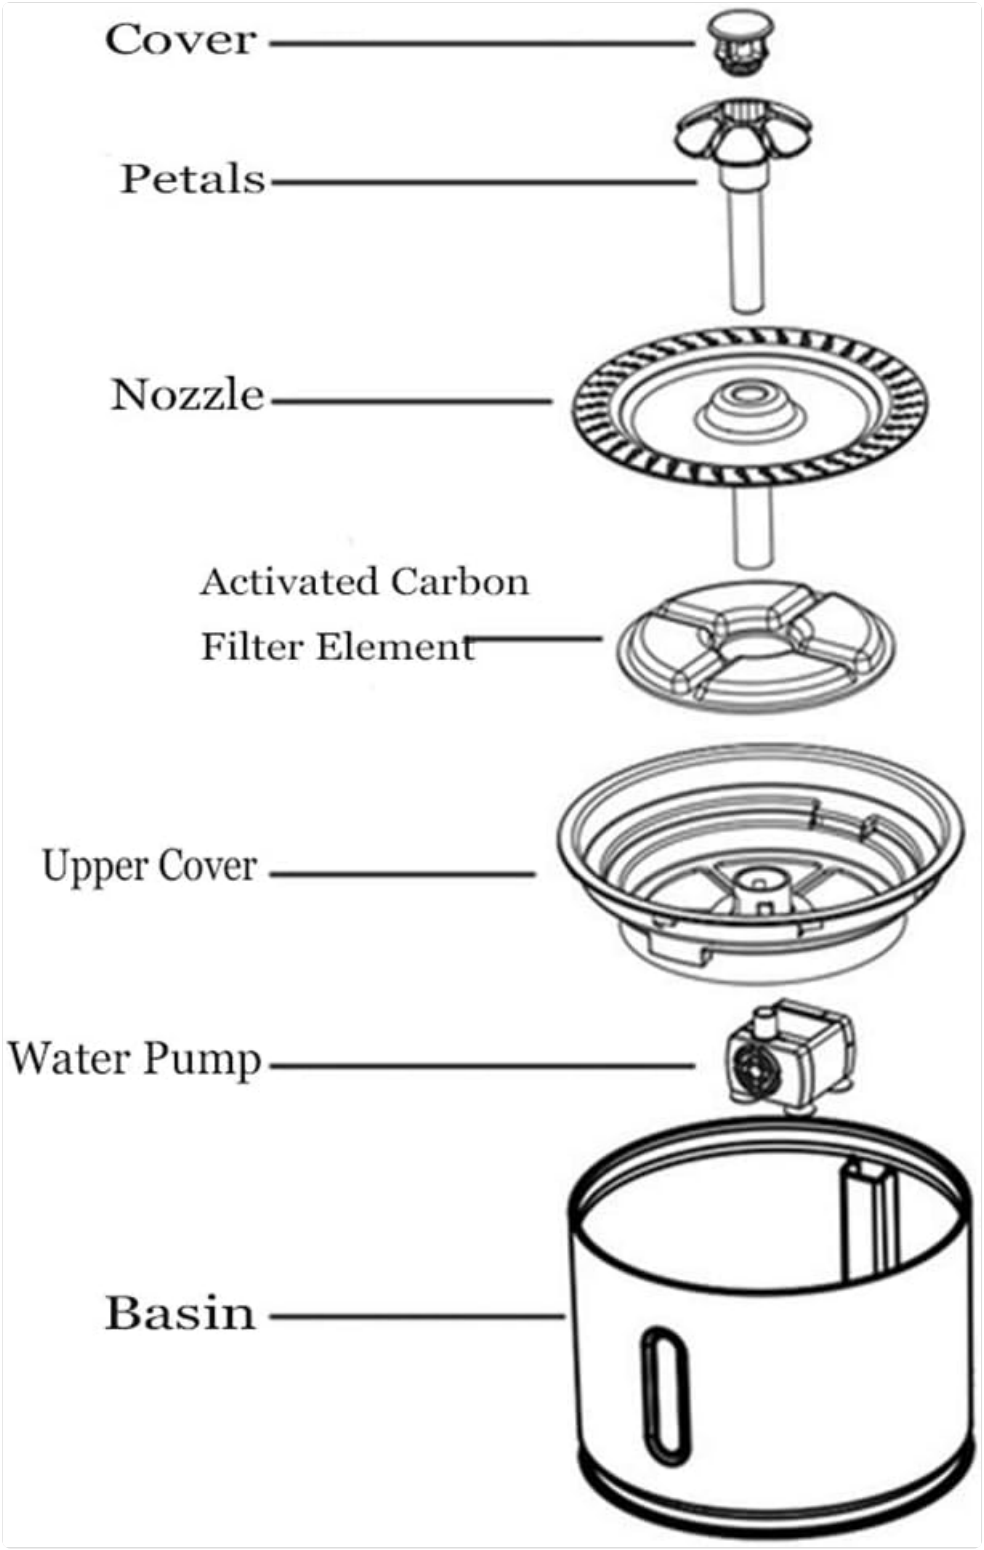


Image: Exploded View of Components. This diagram illustrates the individual parts of the pet water fountain: the main basin, water pump, upper cover, activated carbon filter element, nozzle, decorative petals, and the top cover. Understanding these parts is crucial for assembly and maintenance.

- **Basin:** The main water reservoir.
- **Water Pump:** Circulates water through the fountain.
- **Upper Cover:** Sits above the pump and filter.
- **Activated Carbon Filter Element:** Filters impurities from the water.
- **Nozzle:** Directs water flow.
- **Petals:** Decorative element for certain water flow modes.
- **Cover:** Top-most part of the fountain.

SPECIFICATIONS

Type	Water Fountain
Brand	xinxinwuliankeji
Model (ASIN)	B08883GPTC
UPC	782932668922
Material	PP plastic
Color	White and Blue
Water Capacity	2.4 liters (80 oz)
Input Voltage	5V, 1A
Power Consumption	1.5W
Waterproof Rating	IP68
Cable Length	1.6M / 5.2ft
Product Dimensions (L*W*H)	approx. 18.6cm x 18.6cm x 13.1cm (7.3" x 7.3" x 5.1")
Net Weight	697g / 24.6oz
Manufacturer	xinxinwuliankeji

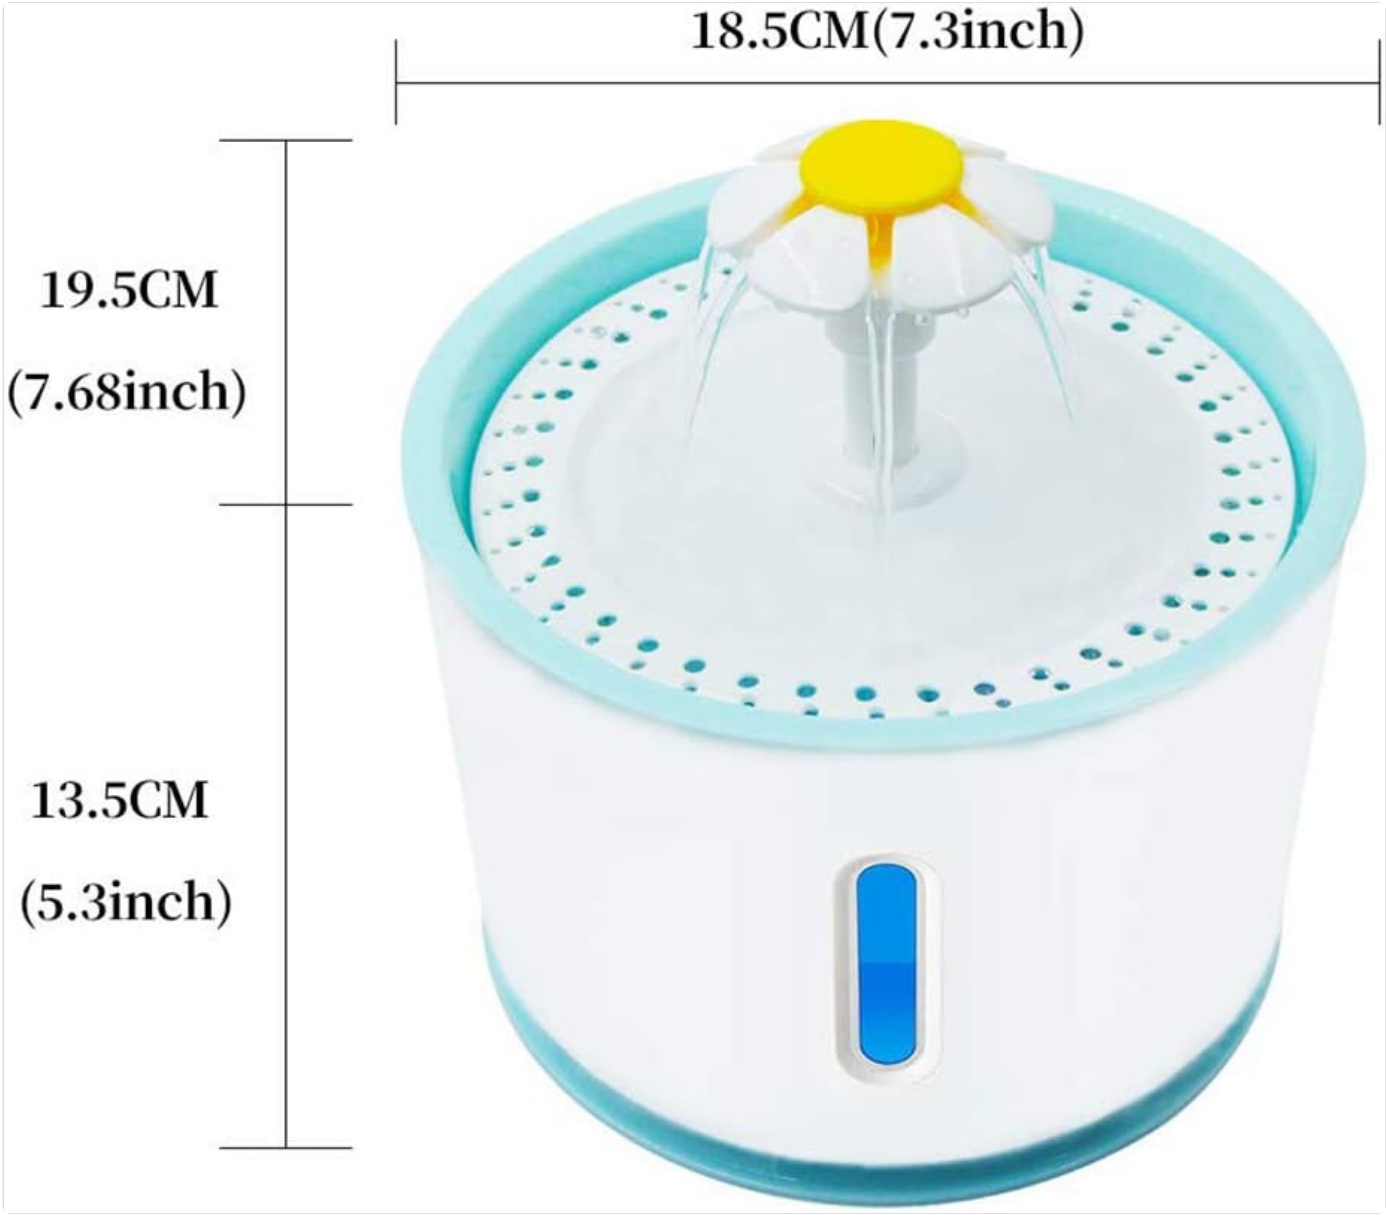


Image: Product Dimensions. This image provides a visual representation of the fountain's dimensions, indicating a width of 18.5cm (7.3 inches) and a total height of 19.5cm (7.68 inches), with the basin height being 13.5cm (5.3 inches).

Setup Instructions

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure you have the basin, water pump, upper cover, activated carbon filter, nozzle, petals, and top cover.
2. **Rinse Components:** Rinse all parts (except the pump) with clean water before first use.
3. **Install Pump:** Place the water pump into the designated area at the bottom of the basin. Ensure the power cord is routed through the groove to prevent pinching.
4. **Place Filter:** Insert the activated carbon filter element into the upper cover. Ensure it is seated correctly. (Note: The charcoal filter should be changed every 2 to 4 weeks.)
5. **Assemble Top Section:** Place the upper cover with the filter onto the basin, aligning it properly. Then, attach the nozzle and petals (if desired for a specific water flow mode) and finally the top cover.
6. **Fill with Water:** Fill the basin with clean water up to the maximum fill line. The fountain has a 2.4-liter capacity.
7. **Connect Power:** Plug the power adapter into a standard electrical outlet.

Operating Instructions

Once assembled and filled, the fountain is ready for operation.

- **Power On:** The fountain will begin operating once plugged in. The pump will circulate water continuously.
- **Water Flow Modes:** The fountain offers 3 modes of water sprays. You can adjust the nozzle and petal configuration to achieve different flow styles:



Image: Water Flow Modes. This image illustrates the three available water flow modes: 1) Waterfall, suitable for long-haired pets; 2) Bubbling, preferred by gentle pets and birds; and 3) Gently fountain, ideal for pets that drink a lot of water.

- **Circulating Water:** The 360° multi-directional streams aerate the water for added oxygen and freshness, providing clean drinking water.



Image: Circulating Water. This image shows the circulating flow of water within the fountain, highlighting the oxygenation process that keeps the water fresh for pets.

- **LED Water Level Window:** The fountain features an LED indicator:
    - **Blue Light:** Indicates sufficient water level.
    - **Red Light:** Reminds you to add water.
- **Automatic Shut-off:** If the water level becomes too low, the fountain will automatically power off to prevent pump damage. Refill the water to resume operation.



Image: Pet Using Fountain. This image shows a cat comfortably drinking from the pet water fountain, demonstrating its intended use in a typical home environment.

Maintenance

Regular maintenance ensures the longevity and hygienic operation of your pet fountain.

- **Clean Fountain:** The entire fountain should be cleaned at least every 2 weeks. Disassemble all parts and wash them with mild soap and water. Rinse thoroughly.
- **Filter Replacement:** The activated charcoal filter should be changed every 2 to 4 weeks, or more frequently if you have multiple pets or notice reduced water flow/quality.

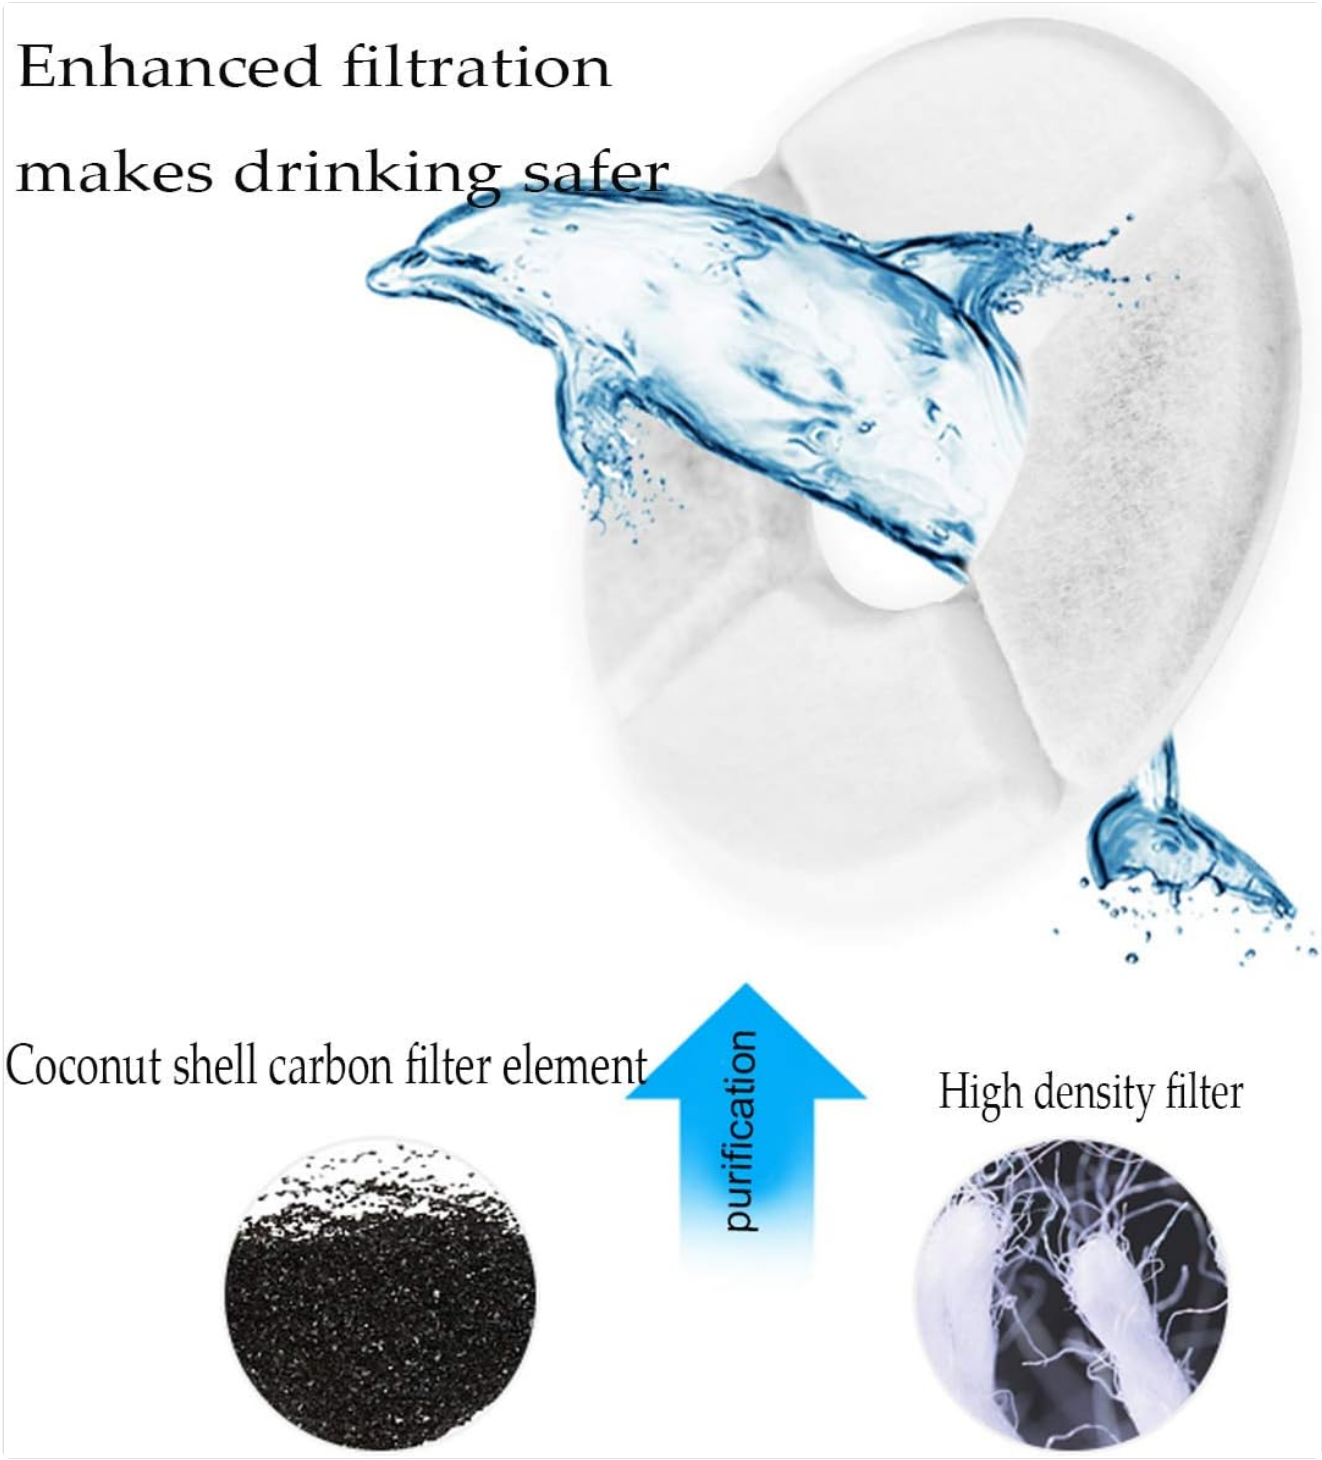


Image: Filtration System. This image highlights the enhanced filtration system, featuring a coconut shell carbon filter element for purification and a high-density filter to remove impurities, ensuring safer drinking water for pets.

- **Pump Cleaning:** Periodically clean the water pump to prevent mineral buildup and ensure quiet operation. Refer to the pump's specific instructions for detailed cleaning steps.
- **Water Refill:** Always ensure the water level is adequate. The LED indicator will turn red when water needs to be added.

Troubleshooting

Problem	Possible Cause	Solution
Fountain not working / No water flow	• Power adapter unplugged or faulty. • Water level too low (red LED). • Pump clogged or dirty.	• Check power connection. • Refill water to the appropriate level. • Clean the pump thoroughly.

Problem	Possible Cause	Solution
Excessive noise from pump	• Low water level. • Pump is dirty or has debris. • Pump not properly seated.	• Add water. • Clean the pump and impeller. • Ensure pump is securely placed in the basin.
Water quality appears poor	• Filter needs replacement. • Fountain needs cleaning.	• Replace the activated carbon filter. • Clean all fountain components thoroughly.

Safety Information

- For indoor use only.
- Do not allow pets to chew on the power cord.
- Always unplug the fountain before cleaning or performing maintenance.
- Keep the power adapter and plug dry.
- Do not operate the fountain without water.
- Ensure the fountain is placed on a stable, level surface.

Warranty and Support

If you encounter any issues or have questions regarding your xinxinwuliankeji pet water fountain, please contact customer support. We are committed to providing the best solution within 24 hours, including refunds or returns for any quality problems.
Contact information is typically provided with your purchase or on the manufacturer's website.

© 2024 xinxinwuliankeji. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question