Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

REACHER K2-Pro

REACHER Small Dual Alarm Clock with FM Radio User Manual

Model: K2-Pro

Product Overview

The REACHER K2-Pro Dual Alarm Clock is a versatile bedside device combining a digital alarm clock with an FM radio, dual USB charging ports, and a thermometer. It features a dimmable LED display and multiple alarm sound options, designed for ease of use in bedrooms and living spaces.



Image: Front view of the REACHER K2-Pro Dual Alarm Clock, displaying the time, day of the week, temperature, and alarm indicators. The

clock is black with a bright blue LED display.

Package Contents

- REACHER K2-Pro Dual Alarm Clock
- Power Adapter (59-inch cord)
- User Manual

Safety Information

- Do not expose the device to water or excessive humidity.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided power adapter.
- Keep out of reach of children.
- For indoor use only.

Setup Guide

1. Power Connection

1. Connect the provided power adapter to the DC+5V port on the back of the alarm clock.
2. Plug the adapter into a standard wall outlet. The display will light up.



Image: The alarm clock plugged into a wall outlet, demonstrating its power source and showing two USB ports on the back for charging external devices.

2. Battery Backup Installation (Optional)

For maintaining settings during a power outage, install 3 AAA batteries (not included) into the battery compartment on the bottom of the unit.

1. Locate the battery compartment cover on the bottom of the clock.
2. Remove the cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover.



Image: A view of the bottom of the alarm clock, illustrating the battery compartment and the placement of three AAA batteries for backup power.

Operating Instructions

Setting the Time

1. Press the **TIME SET** button (located on the top panel). The hour digits will flash.
2. Rotate the large **SNOOZE/DIMMER** knob to adjust the hour.
3. Press **TIME SET** again to confirm the hour and move to minutes.
4. Rotate the knob to adjust the minutes.
5. Press **TIME SET** one more time to save the time.
6. To switch between 12-hour and 24-hour format, use the **12H/24H** switch on the back of the unit.

Setting Alarms (Alarm 1 and Alarm 2)

The clock supports two independent alarms.

1. Press the **ALARM 1** or **ALARM 2** button (located on the top panel). The alarm hour digits will flash.
2. Rotate the **SNOOZE/DIMMER** knob to adjust the alarm hour.
3. Press the respective alarm button again to confirm the hour and move to minutes.
4. Rotate the knob to adjust the alarm minutes.
5. Press the alarm button again to select the alarm sound (Flute, Bird Song, Piano, Buzzer, Digital Bell, or FM Radio).
6. Press the alarm button again to select the alarm mode: All 7 Days, Weekday (Mon-Fri), or Weekend (Sat-Sun).
7. Press the alarm button one last time to save the alarm settings.



Image: The alarm clock display highlighting the dual alarm functionality, showing separate settings for Alarm 1 (Weekday) and Alarm 2 (Weekend).

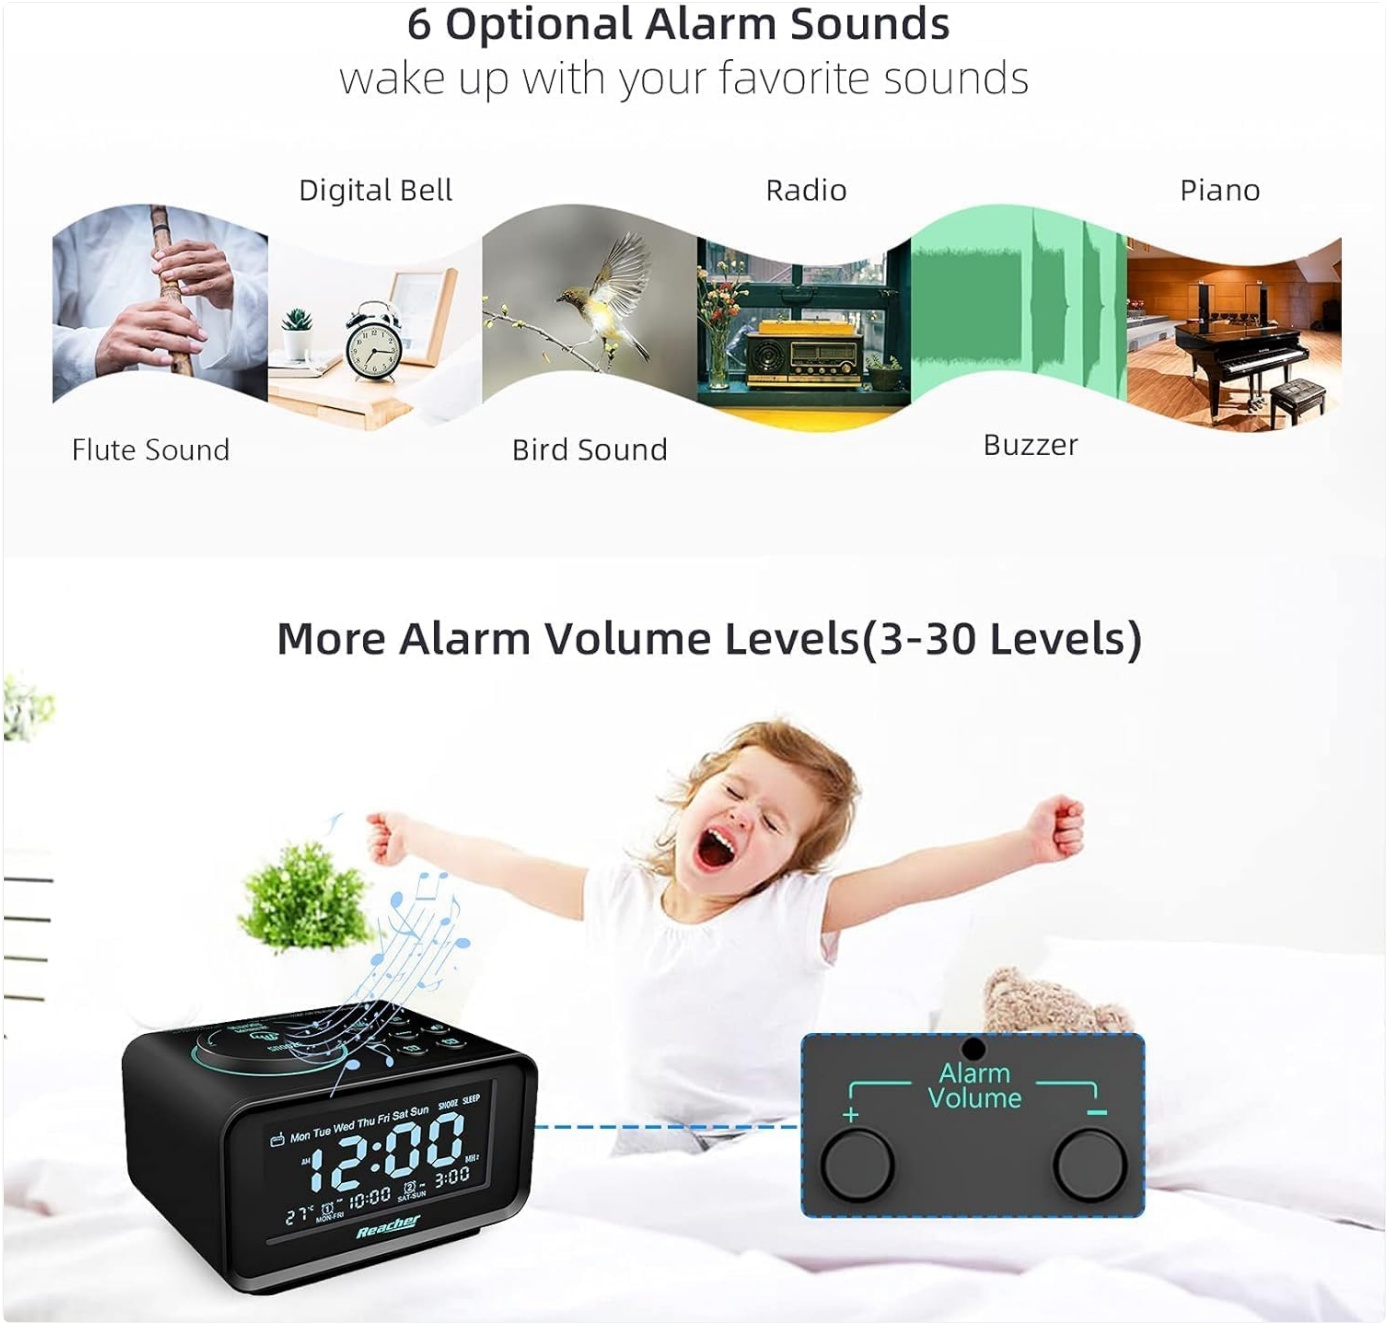


Image: Visual representation of the six available alarm sounds: Flute Sound, Digital Bell, Bird Sound, Radio, Buzzer, and Piano. This image also indicates adjustable alarm volume levels from 3 to 30.

Snooze Function

When an alarm sounds, press the large **SNOOZE** knob on top to activate snooze. The alarm will pause for 9 minutes and then sound again.

FM Radio Operation

1. Press the **RADIO** button to turn on the FM radio.
2. Rotate the **SNOOZE/DIMMER** knob to manually tune to a desired FM station (87.5-108.0 MHz).
3. Press and hold the **RADIO** button to automatically scan and save available stations.
4. Use the **Volume Up** and **Volume Down** buttons to adjust the radio volume (0-30 levels).
5. Press the **RADIO** button again to turn off the radio.



Image: The alarm clock demonstrating its manual and auto FM radio tuning capabilities, showing frequency range (FM 87.5-108.0 MHz), 0-30 radio volume levels, and 10-120 minute sleep timer options.

Sleep Timer Function

The sleep timer allows you to fall asleep to the radio, which will automatically turn off after a set duration.

1. While the radio is playing, press the **SLEEP TIMER** button.
2. Repeatedly press the **SLEEP TIMER** button to cycle through available durations (e.g., 10, 20, 30, 60, 90, 120 minutes, or OFF).
3. The radio will automatically turn off after the selected time.

Display Dimmer Control

Adjust the brightness of the LED display from 0% to 100%.

- Use the **DIMMER** slider switch on the back of the unit to adjust the display brightness.



Image: The alarm clock display at various brightness levels (0% to 100%), illustrating the dimmer function. A close-up of the dimmer slider switch on the back of the unit is also shown.

USB Charging Ports

The clock features two USB ports on the back for charging mobile phones and other USB-powered devices.

- Connect your device's USB charging cable to one of the USB ports on the back of the clock.
- Ensure the clock is powered on for charging to occur.



Image: The alarm clock plugged into a wall outlet, demonstrating its power source and showing two USB ports on the back for charging external devices like a smartphone and a tablet.

Temperature Display

The clock displays the indoor temperature.

- To switch between Celsius (°C) and Fahrenheit (°F), use the **°C/°F** switch on the back of the unit.

Maintenance and Care

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Ensure proper ventilation around the device.
- If not in use for an extended period, unplug the device and remove backup batteries.

Troubleshooting

Problem	Possible Cause	Solution
Clock display is off.	No power connection.	Ensure the power adapter is securely plugged into the clock and a working outlet.
Alarm does not sound.	Alarm is not set or is turned off; volume is too low.	Verify alarm settings and ensure alarm volume is adequate. Check alarm mode (Weekday/Weekend/All 7 Days).
Radio static or poor reception.	Weak signal; antenna not extended.	Adjust the position of the clock or extend the FM antenna (if applicable, usually a wire on the back). Try auto-scanning for stations.
USB charging not working.	Clock not powered; cable issue; device not compatible.	Ensure the clock is plugged into an outlet. Try a different USB cable or device.
Settings lost after power outage.	No backup batteries or batteries are dead.	Install fresh 3 AAA backup batteries.

Specifications

Feature	Detail
Model Number	K2-Pro
Dimensions	4.3" (W) x 3" (H) x 2.5" (D)
Weight	11.7 ounces
Power Source	Corded Electric (DC+5V adapter included)
Backup Battery	3 x AAA batteries (not included)
Display Type	Digital LED (0.8 inches digit height)
Dimmer	0-100% adjustable
FM Radio Frequency	87.5 - 108.0 MHz
USB Charging Ports	2 ports
Alarm Sounds	5 built-in tones + FM Radio
Temperature Display	°F / °C switchable
Material	Acrylonitrile Butadiene Styrene (ABS)

Warranty and Support

REACHER products typically come with a standard manufacturer's warranty. Please refer to the product packaging or the official REACHER website for specific warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact REACHER customer service:

- **Website:** Visit the REACHER Store on Amazon
- **Email:** (Refer to product packaging or official website for contact email)
- **Phone:** (Refer to product packaging or official website for contact phone number)

Please have your model number (K2-Pro) and purchase date ready when contacting support.

© 2023 REACHER. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B088GT1G9T

More documents and user manuals: **https://manuals.plus/**