Precision Pro NX2

Precision Pro NX2 Golf Rangefinder User Manual

Model: NX2

1. Introduction

The Precision Pro NX2 Golf Rangefinder is a non-slope, USGA-legal laser rangefinder designed to provide accurate distance measurements on the golf course. This device assists golfers in determining precise distances to various targets such as hazards, trees, and the flagstick, thereby aiding in club selection and improving game strategy.
The NX2 features 6X magnification and Target Acquisition Technology (TAG) for enhanced accuracy. It is built with crystal clear optics and is water resistant, ensuring reliable performance in various conditions.

1.1 Package Contents

Upon opening the package, please verify that all the following items are included:

- Precision Pro NX2 Golf Rangefinder
- Hard Carrying Case
- 3-volt Battery (Installed)
- Instruction Manual (this document)
- Lanyard
- Cleaning Cloth



Image: The Precision Pro NX2 Golf Rangefinder, its protective carrying case, and the product packaging, illustrating the complete contents of the retail package.

2. Setup

2.1 Battery Installation

The NX2 Rangefinder comes with a 3-volt battery pre-installed. Before first use, locate the battery compartment, typically on the side or bottom of the device. Remove any protective tab that may be present to activate the battery. Ensure the battery is inserted with the correct polarity as indicated inside the compartment.



Image: A close-up view of a hand inserting a battery into the designated battery compartment of the rangefinder, demonstrating the battery replacement process.

2.2 Initial Power On and Unit Settings

To power on the device, press the power button, usually located on the top of the rangefinder. Upon activation, you may need to select your preferred unit of measurement (yards or meters). This setting can typically be adjusted by holding down a specific button (refer to the on-screen prompts or quick start guide for exact button combination) while the device is powered on, or through a menu option if available.

3. Operating Instructions

3.1 Basic Operation

To obtain a distance measurement, look through the eyepiece and align the reticle with your desired target. Press and release the power/measurement button. The distance will be displayed almost instantly in the viewfinder. The NX2 provides measurements in 1/10th increments and is accurate to within one yard.

3.2 Target Acquisition Technology (TAG)

The NX2 features Target Acquisition Technology (TAG) to improve accuracy. This technology scans objects within your field of view while prioritizing and focusing on your intended target. This ensures that the displayed distance corresponds to the flagstick or other specific target, even if there are background objects.



Image: A golfer holding the Precision Pro NX2 Golf Rangefinder to their eye, aiming across a golf course, demonstrating its use for accurate distance measurement.

3.3 Flag Lock with Pulse Vibration

When targeting the flagstick, the NX2 is designed to lock onto the flag and provide a quick vibration feedback once the target has been acquired. This tactile confirmation assures you that you have measured the distance to the flag, not an object behind it.

3.4 Range Capacity and Magnification

The NX2 Golf Rangefinder has a maximum range capacity of 400 yards, with a total item display length of 600 yards. It provides 6X magnification, allowing for clear viewing and precise targeting of distant objects.

3.5 Water Resistance

The device is water resistant, making it suitable for use in various weather conditions on the golf course. While it can withstand light rain and splashes, it is not designed for submersion.

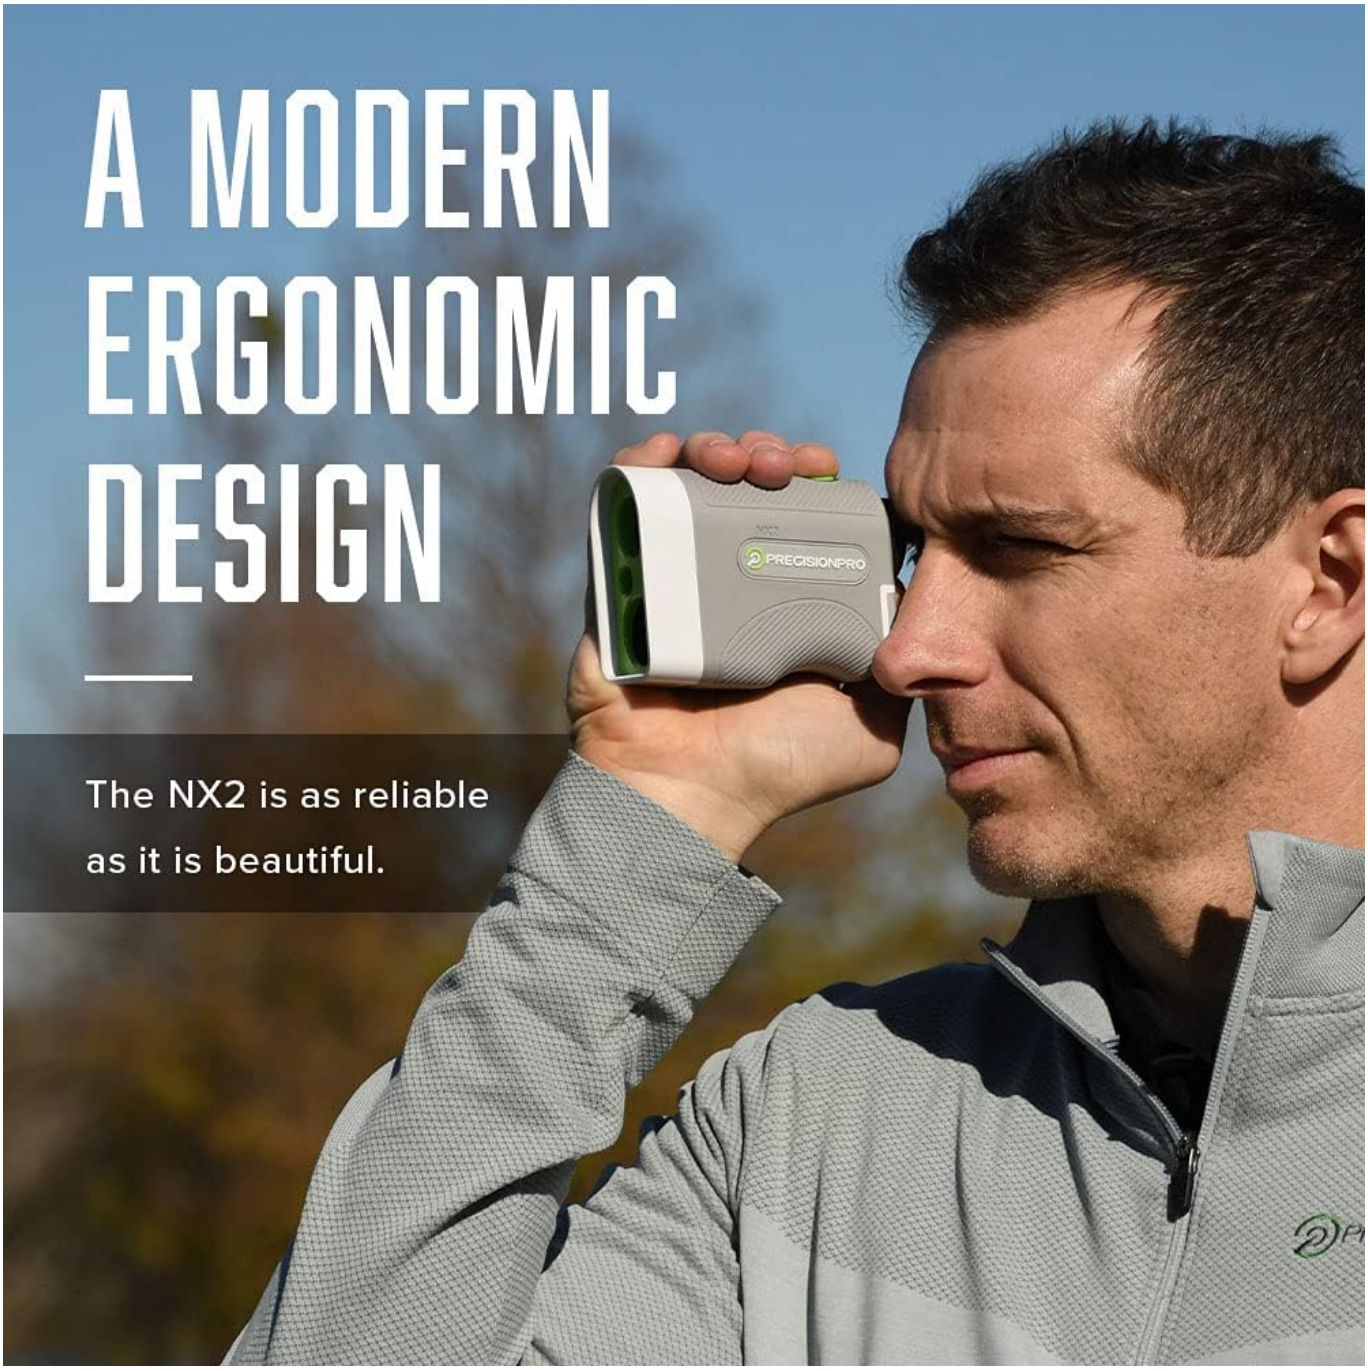


Image: A golfer demonstrating the comfortable and ergonomic design of the Precision Pro NX2 Golf Rangefinder while in use on the golf course.

4. Maintenance

4.1 Cleaning

To maintain optimal performance and clarity, regularly clean the lens and body of your rangefinder. Use the provided cleaning cloth or a soft, lint-free cloth. For lenses, gently wipe away dust and smudges. Avoid using abrasive materials or harsh chemicals that could damage the optics or casing.

4.2 Storage

When not in use, store the rangefinder in its protective carrying case. Keep it in a cool, dry place, away from direct sunlight and extreme temperatures. This will help preserve the device's components and battery life.

4.3 Battery Replacement

The Precision Pro NX2 Golf Rangefinder includes a Lifetime Battery Replacement service with product registration. When the battery level is low, contact Precision Pro for a replacement. This service ensures your rangefinder is always powered for your game.

5. Troubleshooting

5.1 Common Issues and Solutions

- **No Display/Power On:** Ensure the battery is correctly installed and has sufficient charge. Remove and reinsert the battery to reset the device.
- **Inaccurate Readings:** Ensure the lens is clean. Make sure you are targeting the intended object and not background elements. Use TAG technology effectively.
- **Display Not Clear/Zoomed Out:** Adjust the focus ring on the eyepiece. If the issue persists, try removing and reinserting the battery.
- **No Vibration Feedback:** Ensure the target acquisition is successful. If the feature is enabled and still not working, contact support.

5.2 Contacting Support

If you encounter issues that cannot be resolved using the troubleshooting steps above, please contact Precision Pro customer support for assistance. Refer to the warranty and support section for contact details or visit the official Precision Pro website.

6. Specifications

Feature	Detail
Model Number	NX2
Color	Grey
Size	Non-Slope
Max Range Capacity	400 yards (Item display length: 600 yards)
Accuracy	Within one yard
Measurement Display	1/10th measurements
Weight	363 g (approx. 0.8 lbs)
Lens Material	Anti Reflective
Material Type	Plastic
Magnification	6X
Water Resistance Level	Water Resistant (IP54)
Battery Type	3-volt (CR2)
Product Dimensions	10.16 x 2.54 x 7.62 cm
UPC	672299754690

7. Warranty and Support

7.1 Product Warranty

The Precision Pro NX2 Golf Rangefinder comes with a **two-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. If any issues arise during the first year of purchase under normal use, Precision Pro will replace the unit.

7.2 Lifetime Battery Replacement

As part of the Precision Care Package, the NX2 includes **free Lifetime Battery Replacement services**. To utilize this service, product registration may be required. Please refer to the Precision Pro website for details on how to register your product and request battery replacements.

7.3 Customer Support

For further assistance, technical support, or warranty claims, please visit the official Precision Pro website or contact their customer service department. Contact information can typically be found on the product packaging or the company's official website.

© 2023 Precision Pro. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question