ELECHOMES HU-XI-201

Elechomes AG61B 6L Air Fryer User Manual

Model: AG61B / HU-XI-201

1. Important Safety Instructions

Please read all instructions carefully before using the Elechomes AG61B Air Fryer. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, heat-resistant surface.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply.
- Keep the appliance and its cord out of reach of children.
- Do not block any air vents. Ensure adequate space around the appliance for proper ventilation.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- The air fryer features a **double microswitch** for enhanced safety and **overheat protection with automatic shut-off**.
- The basket and components are made from **BPA-free plastic**.
- Use the **heat-resistant handle** when removing the basket.



Image: The Elechomes AG61B Air Fryer is shown with various safety certifications (CE, GS, LFGB, BPA Free, Double Microswitch, Heat-Resistance Handle) highlighting its safe design. A couple is seen preparing food in the background, indicating safe kitchen use.

2. Product Overview and Features

The Elechomes AG61B Air Fryer utilizes rapid air circulation technology to cook food with significantly less oil than traditional deep frying methods, offering a healthier alternative.

Key Features:

- **6L Large Capacity:** Suitable for 4 to 7 people, capable of frying up to 1 kg of fries or a whole chicken.
- **1700W Power:** Ensures efficient and fast cooking.
- **Dual Vortex Fan Design:** Innovative double fan system for 80% faster 3D hot air circulation, ensuring even and thorough cooking without scorching.
- **LED Touchscreen:** Intuitive digital display for easy operation.
- **6 Preset Cooking Programs:** Dedicated settings for Fries, Chicken, Seafood, Steak, Shrimp, and Desserts.
- **Adjustable Timer & Temperature:** Control cooking time from 1-60 minutes and temperature from 80°C-200°C.
- **Preheat Function:** Prepares the air fryer for optimal cooking.
- **Shake Reminder:** Prompts you to shake the basket for even cooking.
- **Non-stick Basket:** Easy to clean and dishwasher safe.

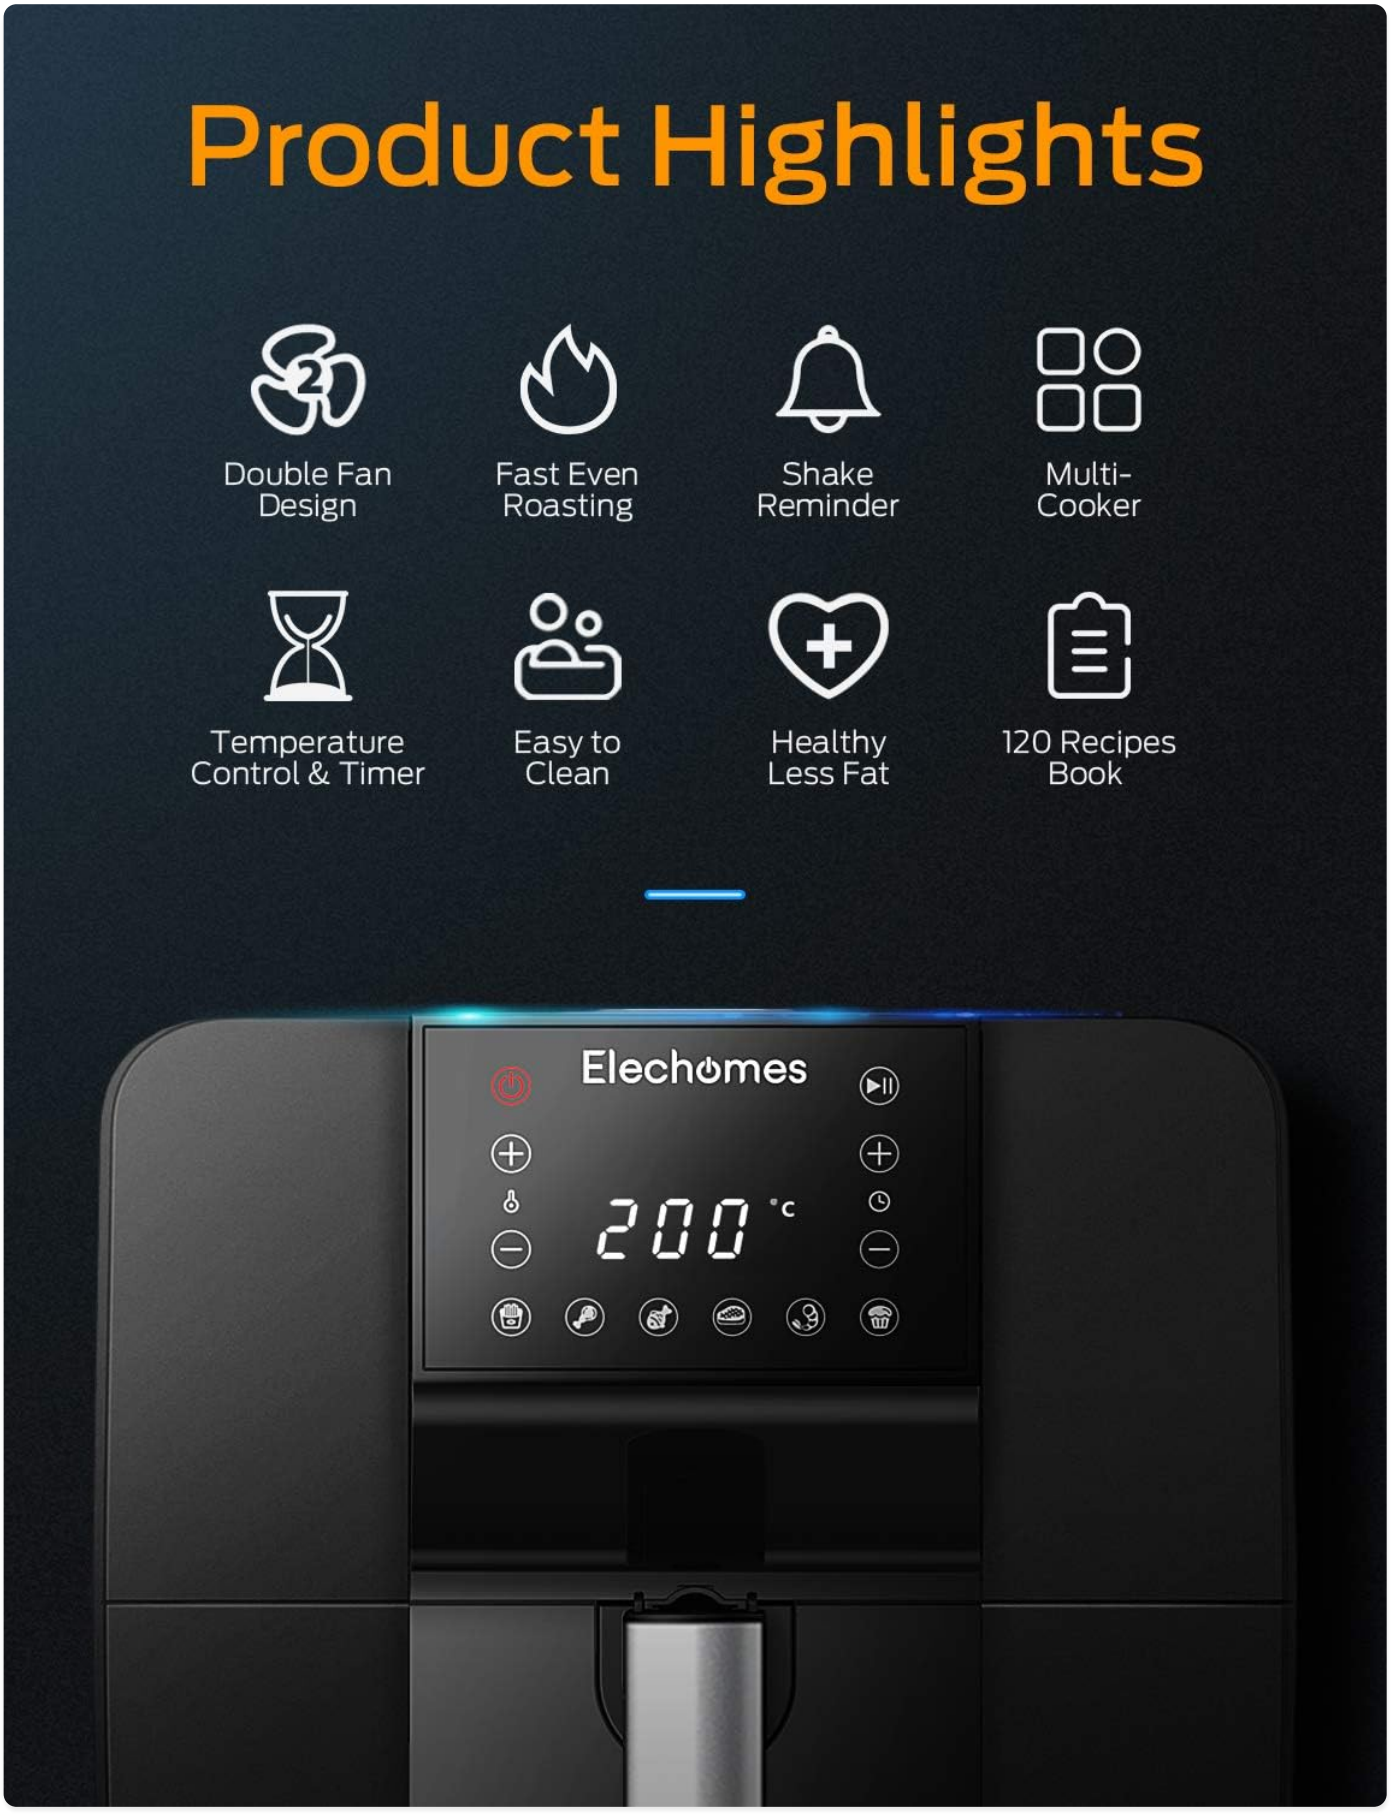


Image: A visual representation of the Elechomes AG61B Air Fryer's key features, including Dual Fan Design, Fast Even Roasting, Shake Reminder, Multi-Cooker, Temperature Control & Timer, Easy to Clean, Healthy Less Fat, and a 120 Recipes Book.



Image: This graphic illustrates the innovative Dual Fan Design of the Elechomes AG61B Air Fryer, showing 3D hot air circulation for even and faster cooking, contrasted with a traditional single fan design that may lead to uneven heating and scorching.

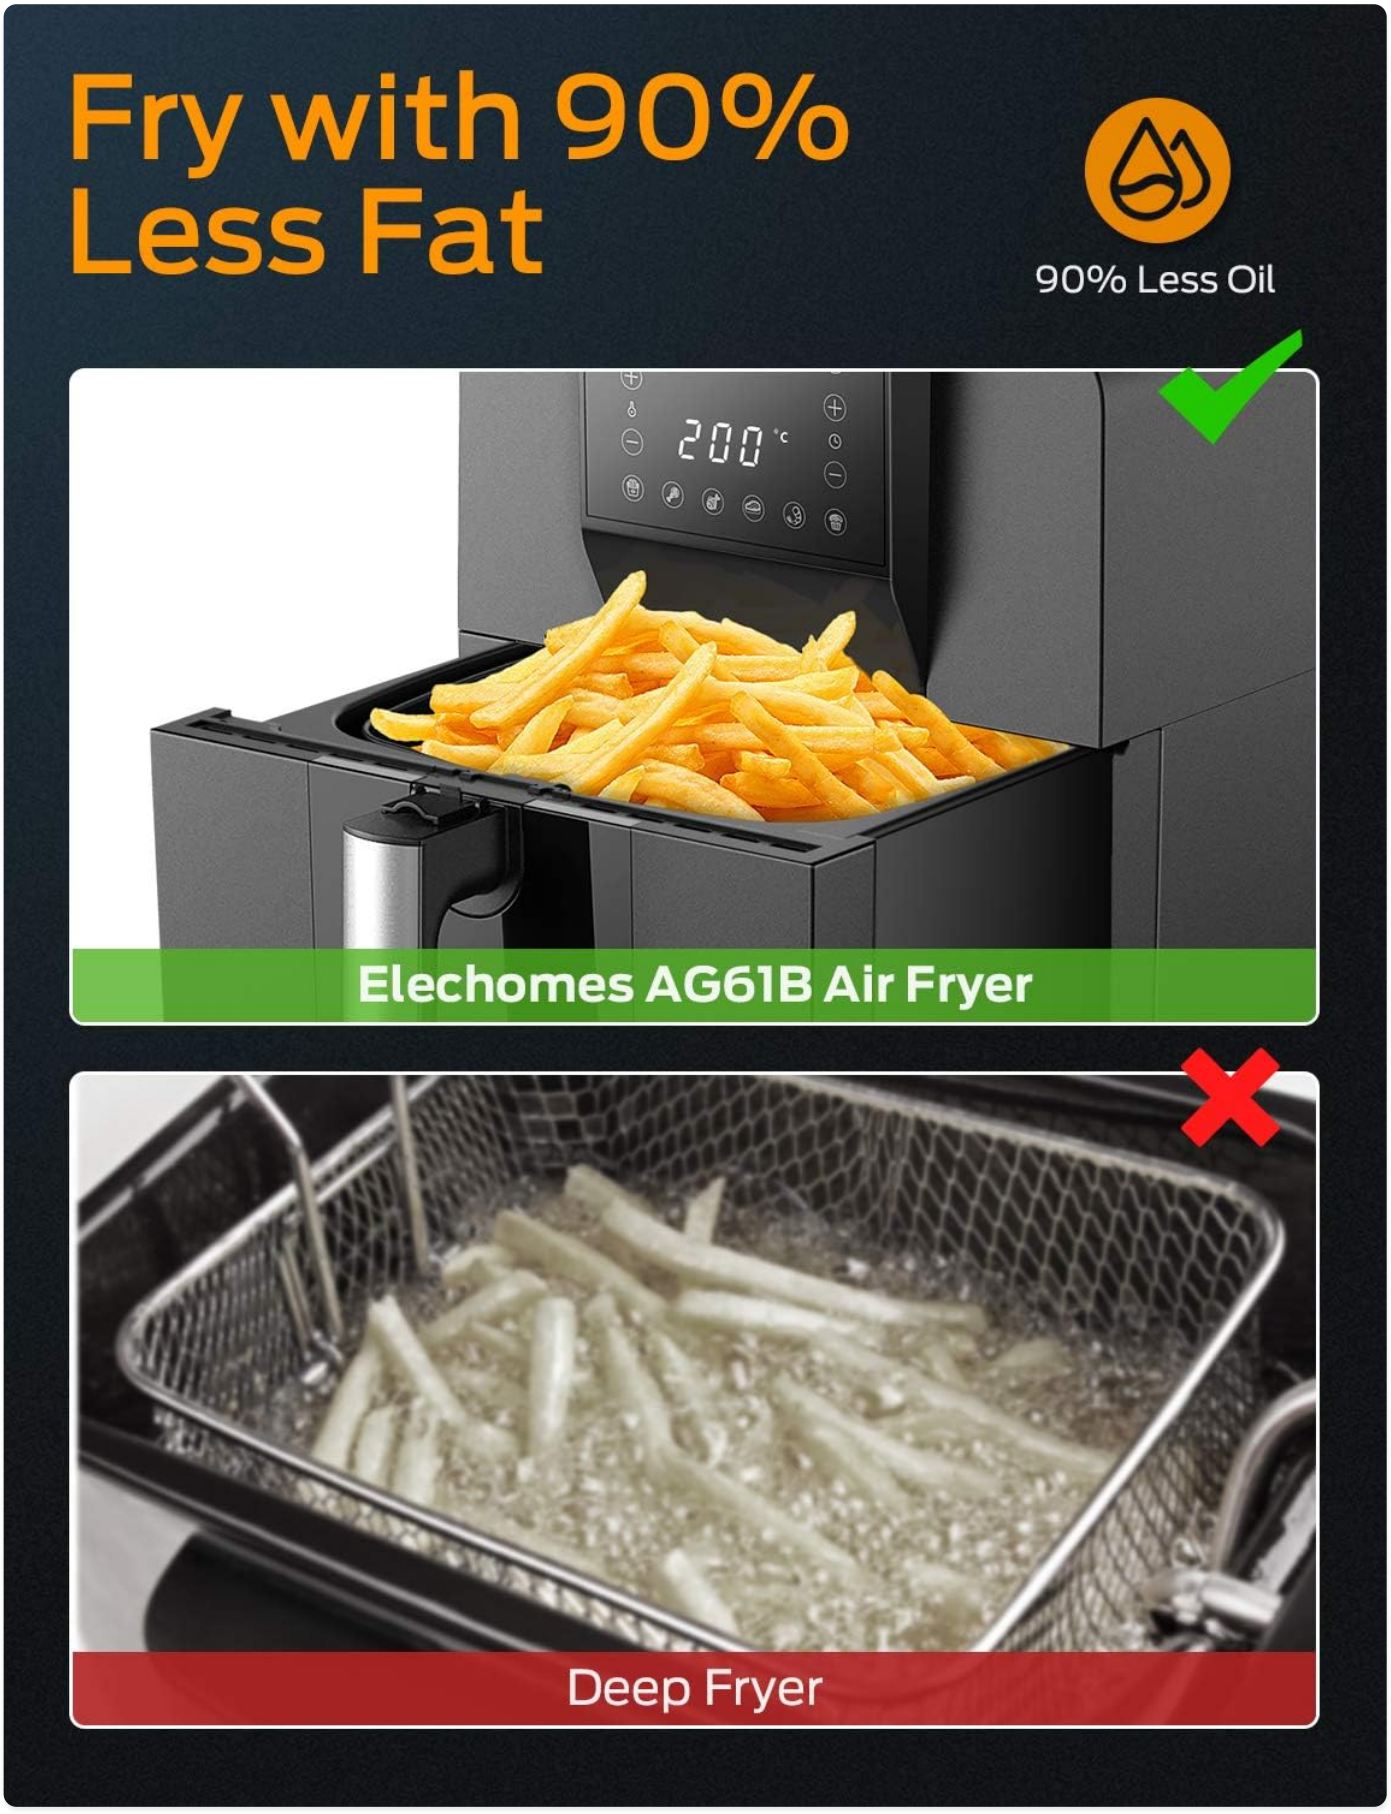


Image: A visual comparison showing french fries cooked in the Elechomes AG61B Air Fryer (top, with 90% less oil) versus french fries being deep-fried in a traditional fryer (bottom), highlighting the healthier cooking method.



Image: The Elechomes AG61B Air Fryer is displayed with a whole roasted chicken inside its basket, illustrating its 6L (6.3QT) large capacity, suitable for cooking for an entire family. Icons indicate capacity for 1kg of fries, 1 whole chicken, 20 chicken wings, or 50 frying shrimps.

3. Setup and First Use

Unpacking:

1. Remove all packaging materials from the air fryer.
2. Check that all parts are present and undamaged.

Initial Cleaning:

1. Wipe the exterior of the air fryer with a damp cloth.
2. Wash the removable basket and pan with hot water, dish soap, and a non-abrasive sponge.
3. Rinse thoroughly and dry all parts completely before use.

Placement:

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and above the appliance, to allow for proper air circulation.

4. Operating Instructions

Control Panel:

The Elechomes AG61B features an intuitive LED touchscreen for easy control.



Image: A close-up of the Elechomes AG61B Air Fryer's large LED touchscreen, displaying temperature and time settings, along with icons for 6 cooking presets: French Fries, Chicken, Seafood, Steak, Shrimp, and Desserts.

Basic Operation:

1. **Prepare Food:** Place your ingredients in the air fryer basket. For best results, lightly coat food with oil if desired.

2. **Insert Basket:** Slide the basket firmly into the air fryer.
3. **Power On:** Plug the air fryer into a grounded wall outlet. The power button will illuminate.
4. **Select Program or Manual Settings:**
    - **Preset Programs:** Touch one of the 6 preset icons (Fries, Chicken, Seafood, Steak, Shrimp, Desserts). The air fryer will automatically set the optimal time and temperature.
    - **Manual Settings:** Use the temperature control buttons (80°C-200°C) and timer buttons (1-60 minutes) to set your desired cooking parameters.
5. **Start Cooking:** Press the start/pause button to begin the cooking cycle.
6. **Preheat Function:** If using the preheat function, allow the air fryer to reach the set temperature before adding food.
7. **Shake Reminder:** For certain foods, the air fryer will emit a 'shake' reminder during the cooking cycle. Carefully remove the basket, shake the contents, and reinsert.
8. **Monitor Progress:** You can pull out the basket at any time to check on your food. The air fryer will pause and resume once the basket is reinserted.
9. **Finish Cooking:** Once the timer reaches zero, the air fryer will automatically shut off. Carefully remove the basket and transfer food to a serving dish.



Image: The Elechomes AG61B Air Fryer is shown with its basket pulled out, filled with golden french fries. A recipe book is positioned next to the air fryer, suggesting culinary possibilities.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your Elechomes AG61B Air Fryer.

Cleaning Steps:

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Remove Basket:** Pull the basket out from the main unit.
3. **Separate Pan:** Open the release button guard cover and press the release button to separate the non-stick pan from the basket.
4. **Wash Components:** The non-stick basket and pan are **dishwasher safe**. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.

5. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. Do not use abrasive cleaners or steel wool.
6. **Clean Exterior:** Wipe the exterior with a damp cloth.
7. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling and storing.

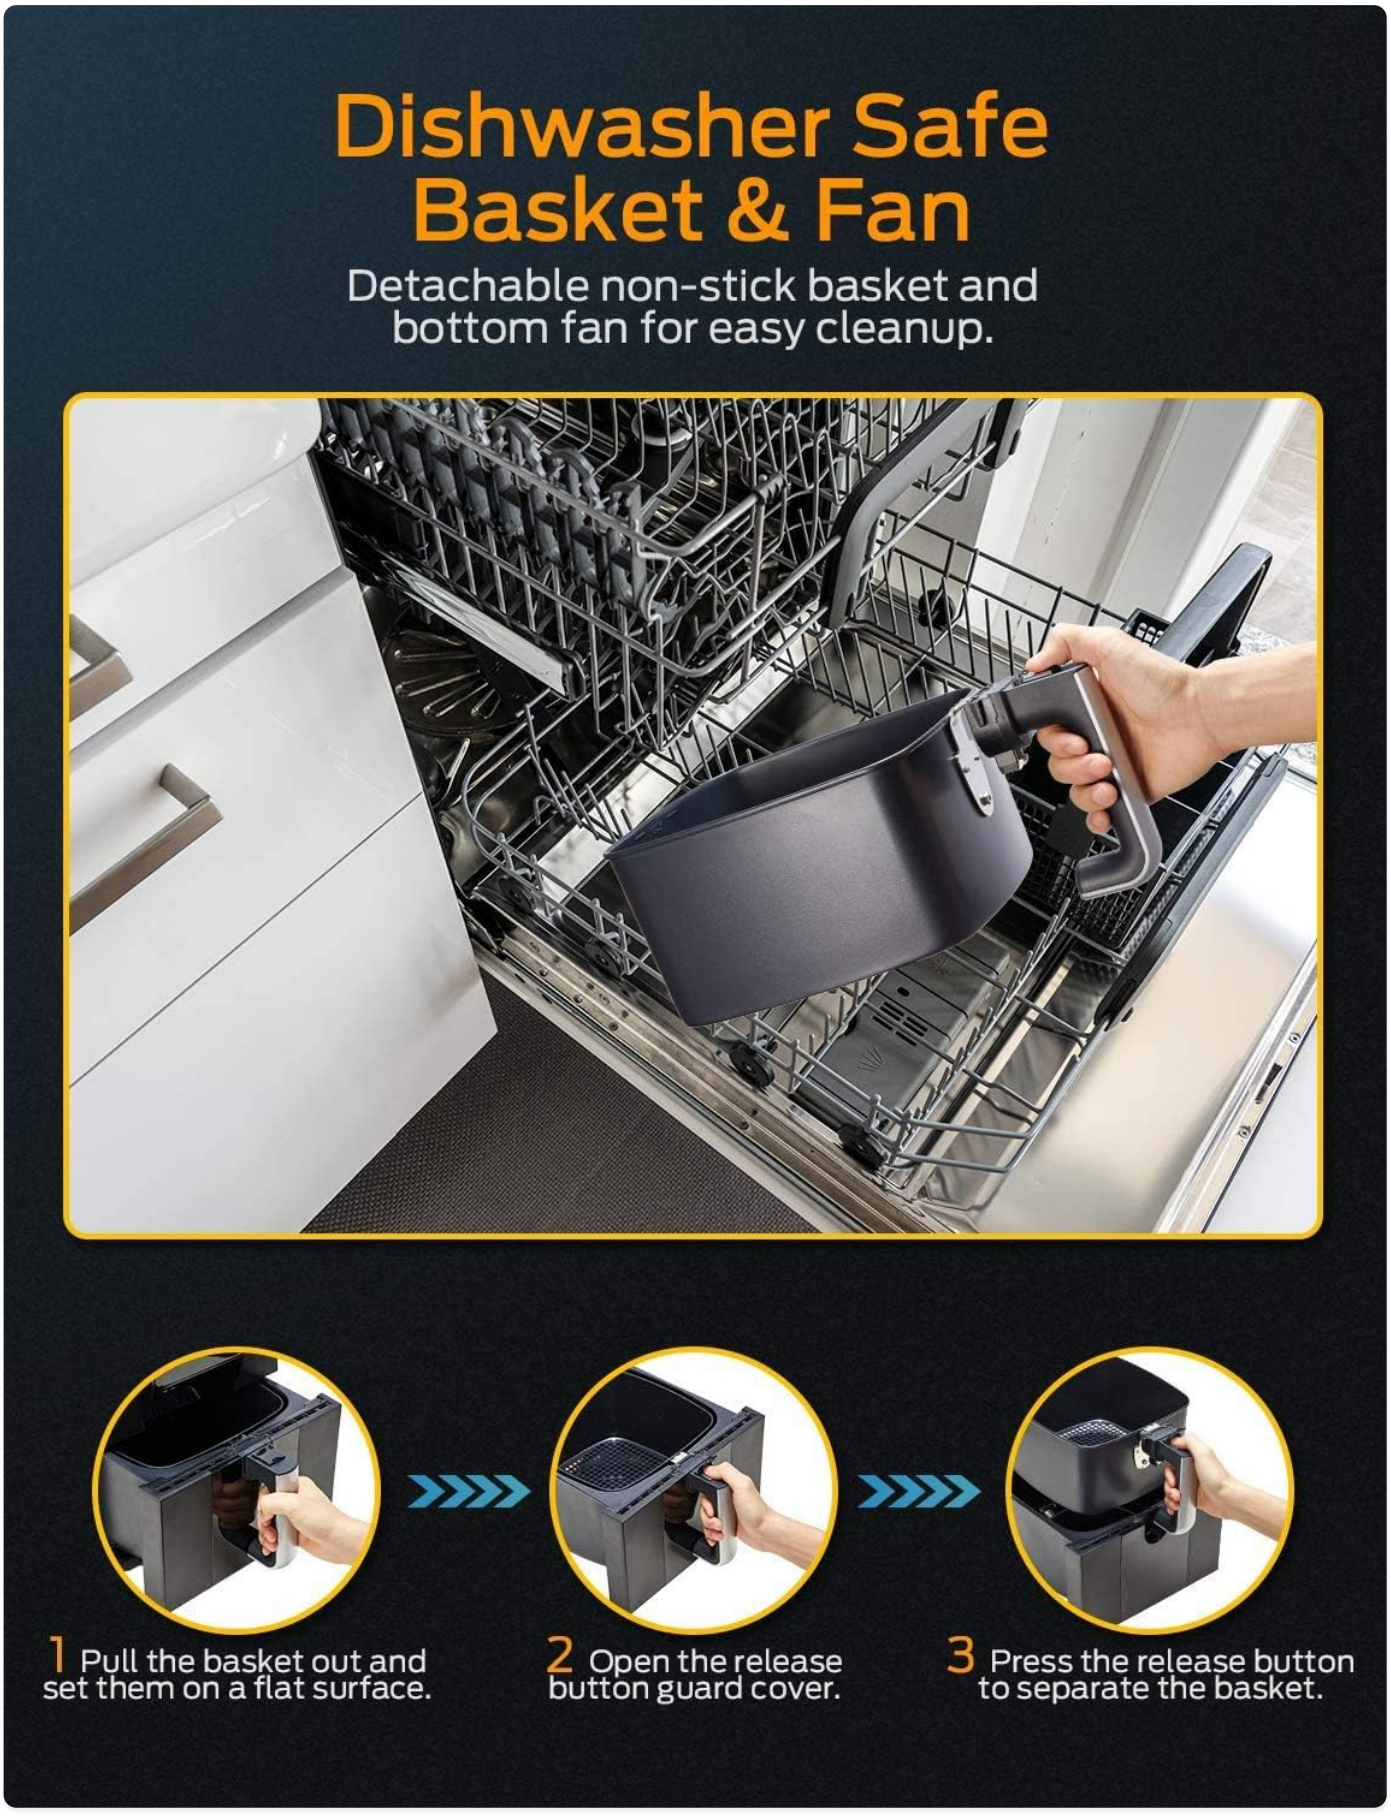


Image: A three-step visual guide demonstrating how to detach and clean the dishwasher-safe non-stick basket and bottom fan of the Elechomes AG61B Air Fryer. The steps show pulling out the basket, opening the release button guard, and pressing the button to separate

the basket components, followed by an image of the basket in a dishwasher.

6. Troubleshooting

If you encounter any issues with your Elechomes AG61B Air Fryer, please refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functioning.
- **Food is not cooked evenly:** Ensure the basket is not overloaded. Use the 'shake reminder' function or manually shake the basket halfway through cooking.
- **White smoke comes from the appliance:** This is usually normal if you are cooking fatty foods. Clean the basket and pan thoroughly after each use to prevent residue buildup.
- **Air fryer smells during first use:** A slight odor may occur during the first few uses due to manufacturing residues. This is normal and will dissipate. Ensure good ventilation.

If the problem persists after trying these solutions, please contact customer support.

7. Specifications

Specification	Detail
Brand	ELECHOMES
Model Number	HU-XI-201 (AG61B)
Capacity	6 Liters
Power	1700 Watts
Voltage	220 Volts
Material	BPA-free Plastic
Dimensions (L x W x H)	29.6 x 38.5 x 35.4 cm
Weight	7.7 Kilograms
Special Features	6 Preset Programs, 6L Large Basket, Dishwasher-safe Non-stick Baskets, Double Fan for Fast Heating, Preheat & Shake Function, Overheat Protection, Automatic Shut-off, BPA-free, LED Touchscreen

8. Recipes and Support

Recipe Book:

Your Elechomes AG61B Air Fryer comes with a recipe book (German version included). For French, English, Italian, or Spanish versions in PDF format, please contact our customer service.



Image: The Elechomes AG61B Air Fryer is shown from above, with its basket containing french fries. A recipe book titled 'Elechomes Recipes' is prominently displayed next to it, along with other cooked food, suggesting a variety of meal preparations.

Customer Support:

For any product-related issues or inquiries, please do not hesitate to contact Elechomes customer service via Amazon message or after-sales email. We aim to resolve any concerns within 24 hours. Elechomes provides lifetime support for

this product.

© 2023 Elechomes. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question