Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FEELWORLD SA-FW759

FEELWORLD F5 Pro V4 6-Inch DSLR Camera Field Monitor

Model: SA-FW759

1. Introduction

The FEELWORLD F5 Pro V4 is a versatile 6-inch Full HD field monitor designed for DSLR and mirrorless cameras. It features a responsive touchscreen, 4K HDMI input/output, and support for 3D LUTs, providing essential monitoring tools for accurate exposure and focus. Its lightweight design and flexible power options make it an ideal companion for various shooting environments.



Figure 1.1: FEELWORLD F5 Pro V4 Field Monitor displaying various monitoring tools.

2. Package Contents

Please check that all items are present in your package:

- 1x FEELWORLD F5 Pro V4 Monitor
- 1x Micro HDMI Cable
- 1x Sunshade
- 1x Tilt Arm
- 1x Disassemble Wrench
- 1x User Manual

Note: Battery and power adapter are not included and must be purchased separately.



Figure 2.1: Included accessories with the F5 Pro V4 monitor.

3. Setup

3.1 Powering the Monitor

The F5 Pro V4 offers multiple power options:

- **NP-F Battery:** Insert a compatible NP-F series battery (e.g., F970, F750, F550) into the battery plate on the rear of the monitor. Ensure it clicks into place securely.
- **Type-C Input (5V):** Connect a 5V Type-C power source to the DC IN 5V (Type-C) port.
- **DC Input (12V):** Connect a 12V DC power adapter to the DC IN 12V port.

The monitor also features a DC OUT 8.4V port, allowing you to power your camera or other accessories directly from the monitor's battery.



Figure 3.1: Power and connectivity ports.

3.2 Attaching the Tilt Arm

The included tilt arm allows for flexible positioning of the monitor on your camera's hot shoe or other mounting points. Secure the tilt arm to the monitor using the 1/4-inch screw, then attach the base of the arm to your camera's hot shoe mount.



Figure 3.2: Monitor attached to a camera via the tilt arm.

3.3 Connecting to Camera (HDMI)

Use the provided Micro HDMI cable to connect your camera's HDMI output to the monitor's HDMI IN port. If your camera has a standard HDMI output, you may need an additional adapter (not included). The HDMI OUT port allows for loop-through to another monitor or device.

3.4 Attaching the Sunshade

The sunshade attaches to the monitor via velcro, providing improved visibility in bright outdoor conditions. Align the velcro strips on the sunshade with those on the monitor and press firmly to secure.

4. Operating the Monitor

4.1 Touchscreen Operation

The F5 Pro V4 features an intuitive touchscreen interface:

- **Pinch-to-Zoom:** Use a pinch-to-zoom gesture to magnify or reduce your shot.
- **Brightness/Volume:** Swipe up or down on the left side of the screen to adjust brightness, and on the right side for volume.
- **Shortcut Menu:** Double-click the screen to enter the main menu. Swipe from the bottom of the screen to open the shortcut menu.

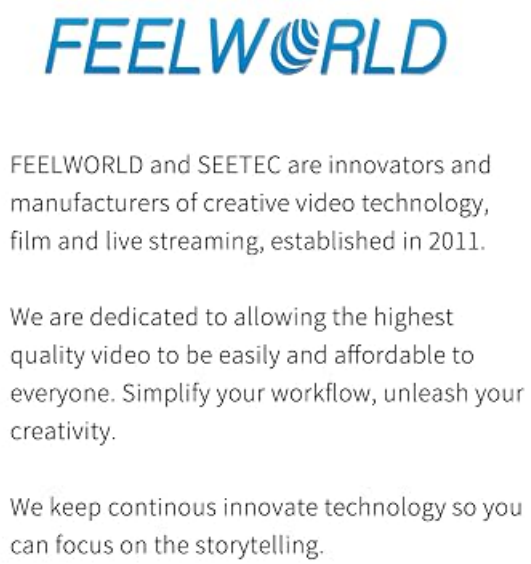


Figure 4.1: Touchscreen gestures and menu access.

4.2 Menu Navigation

You can navigate the monitor's settings using either the touchscreen or the physical buttons located on the top edge. The F1 and F2 buttons are customizable for quick access to frequently used functions.

4.3 Monitoring Features

The monitor includes a comprehensive suite of monitoring tools:

- **Histogram:** Displays the tonal distribution of your image.
- **False Color:** Helps with exposure adjustment by displaying different exposure levels in various colors.
- **Focus Assist/Peaking:** Highlights in-focus areas of your image with a selectable color (Red, Green, Blue).
- **Embedded Audio:** Monitors audio levels.
- **Pixel to Pixel:** Displays the image at its native resolution.
- **Frame Guides/Nine Grid:** Assists with composition and framing.
- **3D LUT:** Load custom Look-Up Tables via the Type-C interface for accurate color representation.



Figure 4.2: Advanced monitoring features.

4.4 External Equipment Installation

The F970 external install and power kit design allows you to mount and power external equipment such as wireless transmitters, LED lights, or video converters directly from the monitor's NP-F battery. This helps to reduce the overall weight and complexity of your camera rig.



Figure 4.3: External equipment setup with F970 kit.

4.5 Official Product Videos

Video: FEELWORLD F5 PRO Monitor for Use with Your Camera. This video demonstrates the monitor's features and how it integrates with a camera setup.

Video: Behind the Scenes of Fitness FEELWORLD F5 PRO Camera Monitor. This video showcases the monitor's use in a professional fitness video production environment.

Video: FEELWORLD F5 PRO Comes with Install and Power Kit. This video highlights the convenience and functionality of the monitor's external install and power kit.

Video: FEELWORLD F5 PRO Appearance and Interface Display. A detailed look at the physical design and user interface of the monitor.

5. Specifications

Model Number	SA-FW759
Screen Size	6 inches
Resolution	1920x1080 (Full HD)
Brightness	500 nits
Contrast Ratio	1000:1
Viewing Angle	160° (IPS)
Input Ports	4K HDMI IN, DC IN 5V (Type-C), DC IN 12V
Output Ports	4K HDMI OUT, DC OUT 8.4V
Product Dimensions	6.26 x 3.11 x 0.39 inches
Item Weight	1.4 pounds

6. Troubleshooting

- **No Signal Displayed:**
  - Ensure the HDMI cable is securely connected to both the camera and the monitor.
  - Verify that your camera's HDMI output settings are correctly configured.
  - Check the HDMI cable for any damage.
- **Monitor Not Powering On:**
  - Confirm the battery is fully charged and correctly inserted.
  - If using external power, ensure the power adapter is functioning and connected to the correct DC IN port.
  - Press and hold the power button for a few seconds to ensure it's not just a short press.
- **Touchscreen Unresponsive:**
  - Restart the monitor.
  - Ensure the touchscreen function is enabled in the monitor's settings.
- **Image Appears Cropped or Stretched:**
  - Adjust the aspect ratio settings in the monitor's menu to match your camera's output.
  - Check the 'Scan Mode' or 'Pixel to Pixel' settings.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the monitor's screen and body. For stubborn smudges, a slightly damp

microfiber cloth can be used. Avoid harsh chemicals or abrasive materials.

- **Storage:** When not in use, store the monitor in its carrying case in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If storing for extended periods, remove the battery from the monitor and store it separately. Follow battery manufacturer guidelines for long-term storage.

8. Warranty and Support

FEELWORLD products typically come with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or visit the official FEELWORLD website. For technical support, troubleshooting assistance, or service inquiries, please contact FEELWORLD customer support through their official channels.

Visit the FEELWORLD Official Store for more information and product registration.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question