Dyberg Larsen Pyra 23

Dyberg Larsen Pyra 23 Table Lamp User Manual

Model: Pyra 23

Introduction

Thank you for choosing the Dyberg Larsen Pyra 23 Table Lamp. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your new lamp. Please read these instructions carefully before use and retain them for future reference.

Safety Information

- Always disconnect the lamp from the power supply before cleaning or replacing the bulb.
- Do not exceed the maximum wattage specified for the bulb (60W E27).
- Ensure the lamp is placed on a stable, flat surface to prevent tipping.
- Keep the lamp away from water and moisture. This lamp is designed for indoor use only.
- Do not attempt to modify or repair the lamp yourself. Contact qualified personnel for service.

Package Contents

Verify that all components are present and undamaged upon unpacking:

- Dyberg Larsen Pyra 23 Table Lamp (Base, Stem, Shade)
- Integrated Bulb Socket (E27)
- Power Cord with Plug (1.8 m white textile cord)

Note: Bulb is not included and must be purchased separately.

Setup Instructions

1. **Unpack the Lamp:** Carefully remove all components from the packaging.
2. **Place the Lamp:** Position the lamp base on a stable, flat surface.
3. **Install the Bulb:**
    - Ensure the lamp is unplugged from the power outlet.

- Gently screw an E27 bulb (maximum 60W) into the lamp's socket. Do not overtighten.

4. **Connect to Power:** Insert the power plug into a standard AC electrical outlet.



Image: Close-up of the lamp base showing the white textile power cord exiting neatly.

Operating Instructions

The Dyberg Larsen Pyra 23 Table Lamp is operated using a simple pull chain switch.

1. **Turning On:** Gently pull the decorative chain extending from beneath the lamp shade. The lamp will illuminate.

2. **Turning Off:** Pull the chain again to switch the lamp off.



Image: Close-up of the lamp's pull chain switch located beneath the shade.



Image: A hand operating the pull chain to turn the lamp on or off.

Maintenance

Cleaning

- Always unplug the lamp before cleaning.
- Use a soft, dry cloth to wipe the lamp's surfaces.
- Do not use abrasive cleaners, solvents, or polishing agents as they may damage the finish.

Bulb Replacement

- Ensure the lamp is unplugged and the bulb has cooled completely.
- Carefully unscrew the old E27 bulb from the socket.
- Screw in a new E27 bulb, ensuring it does not exceed the maximum 60W rating.
- Dispose of old bulbs according to local regulations.

Troubleshooting

Problem	Possible Cause	Solution
Lamp does not turn on.	No power to the outlet. Bulb is loose or faulty. Pull chain switch is faulty.	Check if the outlet is working by plugging in another device. Unplug the lamp, check if the bulb is screwed in properly, or replace the bulb. If the above steps do not resolve the issue, contact customer support.
Lamp flickers.	Loose bulb connection. Faulty bulb. Incompatible bulb type.	Unplug the lamp and tighten the bulb. Replace the bulb with a new one. Ensure the bulb is an E27 type.

Specifications

Model Name	Pyra 23
Model Number	5704709064619
Brand	Dyberg Larsen
Dimensions (L x W x H)	23 x 23 x 60 cm
Weight	2.55 Kilograms
Material	Metal
Color	Matte White
Power Source	AC
Max Wattage	60 Watts
Bulb Type	E27
Cord Length	1.8 meters
Energy Label	A++

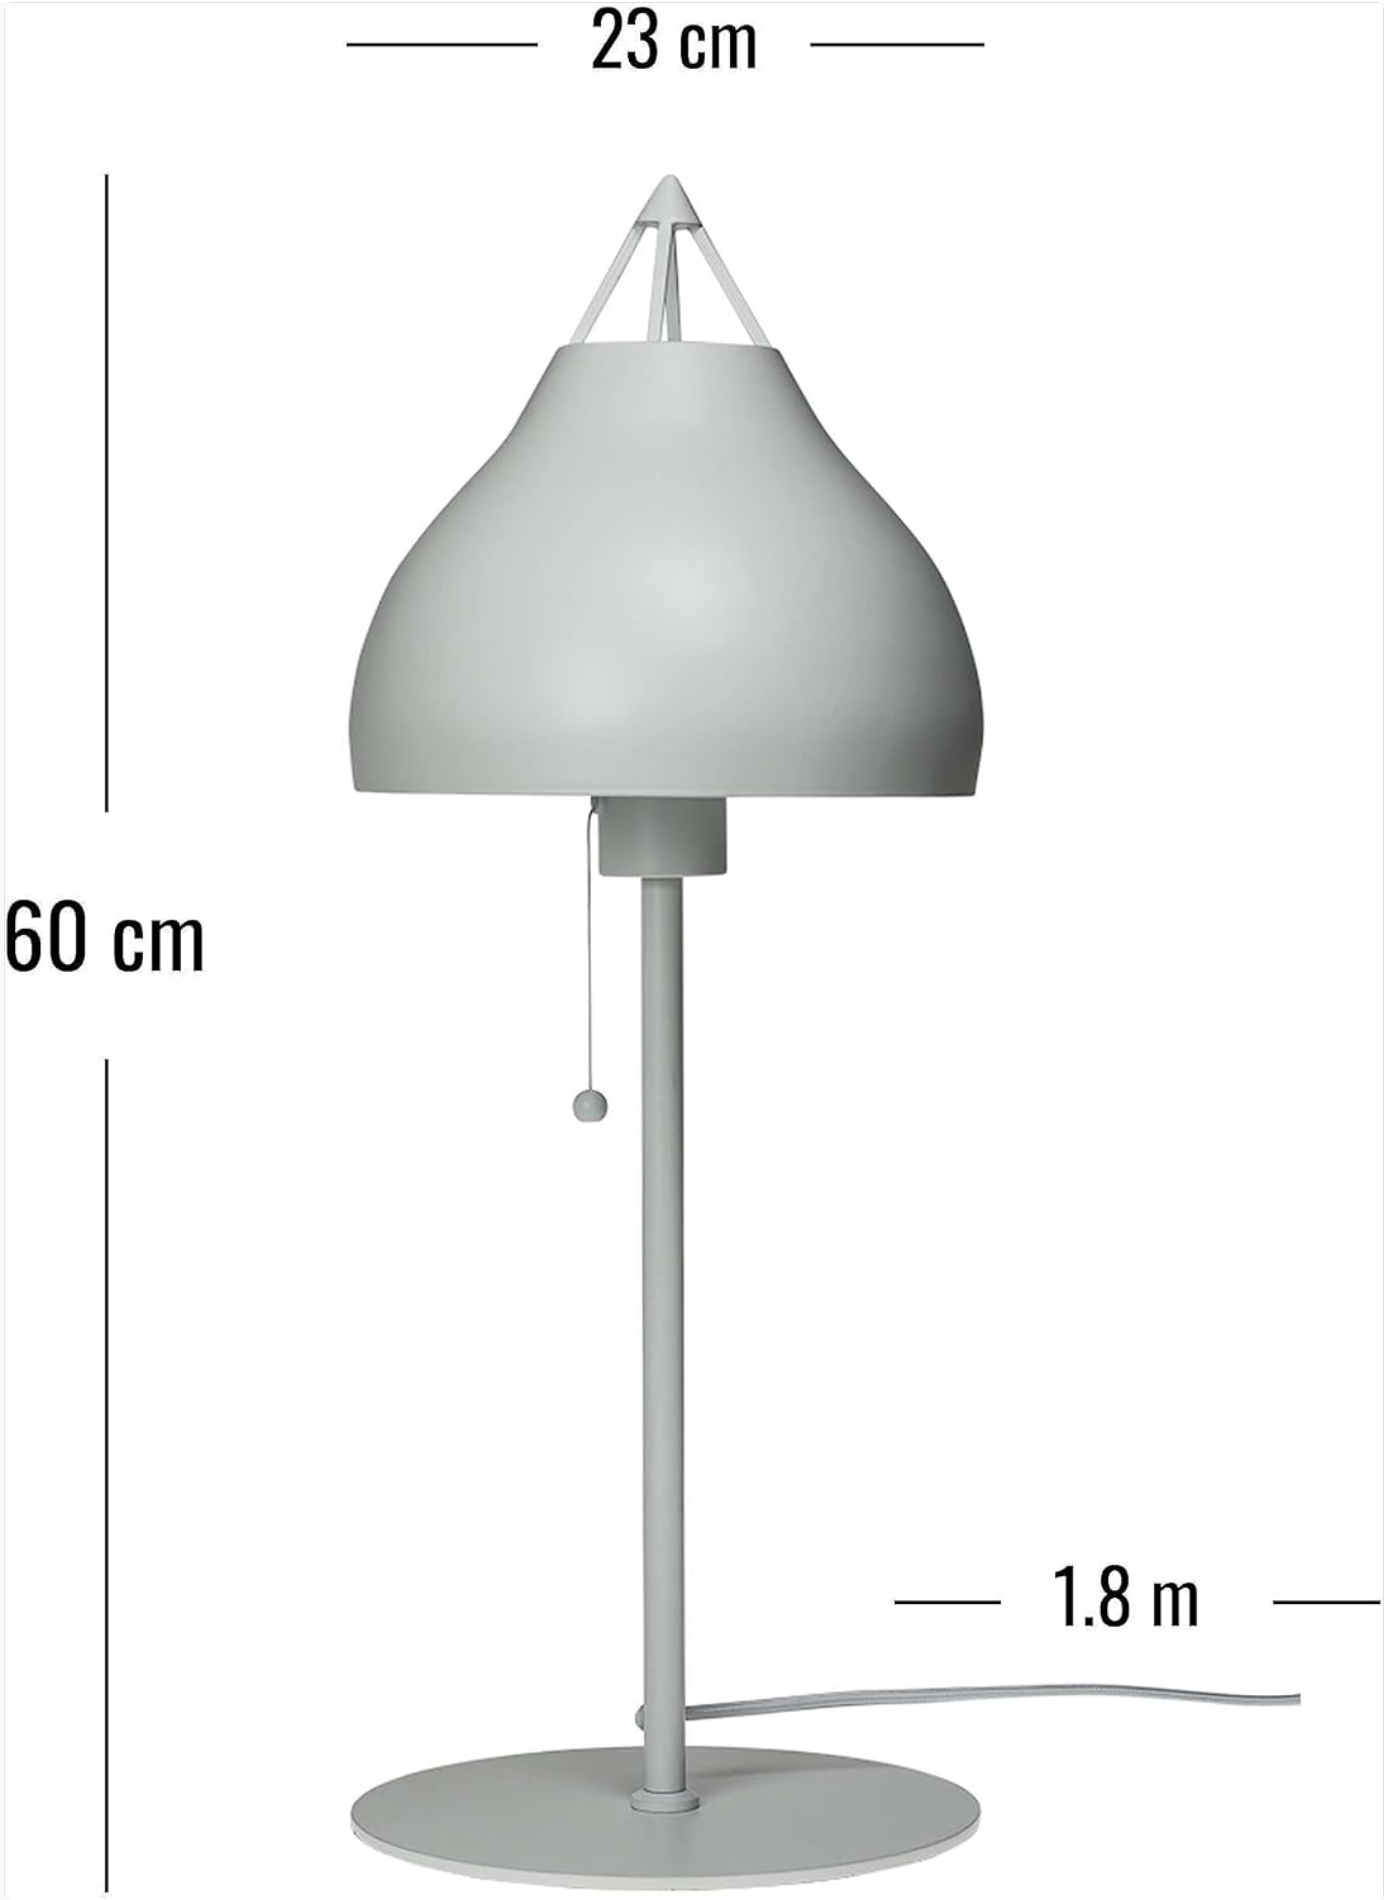


Image: Diagram showing the dimensions of the Pyra 23 Table Lamp: 60 cm height, 23 cm diameter, 1.8 m cord length.

Warranty and Support

Dyberg Larsen products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or service, please refer to the official Dyberg Larsen website or contact their customer service directly.

Please retain your proof of purchase for any warranty claims.

For further assistance, visit: www.dyberglarsen.com

© 2023 Dyberg Larsen. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question