Bona WM710013572

Bona PowerPlus Premium Motion Spray Mop Instruction Manual

Brand: Bona | Model: WM710013572

1. Introduction

The Bona PowerPlus Premium Motion Spray Mop is designed for effective and efficient cleaning of hardwood floors. This all-in-one solution features a vibrating mop head to tackle tough, stuck-on messes, combined with a specialized cleaning solution and a washable microfiber pad. Its design prioritizes ease of use and floor protection.

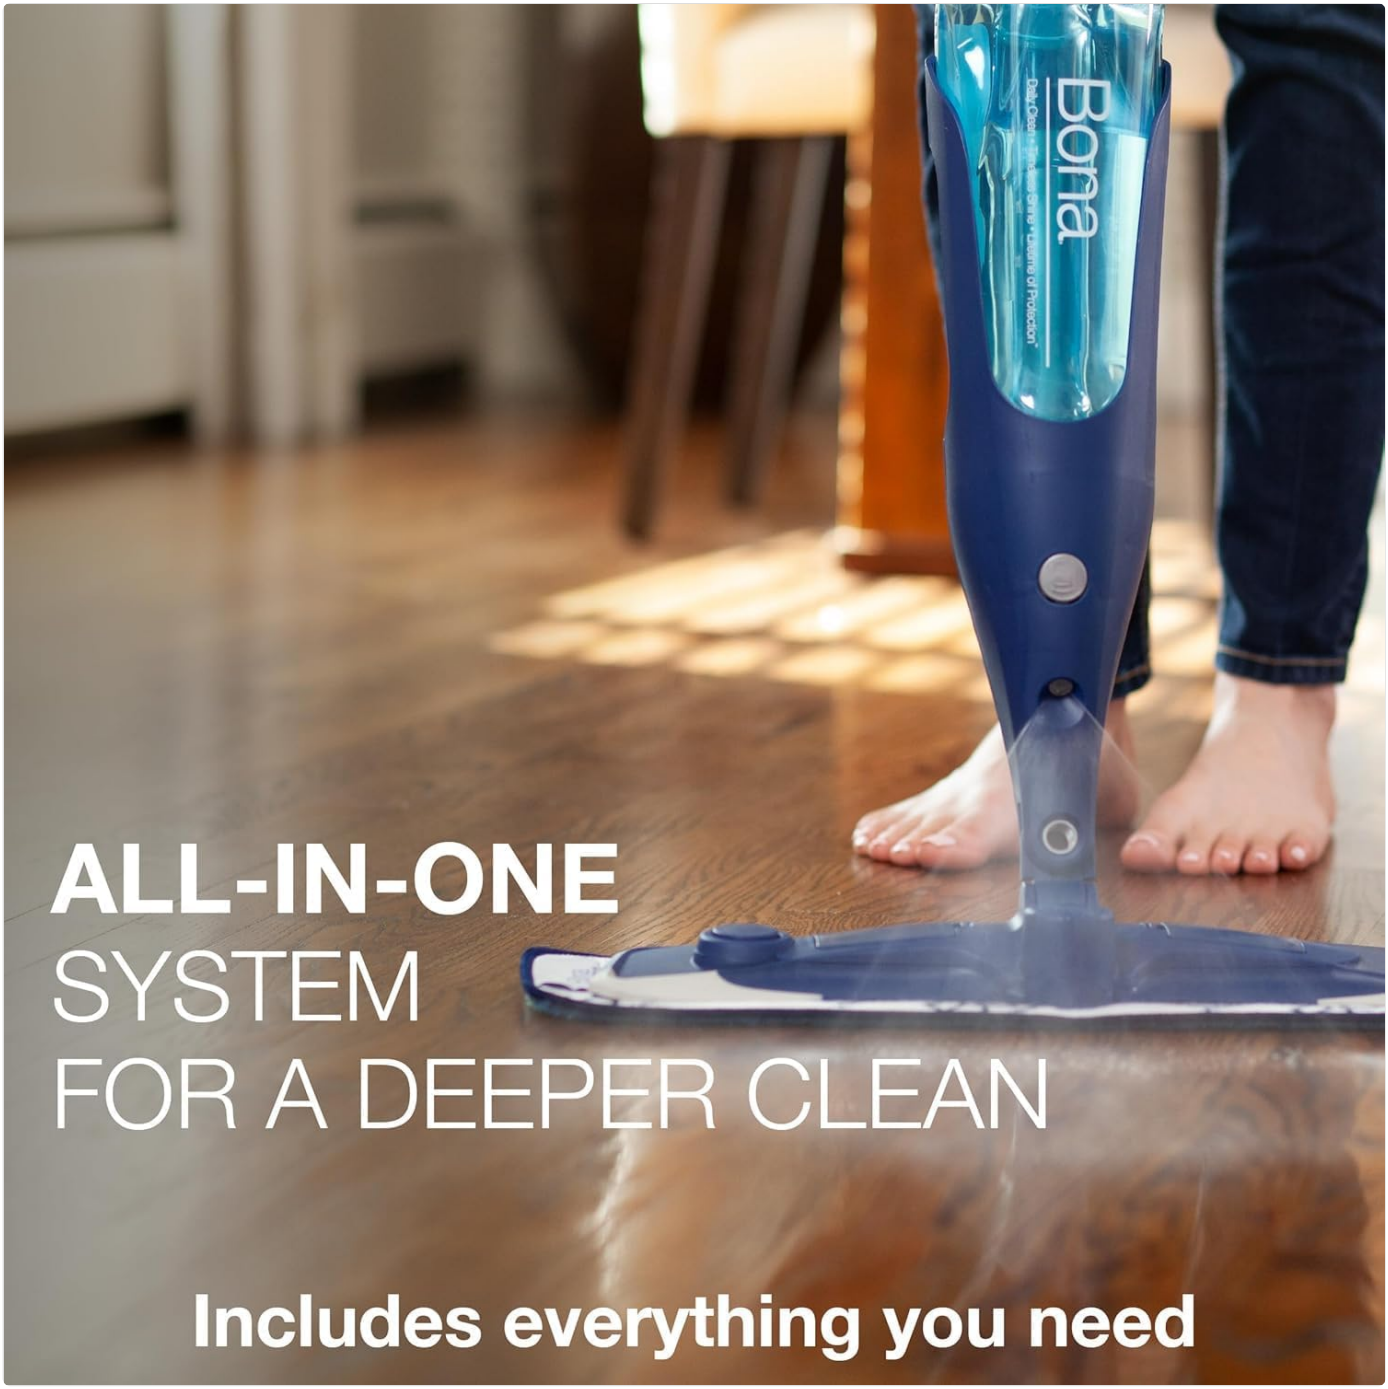


Figure 1: The Bona PowerPlus Premium Motion Spray Mop, an all-in-one system for deeper cleaning.

2. Components

The Bona PowerPlus Premium Motion Spray Mop includes the following components:

- Premium Motion Spray Mop handle and head assembly
- Pre-filled refillable cartridge with Bona PowerPlus Hardwood Floor Deep Cleaner
- Bona PowerPlus Microfiber Deep Clean Pad


Bona
Bona
Daily Clean • Timeless Shine • Lifetime of Protection

Figure 2: All components of the Bona PowerPlus Premium Motion Spray Mop.

3. Setup

1. **Assemble the Mop:** Connect the handle sections by aligning and snapping them together until secure.
2. **Insert Cleaning Cartridge:** Ensure the pre-filled Bona PowerPlus Hardwood Floor Deep Cleaner cartridge is securely inserted into the designated slot on the mop handle. It should click into place.
3. **Attach Microfiber Pad:** Secure the Bona PowerPlus Microfiber Deep Clean Pad to the bottom of the mop head using the Velcro strips. Ensure it is centered and firmly attached.



Figure 3: Inserting the pre-filled cleaning solution cartridge.

Your browser does not support the video tag.

Video 1: This video demonstrates the assembly of the mop, including how to insert the cleaning solution cartridge and attach the microfiber pad.

4. Operating Instructions

1. **Prepare the Area:** For best results, vacuum or sweep the floor to remove loose dirt and debris before mopping.
2. **Activate Spray:** Press the trigger on the handle to release a fine mist of cleaning solution onto the floor. The vibrating mop head will activate automatically.
3. **Mop the Floor:** Glide the mop over the floor in a back-and-forth motion. The vibrating action helps loosen tough messes, while the microfiber pad captures dirt and grime.
4. **Protect Baseboards:** The flexible rubber corners of the mop head are designed to protect baseboards and furniture from accidental bumps.



Figure 4: The vibrating mop head in action, designed to power through stuck-on messes.

Your browser does not support the video tag.

Video 2: This video highlights the key features of the Bona Mop and demonstrates its operation for effective cleaning.

5. Maintenance

1. **Clean Microfiber Pad:** After each use, detach the microfiber pad from the mop head. The pad is reusable and machine washable up to 500 times. Wash with similar items and air dry for best results.
2. **Refill Cleaning Solution:** When the cartridge is empty, press the release button to remove it. The cartridge is refillable with any economy-size Bona floor cleaner refill or Bona concentrate packet.
3. **Storage:** The mop features a retractable hook for easy storage. Hang the mop in a dry place when not in use.



Figure 5: The Bona PowerPlus Microfiber Deep Clean Pad is reusable and washable.

6. Troubleshooting

- **No Spray:** Ensure the cleaning solution cartridge is properly inserted and clicked into place. Check if the cartridge is empty and refill if necessary.
- **Streaks on Floor:** Rinse and wring the microfiber cleaning pad often during use to avoid streaking. Ensure the pad

is clean before starting.

- **Mop Head Detaches:** Ensure the mop head is securely attached to the handle. If it frequently detaches, inspect the connection points for any damage.

7. Specifications

Feature	Specification
Handle Material	Plastic
Head Material	Microfiber
Number of Items	1
Product Dimensions	28.44 x 5.75 x 4.5 inches
Item Weight	5.8 pounds
Item Model Number	WM710013572
Volume (Cleaner)	34 Fluid Ounces
Batteries Required	Yes
Assembly Required	Yes

8. Cleaning Solution Ingredients

The Bona PowerPlus Hardwood Floor Deep Cleaner contains the following ingredients:

- Water/Aqua
- Hydrogen Peroxide
- PPG-2 Methyl Ether
- Butoxypropanol
- Decyl Glucoside
- Citric Acid
- Sodium Hydroxide
- Fragrance

Note: Meets the U.S. EPA product standards and is Safer Choice Certified. pH-neutral formulation is safe for all unwaxed, unoiled, polyurethane finished wood floors.

9. Safety Information

Use only as directed. Keep out of reach of children and pets. In case of eye contact, rinse thoroughly with water. If irritation persists, seek medical attention. Do not ingest. If swallowed, seek medical advice immediately and show this container or label.

10. Warranty and Support

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Bona website. Contact customer service for assistance with any product-related inquiries.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question