Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Invicta 31316

Invicta Bolt Chronograph Watch Model 31316 User Manual

Comprehensive instructions for your Invicta Bolt Chronograph Watch.

Introduction

The Invicta Bolt Chronograph Watch, Model 31316, is designed for precision timekeeping and robust performance. Featuring a quartz movement and chronograph functionality, this timepiece combines intricate engineering with a distinctive design. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your watch to ensure optimal performance and longevity.



Front view of the Invicta Bolt Chronograph Watch, Model 31316, showcasing its multicolor dial and stainless steel band.

Setup and Initial Use

Your Invicta Bolt Chronograph Watch comes with a pre-installed CR2032 battery. Follow these steps for initial setup.

1. **Unboxing:** Carefully remove the watch from its packaging. Inspect for any visible damage.
2. **Crown Position:** The watch crown (the knob on the side) typically has multiple positions.
    - **Position 0 (Pushed In):** Normal operating position.
    - **Position 1 (Pulled Out One Click):** Used for setting the date.
    - **Position 2 (Pulled Out Two Clicks):** Used for setting the time.
3. **Setting the Time:**
    a. Pull the crown out to Position 2.
    b. Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
    c. Once the time is set, push the crown back into Position 0.

4. **Setting the Date:**
    a. Pull the crown out to Position 1.
    b. Turn the crown to adjust the date display. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
    c. Once the date is set, push the crown back into Position 0.



Side view of the watch, highlighting the crown and chronograph pushers for time and date adjustments.

Operating the Chronograph Function

The chronograph function allows you to measure elapsed time independently of the main time display.

1. **Starting the Chronograph:** Press the upper pusher (button A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stopping the Chronograph:** Press the upper pusher (button A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.

3. **Resetting the Chronograph:** After stopping the chronograph, press the lower pusher (button B) to reset all chronograph hands to their zero positions.
4. **Split Time Function (if applicable):** Some chronographs allow for split time measurement. Consult the specific movement instructions if your model supports this.

Note: Avoid operating the chronograph pushers while the watch is submerged in water to prevent water ingress.

Maintenance and Care

- **Cleaning:** Wipe your watch regularly with a soft, dry cloth to remove dust and dirt. For stainless steel parts, a slightly damp cloth can be used, followed by a dry cloth. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** This watch is water resistant to 100 meters (10 ATM). This means it is suitable for swimming and snorkeling, but not for diving. Ensure the crown is fully pushed in before any water exposure. Do not operate pushers or crown while submerged.
- **Temperature Extremes:** Avoid exposing your watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect its accuracy and seals.
- **Magnetic Fields:** Keep your watch away from strong magnetic fields, such as those produced by speakers, refrigerators, or mobile phones, as they can affect the quartz movement's accuracy.
- **Battery Replacement:** The watch uses one CR2032 battery. When the battery runs low, the second hand may start skipping seconds or stop entirely. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.
- **Strap Care:** The stainless steel band should be cleaned periodically. For rubber or silicone straps, wash with mild soap and water.

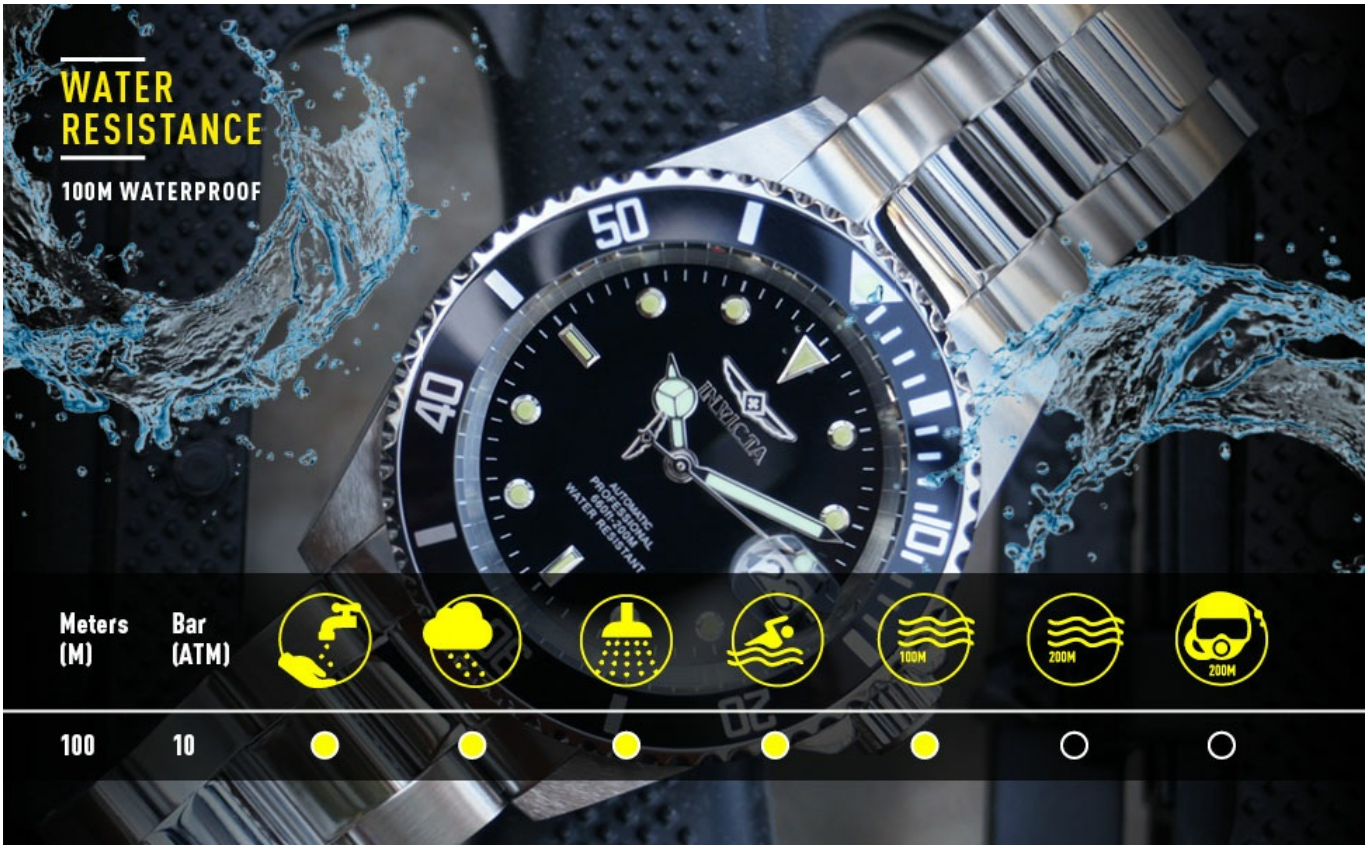


Image illustrating the water resistance feature of Invicta watches, suitable for swimming and snorkeling.

Troubleshooting

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Low or dead battery.	Replace the battery. Consult a professional watch technician.
Time is incorrect.	Crown not fully pushed in; accidental adjustment; exposure to strong magnetic fields.	Reset the time (see "Setting the Time"). Ensure the crown is fully pushed in. Keep away from magnetic sources.
Date is incorrect or not changing.	Incorrect date setting; date set during restricted hours (9 PM - 3 AM).	Reset the date (see "Setting the Date"). Avoid setting the date during the restricted period.
Chronograph hands do not reset to zero.	Requires calibration.	Consult the specific movement instructions for chronograph hand calibration, or seek professional service.
Condensation inside the watch.	Water ingress due to damaged seal or crown/pushers operated underwater.	Immediately take the watch to a professional for inspection and repair to prevent further damage.

Specifications

Feature	Detail
Model Number	31316
Movement Type	Quartz
Display Type	Analog
Dial Color	Multicolor
Case Material	Stainless Steel
Case Diameter	50 mm
Case Thickness	11 mm
Band Material	Stainless Steel
Band Color	Multicolor (Rose Gold tone in images)
Band Width	50 mm
Crystal Material	Flame Fusion Glass
Water Resistance Depth	100 Meters (10 ATM)
Special Features	Chronograph, Date Display
Battery Type	1 x CR2032 (included)
Item Weight	200 g
Country of Origin	USA (Manufacturer: Thailand)



Rear view of the watch, displaying the model number (31316) and water resistance rating.

Warranty and Support

Your Invicta Bolt Chronograph Watch, Model 31316, is covered by a **2-Year International Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Water damage if the crown or pushers were not properly secured or operated underwater.
- Battery replacement.
- Physical damage to the case, crystal, or strap.
- Unauthorized repairs or modifications.

For warranty claims or service inquiries, please contact the authorized Invicta service center in your region. You may also reach out to the importer/packer for support:
Importer/Packer Contact Information:
Designer World Brands LLP.

F1-4, Pinnacle Business Park, First Floor, Next to Ahura Centre,
Mahakali Caves Road, Andheri East, Mumbai - 400093, India.
Please retain your proof of purchase for warranty validation.



The Invicta watch packaging, which should be retained along with proof of purchase for warranty purposes.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08B16FZWV

More documents and user manuals: **https://manuals.plus/**