**Ariete 4137**

# Ariete 4137 Vaporì Jet Steam Gun User Manual

Model: 4137

## Introduction

This manual provides instructions for the safe and effective use of your Ariete 4137 Vaporì Jet Steam Gun. This handheld steam cleaner is designed for deep cleaning and sanitizing various surfaces using the natural power of steam, eliminating 99.9% of germs and bacteria without chemical detergents.

## Important Safety Information

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always ensure the appliance is unplugged before filling or emptying the water tank.
- Do not open the safety cap while the appliance is under pressure or hot.
- Keep the steam jet away from people, animals, and electrical appliances.
- Do not immerse the appliance in water or other liquids.
- Use only tap water. Do not add detergents, perfumes, or other chemicals to the water tank.
- This appliance is for household use only.
- Supervise children to ensure they do not play with the appliance.

## Package Contents

Verify that all components are present and in good condition:

- Ariete 4137 Vaporì Jet Steam Gun
- 90° Nozzle
- Slit Nozzle

- Small Round Brush
- Fabric Brush with Cloth
- Window Cleaner Accessory
- Flexible Extension Hose
- Measuring Cup
- Funnel




Image: The Ariete 4137 Vaporì Jet Steam Gun shown with its complete set of accessories, including various nozzles, brushes, a flexible extension, measuring cup, and funnel.




Image: A detailed diagram illustrating the steam gun and each accessory, including the measuring cup, funnel, flexible extension, 90° nozzle, round brush, slit nozzle, window cleaner, and fabric brush with cloth.

## Setup and First Use

1. **Unpack:** Carefully remove the steam gun and all accessories from the packaging.
2. **Fill Water Tank:**
    - Ensure the appliance is unplugged and cool.
    - Unscrew the safety cap counter-clockwise.
    - Using the provided measuring cup and funnel, fill the water tank with up to 250 ml of tap water. Do not overfill.
    - Screw the safety cap back on clockwise until tight.
3. **Attach Accessory:** Select the appropriate accessory for your cleaning task and securely attach it to the steam gun nozzle.
4. **Power On:** Plug the appliance into a suitable power outlet. The indicator light will illuminate, signaling that the unit is heating.

5. **Heat Up:** The steam gun will be ready to use in approximately 3 minutes when the indicator light turns off or changes color (refer to specific model indicator behavior if different).

## Operating Instructions

Once the steam gun is heated, you can begin cleaning. The appliance provides up to 15 minutes of continuous steam.

1. **Activate Steam:** Press and hold the steam activation button on the handle to release steam. Release the button to stop the steam flow.
2. **Cleaning Surfaces:** Direct the steam jet towards the surface to be cleaned. For best results, hold the accessory close to the surface.
3. **Using Accessories:**
    - **Fabric Brush with Cloth:** Ideal for sanitizing and refreshing textiles like curtains, sofas, and upholstery.
    - **Window Cleaner Accessory:** Use with the flexible extension for streak-free cleaning of glass, mirrors, and windows.
    - **Injector Nozzle (Slit Nozzle):** Designed for removing stubborn and encrusted dirt, such as on kitchen hobs or grout lines.
    - **90° Angled Spout:** Reaches hidden areas like the back of radiators or tight corners.
    - **Multi-purpose Round Brush:** Suitable for scraping and sanitizing various hard surfaces.




Image: Examples of the steam gun in use, demonstrating its versatility on windows, upholstery, radiators, and kitchen stovetops.




Image: The steam gun being used to sanitize a backpack and a school uniform, highlighting its ability to clean and refresh fabrics.





Image: The steam gun with a brush attachment cleaning around a sink drain, demonstrating its effectiveness on small, intricate areas.

## Maintenance and Storage

### After Each Use:

- **Unplug:** Always unplug the appliance from the power outlet.
- **Cool Down:** Allow the steam gun to cool completely before handling or storing.
- **Empty Water Tank:** Carefully unscrew the safety cap (only when cool) and empty any remaining water from the tank.
- **Clean Accessories:** Wash accessories with warm, soapy water if necessary and allow them to dry thoroughly.
- **Wipe Down:** Wipe the exterior of the steam gun with a damp cloth. Do not use abrasive cleaners.

### Storage:

Store the steam gun and its accessories in a dry, safe place, out of reach of children.

## Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| No steam or low steam pressure. | Water tank is empty or low. Appliance not heated sufficiently. Safety cap not fully tightened. | Refill the water tank (ensure appliance is unplugged and cool). Wait for the appliance to heat up (approx. 3 minutes). Ensure the safety cap is securely tightened. |
| Water leaking from nozzle. | Accessory not properly attached. Appliance not fully heated, causing water to condense. | Ensure the accessory is securely attached. Allow the appliance to heat up completely before use. |
| Indicator light not illuminating. | Appliance not plugged in. Power outlet malfunction. | Check if the power cord is securely plugged into a working outlet. Test the outlet with another appliance. |

If the problem persists after attempting these solutions, please contact customer support.

## Technical Specifications

| Feature | Detail |
|---|---|
| Brand | Ariete |
| Model Name | 4137 |
| Power / Wattage | 1050 Watts |
| Tank Volume | 250 Milliliters |
| Heat Time | 3 Minutes |
| Continuous Steam Autonomy | Up to 15 minutes |
| Product Dimensions (L x W x H) | 28.5 x 14.5 x 22.5 cm |
| Item Weight | 1.5 Kilograms |
| Form Factor | Handheld |
| Special Features | Portable |
| Surface Recommendation | Carpet, Floor, Upholstery |




**DIMENSIONI**
**L** 28.5 cm **x P** 14.5 cm **x A** 22.5 cm

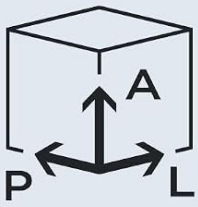



Image: A visual representation of the steam gun's dimensions: Length 28.5 cm, Width 14.5 cm, Height 22.5 cm.

## Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Ariete website. Keep your proof of purchase for warranty claims.
For further assistance, you may contact Ariete customer service through their official channels.

© 2025 Ariete. All rights reserved.
This manual is for informational purposes only.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**