Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

RYOBI A95MPK1

RYOBI Multi-Purpose Cleaning Kit A95MPK1 Instruction Manual

Model: A95MPK1

1. Introduction

This manual provides instructions for the safe and effective use of the RYOBI Multi-Purpose Cleaning Kit, model A95MPK1. This 4-piece kit is designed for various cleaning applications, offering versatility for kitchen, bathroom, and outdoor tasks. Please read this manual thoroughly before first use and retain it for future reference.

2. Safety Information

Always observe basic safety precautions when using any cleaning tools. Failure to follow these instructions may result in injury or damage to property.

- Wear appropriate personal protective equipment, such as safety glasses, to protect against splashes or debris.
- Ensure the cleaning area is well-ventilated, especially when using cleaning agents.
- Keep hands and loose clothing away from rotating parts if using with a power tool.
- Do not use on surfaces that may be easily scratched or damaged by abrasive bristles. Test on an inconspicuous area first.
- Keep out of reach of children.

3. Package Contents

The RYOBI Multi-Purpose Cleaning Kit A95MPK1 includes the following items:

- (1) RYOBI Brush Handle
- (1) 360-Degree Medium Bristle Nylon Brush
- (1) Cone Medium Bristle Nylon Brush
- (1) 3.5 in. Medium Bristle Nylon Brush



Image: All components of the RYOBI Multi-Purpose Cleaning Kit A95MPK1, including the brush handle and three different brush attachments.

4. Product Overview

The RYOBI Multi-Purpose Cleaning Kit provides versatile cleaning solutions. Each brush features moderately stiff nylon bristles suitable for various surfaces. The brushes are designed with a Hex Shank for compatibility with the included RYOBI Brush Handle, as well as RYOBI 4-Volt Cordless Compact Scrubber (P4400), Drill/Drivers, and ¼ inch Impact Drivers.

4.1 RYOBI Brush Handle



Image: Side view of the RYOBI Brush Handle, showing its ergonomic design and attachment point.

The RYOBI Brush Handle is designed for manual cleaning tasks. It features a comfortable grip and a secure attachment point for the Hex Shank brushes.

4.2 3.5 inch Medium Bristle Nylon Brush



Image: A round, flat 3.5 inch brush with medium yellow nylon bristles and a hex shank connector.

This brush is ideal for flat surfaces and general scrubbing, providing broad coverage for efficient cleaning.

4.3 Cone Medium Bristle Nylon Brush



Image: A cone-shaped brush with medium yellow nylon bristles and a hex shank connector, designed for corners and contoured surfaces.

The cone shape allows this brush to access tight corners, crevices, and contoured surfaces effectively.

4.4 360-Degree Medium Bristle Nylon Brush



Image: A spherical brush with medium yellow nylon bristles and a hex shank connector, suitable for all-around scrubbing.

This spherical brush is designed for all-around scrubbing, making it suitable for irregular shapes and comprehensive cleaning.

5. Setup

To prepare your RYOBI Multi-Purpose Cleaning Kit for use:

1. **Select the appropriate brush:** Choose the brush attachment best suited for your cleaning task and surface type. Refer to the "Application Guide" in Section 6.2 for recommendations.
2. **Attach the brush:**
    - **For RYOBI Brush Handle:** Insert the Hex Shank of the chosen brush into the receiver on the RYOBI Brush Handle until it clicks securely into place.
    - **For Compatible Power Tools (e.g., Drill/Driver, Impact Driver, RYOBI 4-Volt Cordless Compact Scrubber P4400):** Insert the Hex Shank of the chosen brush into the chuck or quick-connect receiver of your power tool. Ensure the brush is securely fastened before operation.
3. **Prepare the cleaning area:** Clear any loose debris and apply your preferred cleaning solution to the surface, if necessary.

6. Operating Instructions

Follow these steps for effective cleaning with your RYOBI Multi-Purpose Cleaning Kit:

6.1 General Usage

1. **Manual Cleaning (with RYOBI Brush Handle):**
    - Hold the RYOBI Brush Handle firmly.
    - Apply moderate pressure and scrub the desired surface in a circular or back-and-forth motion.
    - Rinse the surface and brush as needed.
2. **Power Tool Assisted Cleaning (with compatible power tools):**
    - Ensure the brush is securely attached to the power tool.
    - Start the power tool at a low speed and gradually increase as needed. Avoid excessive speed, which can cause splashing or damage.
    - Apply light to moderate pressure. Let the brush and power tool do the work.
    - Move the brush steadily across the surface, ensuring even cleaning.
    - Periodically rinse the brush and the cleaned surface.

6.2 Compatibility and Application Guide

The following charts illustrate tool compatibility and recommended brush applications:



Image: A chart detailing how to select tools and accessories for cleaning, showing compatibility with Triangle Connector and Hex Shank tools, and different bristle types (Hard, Medium, Soft, Aggressive).

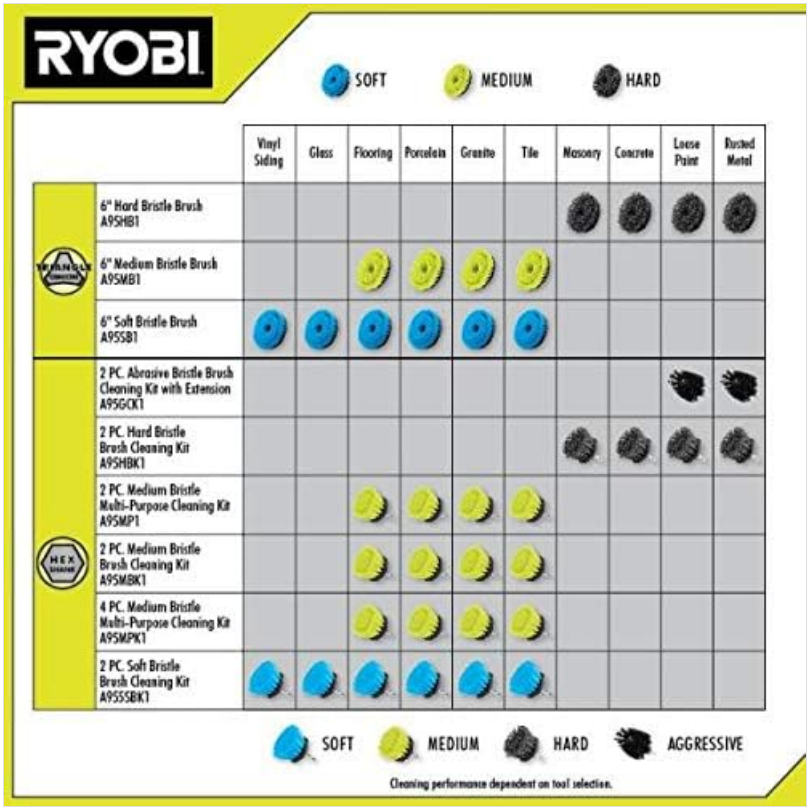


Image: A detailed chart showing recommended RYOBI cleaning brushes (Soft, Medium, Hard, Aggressive) for various surfaces such as Vinyl Siding, Glass, Flooring, Porcelain, Granite, Tile, Masonry, Concrete, Loose Paint, and Rusted Metal.

Note: The brushes in this kit are Medium Bristle Nylon brushes, suitable for general purpose cleaning on surfaces like flooring, porcelain, granite, and tile.

7. Maintenance

Proper maintenance ensures the longevity and effectiveness of your cleaning kit.

- **Cleaning the Brushes:** After each use, rinse the brushes thoroughly with clean water to remove any cleaning solution residue or debris. For stubborn dirt, a mild soap can be used.
- **Drying:** Allow brushes to air dry completely before storing to prevent mildew or damage to bristles. Store them in a dry place.
- **Inspection:** Periodically inspect brushes for wear and tear. Replace brushes if bristles become excessively worn, bent, or damaged, as this can reduce cleaning effectiveness and potentially scratch surfaces.
- **Storage:** Store the RYOBI Brush Handle and brush attachments in a clean, dry location away from direct sunlight and extreme temperatures.

8. Troubleshooting

Problem	Possible Cause	Solution
Brush not cleaning effectively.	Incorrect brush type for surface; bristles worn; insufficient cleaning solution.	Ensure correct brush type is used (refer to Application Guide); replace worn brushes; apply appropriate cleaning solution.
Brush detaches from power tool/handle during use.	Brush not securely fastened.	Ensure Hex Shank is fully inserted and locked into the chuck/receiver. Check for damage to the shank or receiver.

Problem	Possible Cause	Solution
Surface being scratched.	Bristles too abrasive for surface; excessive pressure applied.	Use a softer bristle brush if available; reduce pressure; test on an inconspicuous area first.

9. Specifications

Feature	Detail
Brand	RYOBI
Model Number	A95MPK1
Kit Contents	1 RYOBI Brush Handle, 1 360-Degree Medium Bristle Nylon Brush, 1 Cone Medium Bristle Nylon Brush, 1 3.5 in. Medium Bristle Nylon Brush
Bristle Material	Nylon
Bristle Firmness	Medium
Handle Material	Plastic
Color	Green
Attachment Type	Hex Shank
Compatibility	RYOBI Brush Handle, RYOBI 4-Volt Cordless Compact Scrubber (P4400), Drill/Drivers, ¼ in. Impact Drivers
Item Weight	15.5 ounces
Product Dimensions	7"L x 2"W x 4"H (approximate, for entire kit)

10. Warranty and Support

For information regarding warranty coverage or technical support for your RYOBI Multi-Purpose Cleaning Kit, please refer to the documentation included with your purchase or visit the official RYOBI website. Contact customer service for assistance with product inquiries or issues.
Manufacturer: RYOBI Tools

© 2024 RYOBI. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08BTJQGP9

More documents and user manuals: **https://manuals.plus/**