Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nova NHT 1074

Nova NHT 1074 USB Cordless Rechargeable Beard Trimmer User Manual

Model: NHT 1074

1. Important Safety Instructions

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse the appliance in water or other liquids.
- Do not use the appliance if the blades are damaged or broken, as this may cause injury.
- Only use the charger supplied with the appliance.
- Do not use the appliance while charging.
- Keep the appliance away from heat sources and direct sunlight.
- Ensure your hands are dry when handling the appliance and charger.

2. Package Contents

Carefully unpack your Nova NHT 1074 Trimmer. Ensure all items are present:

- Main Trimmer Unit
- 3 Stubble Guide Combs (3mm, 6mm, 9mm)
- USB Charging Cable
- Instruction Manual

3. Product Overview

The Nova NHT 1074 is a cordless, rechargeable beard trimmer designed for precise grooming. It features self-sharpening stainless steel blades and multiple length settings for versatile styling.



Figure 1: Overview of the Nova NHT 1074 Trimmer highlighting its compact design, 4 length settings (0.5mm to 9mm), 30 minutes run time, 3 stubble combs, and charge indicator.



Figure 2: Detail of the trimmer's stainless steel, self-sharpening blades, designed for durability and precision.

4. Setup

4.1 Charging the Trimmer

1. Ensure the trimmer is switched off.
2. Connect the USB charging cable to the trimmer's charging port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, USB wall adapter).
4. The charge indicator light will illuminate during charging.
5. Allow approximately 8 hours for a full charge. A full charge provides up to 30 minutes of cordless usage.
6. Disconnect the charger once fully charged or before use.



Figure 3: The Nova NHT 1074 Trimmer being charged via USB, illustrating its convenient charging method.



Figure 4: Detail of the trimmer's charge indicator and information on its 30-minute runtime from a rechargeable battery.

4.2 Attaching and Detaching Guide Combs

- **To Attach:** Align the desired guide comb (3mm, 6mm, or 9mm) with the trimmer head and push it firmly until it clicks into place.
- **To Detach:** Gently push the comb upwards from the base and pull it away from the trimmer head.

5. Operating the Trimmer

5.1 Power On/Off

Press the power button located on the front of the trimmer to turn it on or off.

5.2 Trimming without a Guide Comb

For a close trim (approximately 0.5mm), operate the trimmer without any guide comb attached. Use gentle pressure and move the trimmer against the direction of hair growth. Be cautious as the blades are precise; avoid excessive pressure on

the skin.

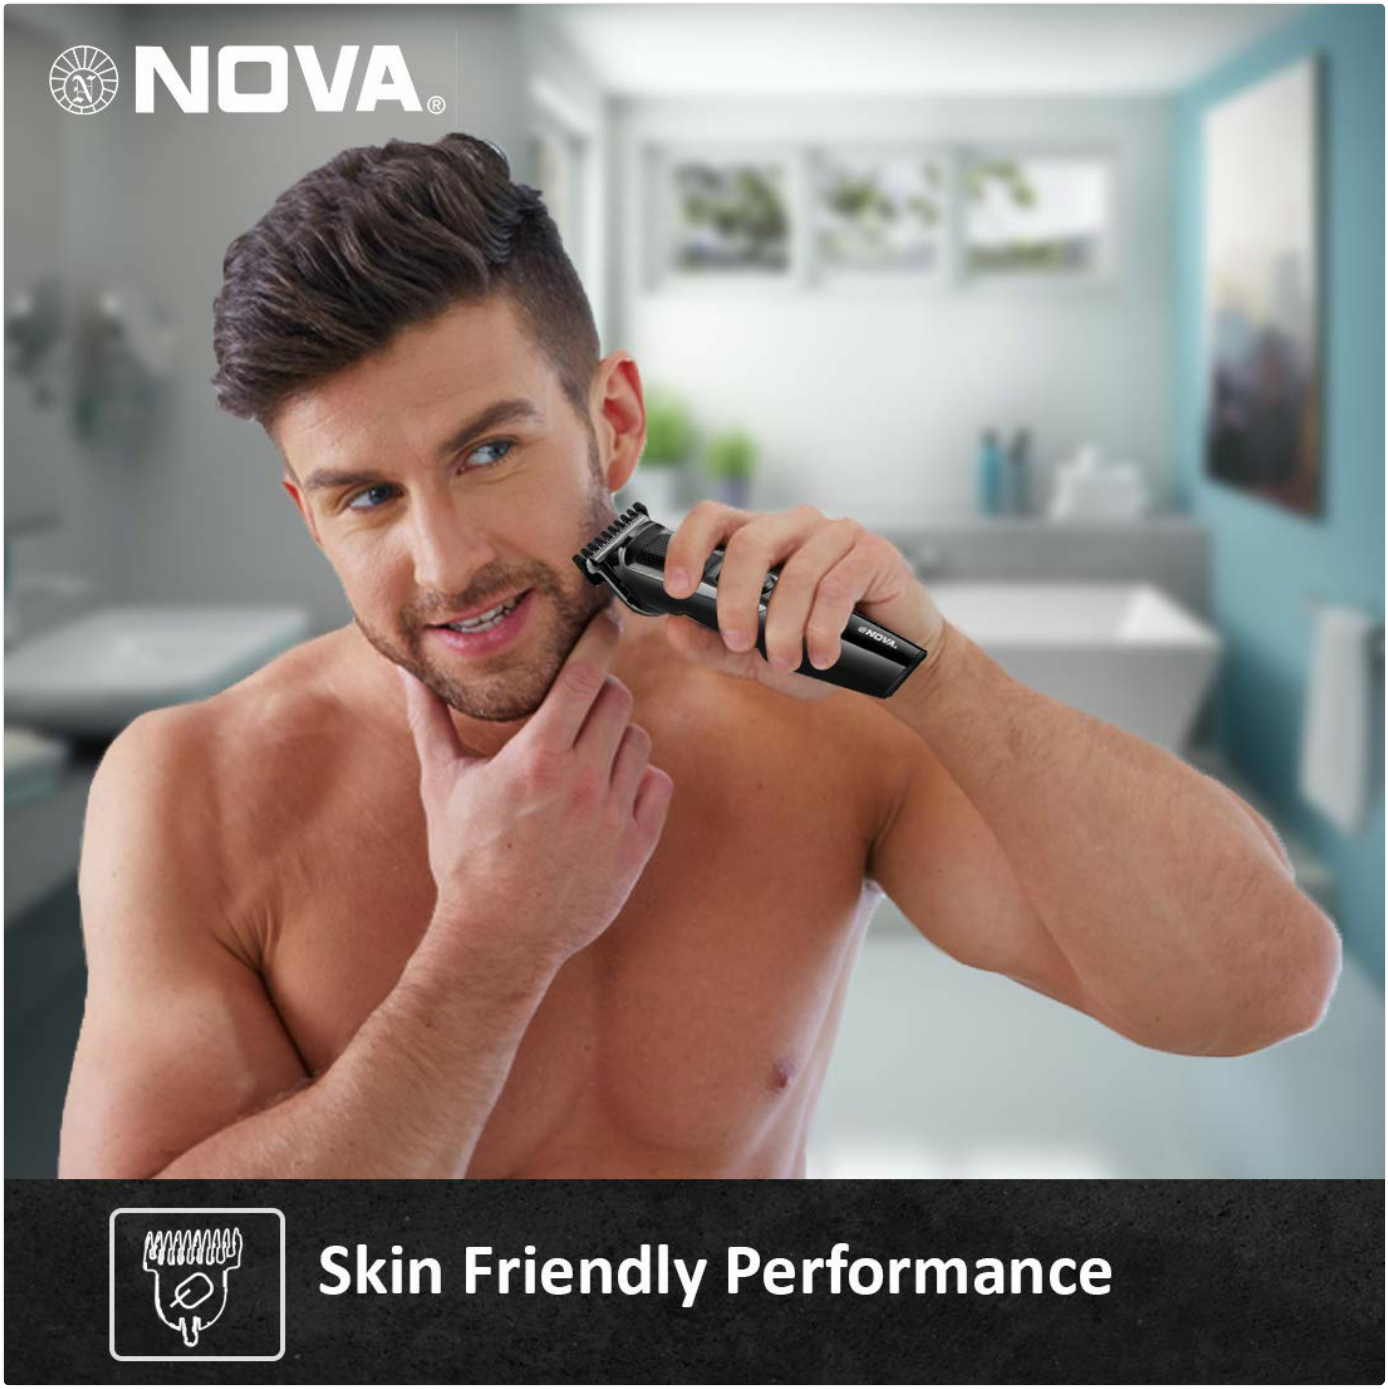


Figure 5: Illustrates the trimmer in use, emphasizing its skin-friendly performance due to rounded blade tips.

5.3 Trimming with Guide Combs

Select the desired guide comb (3mm, 6mm, or 9mm) for your preferred beard length. Attach it securely before turning on the trimmer. Move the trimmer slowly against the direction of hair growth, ensuring the comb maintains contact with the skin for an even trim.

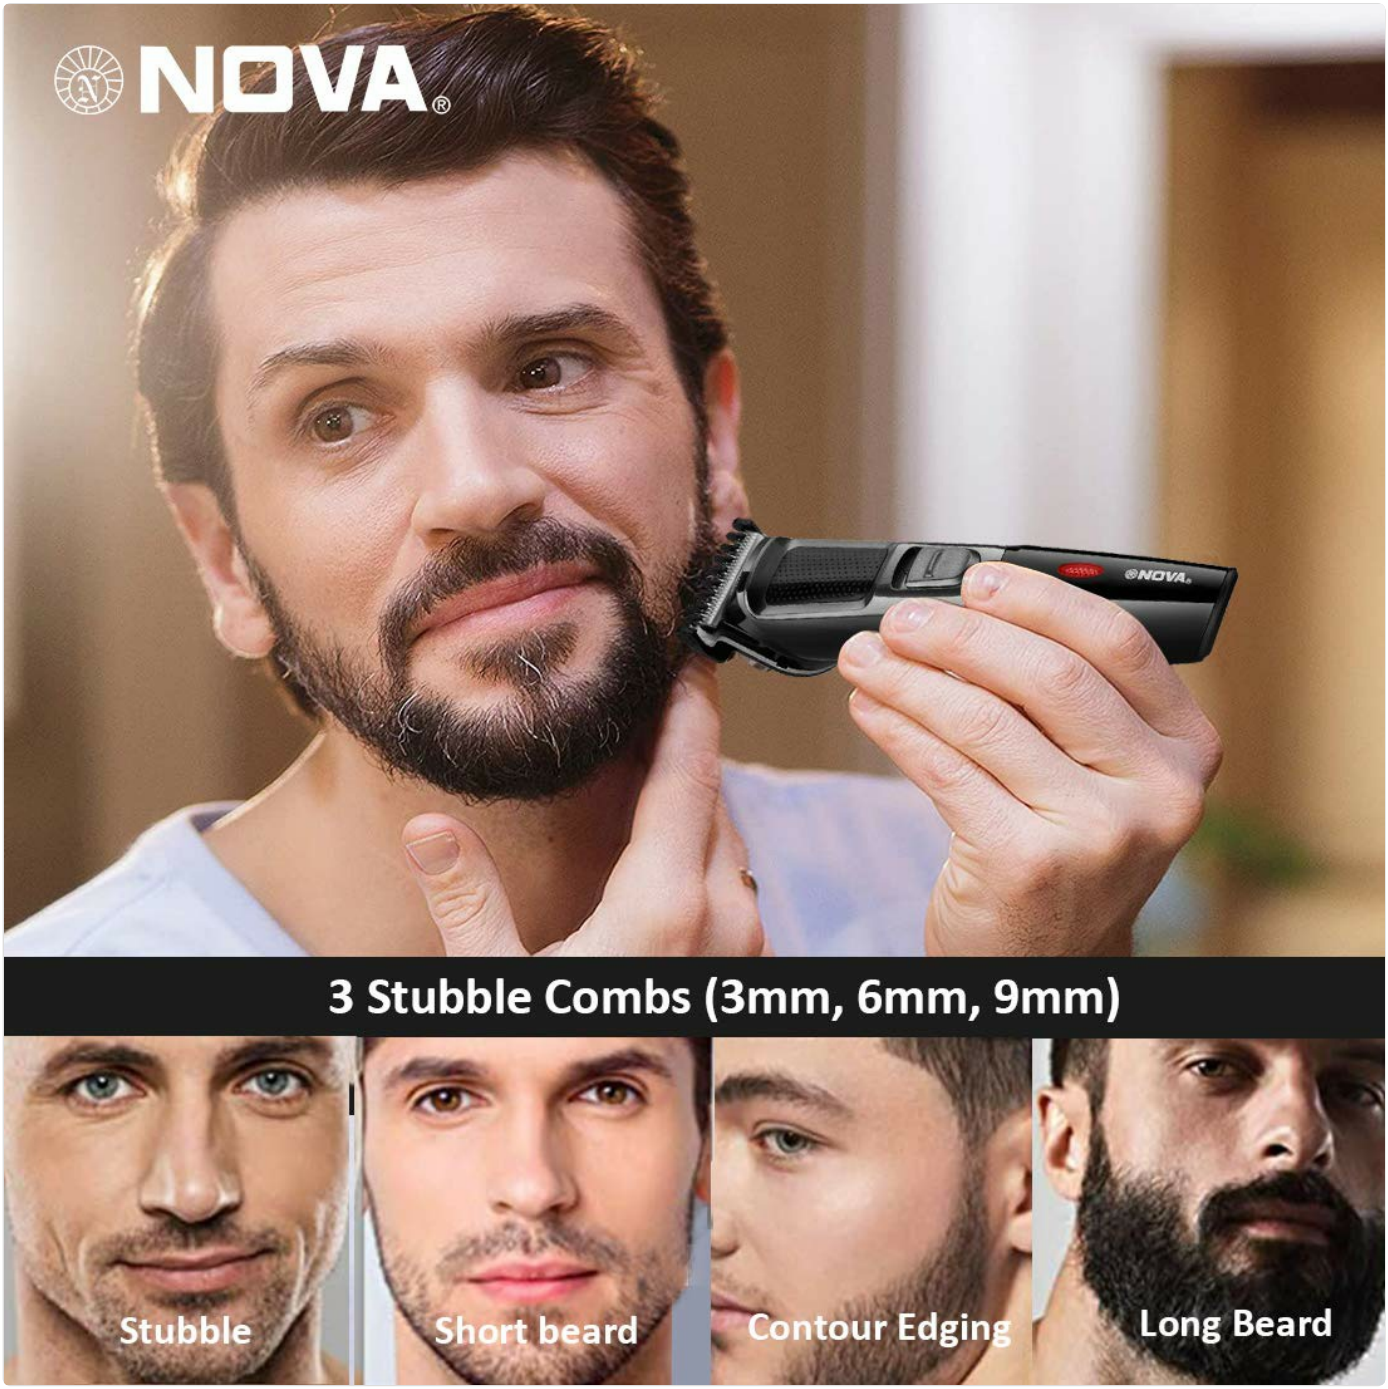


Figure 6: Demonstrates the versatility of the 3 stubble combs (3mm, 6mm, 9mm) for achieving various beard styles, from stubble to long beard maintenance.



Figure 7: Highlights the high precision blades and the four available length settings for detailed grooming.



Figure 8: Features of the trimmer including its easy anti-slip grip, cordless operation, and low noise level for a comfortable grooming experience.



Figure 9: The trimmer held in hand, showcasing its ergonomic design for comfortable and controlled use.

6. Maintenance

6.1 Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene:

1. Ensure the trimmer is switched off and disconnected from any power source.
2. Remove the guide comb.
3. The trimmer head and comb are fully washable. Rinse them under running water to remove hair clippings.
4. Allow all parts to air dry completely before reassembling or storing.
5. Do not immerse the main body of the trimmer in water.

6.2 Blade Lubrication

The trimmer blades come with a prior lubricant coating. Over time, this lubricant may dry up, potentially causing increased friction and heating. To maintain smooth operation:

- Apply a small drop of coconut oil to the underside of the blades if required.
- Run the trimmer for a few seconds to distribute the oil evenly.
- Wipe off any excess oil.

6.3 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and out of reach of children.

7. Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is discharged.	Charge the trimmer for 8 hours.
Reduced trimming performance or pulling hair.	Blades are dull or clogged with hair. Blades need lubrication.	Clean the blades thoroughly. Apply a small amount of coconut oil to the blades.
Trimmer stops working during use.	Hair is stuck in the blades. Battery is low.	Turn off the trimmer, clean the blades. Recharge the trimmer.
Trimmer gets hot during use.	Blades lack lubrication. Prolonged use.	Lubricate the blades. Allow the trimmer to cool down before continuing use.

8. Specifications

Model Number	NHT 1074
Power Source	Battery Powered (Rechargeable)
Battery Type	1 AA battery (included)
Charging Time	Approx. 8 hours
Runtime	Up to 30 minutes (cordless)
Blade Material	Stainless Steel (Self-sharpening)
Minimum Cutting Length	0.5 mm
Maximum Cutting Length	9 mm
Included Guide Combs	3 (3mm, 6mm, 9mm)
Special Features	Portable, Rechargeable, Waterproof (head and comb)
Product Dimensions	10 x 12 x 12 cm
Item Weight	190 g

9. Warranty Information

This Nova NHT 1074 Trimmer comes with a**1-year Brand Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

Please retain your purchase receipt as proof of purchase for warranty claims.

10. Customer Support

For any queries, assistance, or warranty claims, please contact Nova customer service or the retailer from whom you purchased the product.
Manufacturer: NOVA MANUFACTURING INDUSTRIES LTD, HONGKONG
Importer: OMNI EXIM PVT LTD, KATHA BAZZAR, MUMBAI - 400009

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08BXH1QNL

More documents and user manuals: **https://manuals.plus/**