Franke 112.0606.785

FRANKE Vital High Flow Kitchen Tap Filter User Manual

Model: 112.0606.785

Introduction

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of your FRANKE Vital High Flow Kitchen Tap Filter Set. Please read this manual carefully before use to ensure proper function and longevity of your product.
The FRANKE Vital High Flow filter system is designed to provide safe and great-tasting water directly from your kitchen tap. It features a 3-stage filtration process:

1. Pre-filter
2. Patented membrane
3. Activated carbon

Product Overview

The FRANKE Vital High Flow Kitchen Tap Filter set includes three replacement filter cartridges. These filters are designed for maximum capacity within a minimal size, offering a fast flow rate and easy replacement.

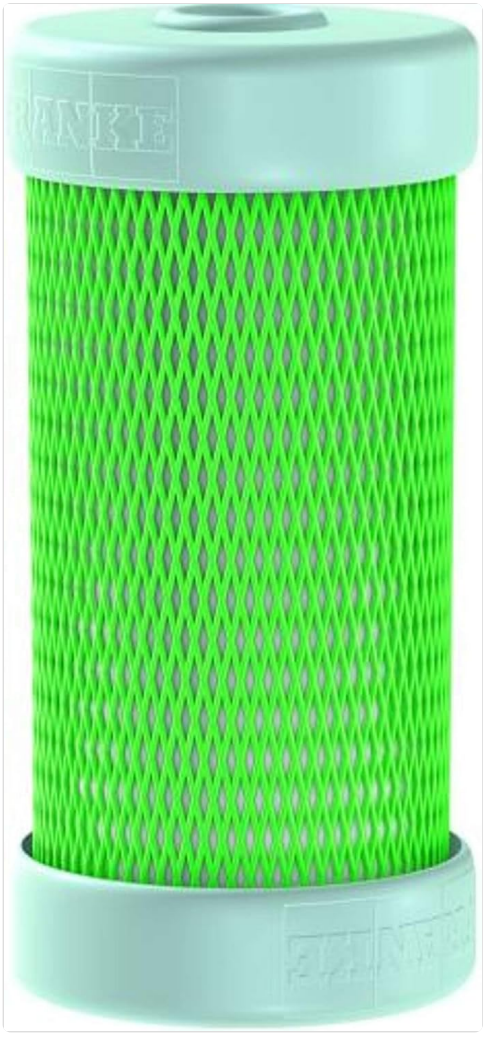


Figure 1: A single FRANKE Vital High Flow green filter cartridge, showcasing its mesh design and light green color. This is the primary component for water filtration.



Figure 2: The packaging for the FRANKE Vital High Flow filter set, showing three individual filter boxes and one green filter cartridge outside the box, indicating a set of three filters.

Setup and Installation

The FRANKE Vital High Flow filter is designed for easy installation and quick replacement. Follow these steps for initial setup or filter replacement.

Required Tools:

- No special tools are typically required for filter replacement.

Installation Steps:

1. **Turn off Water Supply:** Locate the water supply valve to your kitchen tap and turn it off to prevent water flow during installation.
2. **Remove Old Filter (if applicable):** If replacing an existing filter, carefully unscrew or unclip the old filter cartridge from its housing. Be prepared for a small amount of residual water to drip out.
3. **Prepare New Filter:** Unpack a new FRANKE Vital High Flow filter cartridge from its packaging.
4. **Insert New Filter:** Align the new filter cartridge with the filter housing. Gently push and twist (or screw, depending on your tap model) the filter into place until it is securely seated. Ensure a tight seal to prevent leaks.
5. **Restore Water Supply:** Slowly turn the water supply valve back on. Check for any leaks around the filter housing.
6. **Flush the Filter:** Allow water to run through the newly installed filter for several minutes (e.g., 3-5 minutes) to flush out any air bubbles or carbon fines. This ensures optimal performance and taste.



Figure 3: A hand demonstrating the process of inserting a filter cartridge into a compatible kitchen tap system, highlighting the ease of replacement.

Operating Instructions

Once installed and flushed, the FRANKE Vital High Flow filter operates automatically with your kitchen tap. Simply turn on the tap to dispense filtered water.

Key Features:

- **Fastest Flow Rate:** Designed to provide filtered water quickly without significantly reducing tap flow.
- **Safe and Tasty Water:** The 3-stage filtration system effectively reduces impurities, providing clean and great-tasting water.
- **Compact Design:** Maximum capacity with minimal physical size, integrating seamlessly with your existing tap system.

Maintenance

Regular maintenance, primarily filter replacement, is crucial for optimal performance and water quality.

Filter Replacement:

The filter cartridge should be replaced regularly. The lifespan of the filter depends on water quality and usage, but typically, a filter lasts for approximately 500 liters or until the flow rate significantly decreases, or a red indicator light appears on compatible tap systems.

1. Follow the "Installation Steps" outlined in the Setup and Installation section to replace the filter.
2. Dispose of the used filter cartridge according to local regulations.

Cleaning:

The filter cartridge itself does not require cleaning. The tap and filter housing can be cleaned with mild soap and water as needed. Avoid abrasive cleaners.

Troubleshooting

Problem	Possible Cause	Solution
Reduced Water Flow	Clogged filter cartridge.	Replace the filter cartridge.
Unpleasant Taste/Odor	Filter cartridge has reached its capacity or is expired.	Replace the filter cartridge. Ensure proper flushing after replacement.
Water Leaks from Housing	Filter not seated correctly; damaged O-ring/seal.	Ensure the filter is securely installed. Check the O-ring or seal for damage and replace if necessary.
Red Indicator Light (on compatible taps)	Indicates filter needs replacement.	Replace the filter cartridge.

Specifications

Feature	Detail
Brand	Franke
Model Name	Vital High Flow
Part Number	112.0606.785
Filter Type	3-stage filter system (Pre-filter, Patented membrane, Activated carbon)
Item Weight	0.16 Kilograms (approx. 5.5 ounces per filter)
Product Dimensions	0.39"L x 0.39"W x 0.39"H (per filter)
Color	Green

Feature	Detail
Filter Capacity	Up to 500 liters (approximate, depends on water quality)

Warranty Information

For specific warranty details regarding your FRANKE Vital High Flow Kitchen Tap Filter, please refer to the warranty documentation included with your original purchase or visit the official Franke website. Warranty terms typically cover manufacturing defects.
Note: Filters are consumable items and their lifespan is dependent on usage and water quality; they are generally not covered under long-term warranties for wear and tear.

Customer Support

If you have any questions or require further assistance with your FRANKE Vital High Flow Kitchen Tap Filter, please contact Franke customer support through their official website or the contact information provided with your product.
For replacement filters, please refer to the model number**112.0606.785** to ensure compatibility.

© 2024 Franke. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question