**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**HOMCOM 371-008**

# HOMCOM 5-in-1 Kids Scooter Instruction Manual

Model: 371-008

## 1. Introduction

Thank you for choosing the HOMCOM 5-in-1 Kids Scooter. This versatile product is designed to grow with your child, transforming from a push-along ride-on to a balance bike, and finally to a three-wheel scooter. Please read this manual carefully before assembly and use to ensure safe and proper operation. Keep this manual for future reference.




Image 1.1: Child enjoying the HOMCOM 5-in-1 Kids Scooter.

## 2. Safety Information

**WARNING:** Adult supervision is required at all times. Failure to follow these safety instructions may result in serious injury.

- Always wear a helmet and protective gear (knee pads, elbow pads) when riding.
- Do not use on public roads, near motor vehicles, or on steep inclines.
- Ensure all locks, fasteners, and wheels are securely attached before each use.
- Maximum weight capacity: 60 kg (132 lbs).
- Recommended age range: Suitable for children from 1 year old (push-along mode) up to 8 years old (scooter mode).
- The scooter is designed for one rider only.
- Avoid riding in wet conditions, at night, or in areas with poor visibility.
- Regularly check for loose parts, damage, or wear. Replace worn parts immediately.

## 3. Package Contents

Please verify that all components are present and undamaged before assembly.

- Scooter Base with Wheels
- Adjustable Handlebar
- Removable Seat
- Removable Backrest
- Telescopic Push Handle
- Front Basket (Bug-shaped)
- Assembly Tools (if included)
- Instruction Manual




Image 3.1: Packaging and product overview.

## 4. Setup and Assembly

The HOMCOM 5-in-1 Scooter can be configured into three main modes:

1. **Push-Along Ride-On Mode (Approx. 1-2 years):**
   Attach the seat and backrest to the scooter base. Insert the telescopic push handle into the designated slot at the rear of the seat. Ensure all connections are secure. This mode allows parents to push and guide younger children.

2. **Balance Bike Mode (Approx. 2-4 years):**
   Remove the telescopic push handle and backrest. Keep the seat attached. The child can use their feet to propel and steer, developing balance and coordination.

3. **Scooter Mode (Approx. 4-8 years):**
   Remove the seat and backrest. Ensure the handlebar is securely inserted into the scooter base. Adjust the handlebar

height to suit the child's height. This mode allows the child to stand and propel the scooter.

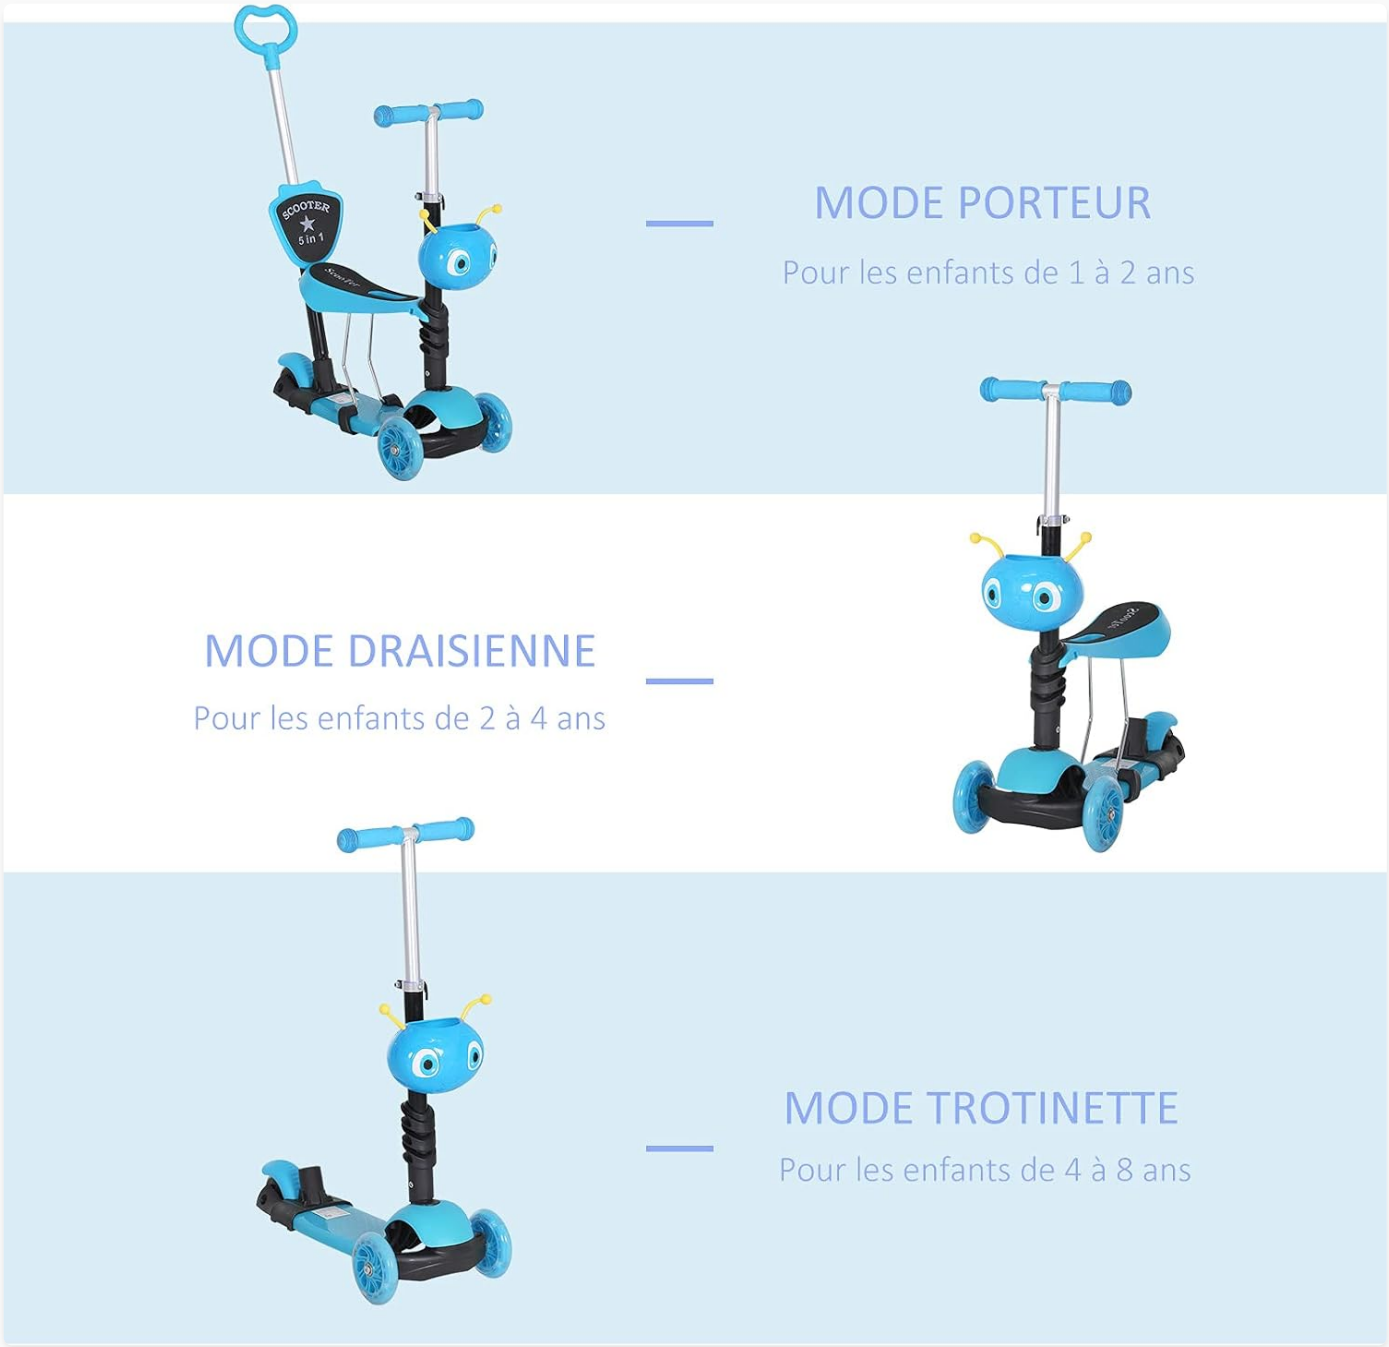



Image 4.1: Different modes of the 5-in-1 scooter.

## 4.1 Adjusting Handlebar and Push Handle Height

The handlebar can be adjusted to 3 different height levels (68 cm, 73 cm, 78 cm) to accommodate your child's growth. To adjust, locate the quick-release clamp on the handlebar stem, open it, adjust the handlebar to the desired height, and securely close the clamp. The telescopic push handle also adjusts to 3 levels (73 cm, 77 cm, 82 cm).




Image 4.2: Adjustable handlebar and push handle.

## 5. Operating Instructions

### 5.1 Steering Mechanism

This scooter features an intuitive lean-to-steer mechanism. To turn, the rider leans their body in the desired direction, which causes the front wheels to pivot. This design helps develop balance and motor skills.

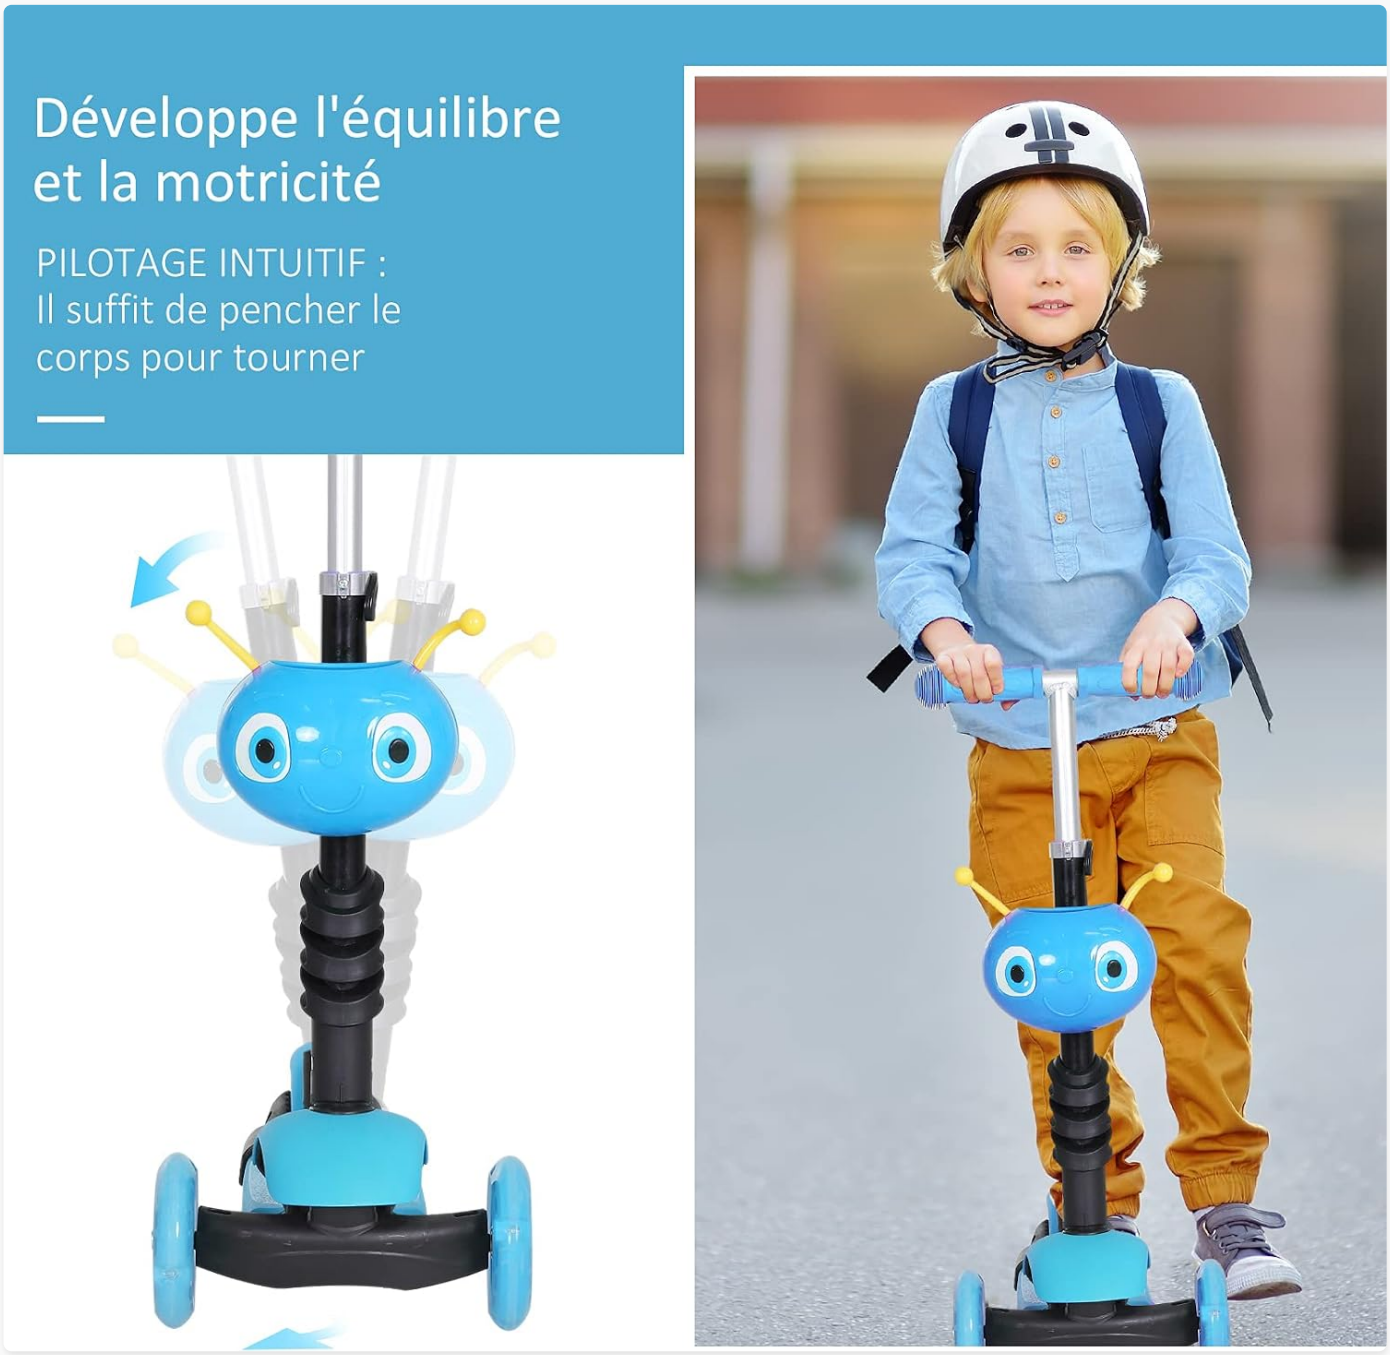



Image 5.1: Lean-to-steer mechanism.

## 5.2 Braking

The scooter is equipped with a rear friction brake. To engage the brake, the rider presses down on the rear fender with their foot. Ensure the brake is functioning correctly before each ride.




Image 5.2: Detailed view of scooter components, including the rear brake.

## 6. Maintenance

- **Cleaning:** Wipe the scooter with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Wheels:** Regularly check the wheels for wear and tear. Ensure they spin freely and are free from debris. The PU wheels offer good grip and shock absorption.
- **Bearings:** If the wheels do not spin smoothly, the bearings may need cleaning or replacement.
- **Fasteners:** Periodically check all screws, bolts, and clamps to ensure they are tight and secure.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures, to prolong its lifespan. The scooter is foldable for easy storage.

## 7. Troubleshooting

- **Wheels not turning smoothly:** Check for debris lodged in the wheels or bearings. Clean if necessary. Ensure wheel

bolts are not overtightened.

- **Steering difficulty:** The lean-to-steer mechanism requires body movement. Ensure the handlebar is securely fastened and not loose. If the steering feels stiff, check for any obstructions or damage to the steering column.
- **Loose parts:** Tighten any loose screws or bolts. If a part is damaged, contact customer support for replacement.

## 8. Specifications

| Feature | Specification |
|---|---|
| Model Number | 371-008BU |
| Dimensions (L x W x H) | 62 x 25 x 73 cm |
| Weight | 3.9 kg |
| Maximum Weight Capacity | 60 kg |
| Frame Material | Aluminum |
| Wheel Material | Polyurethane (PU) |
| Number of Wheels | 3 |
| Handlebar Height Adjustment | 3 levels (68, 73, 78 cm) |
| Push Handle Height Adjustment | 3 levels (73, 77, 82 cm) |
| Special Features | Foldable, Removable Seat |




Image 8.1: Scooter dimensions and weight capacity.

## 9. Product Video

Your browser does not support the video tag.

Video 9.1: Official product video demonstrating the HOMCOM 5-in-1 Kids Scooter's features and different modes of use.

## 10. Warranty and Support

For warranty information or customer support, please refer to the documentation provided with your purchase or visit the official HOMCOM website. Keep your proof of purchase for any warranty claims.

© 2023 HOMCOM. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

**Open the live page**

**https://manuals.plus/asin/B08CXNV2BK**

More documents and user manuals: **https://manuals.plus/**