HOMCOM A70-046V900531

HOMCOM Electronic Dartboard with Cabinet

Model: A70-046V900531

User Manual

1. Introduction

Thank you for purchasing the HOMCOM Electronic Dartboard with Cabinet. This dartboard is designed for entertainment and offers a wide variety of games and features for players of all skill levels. Please read this manual carefully before setup and operation to ensure proper use and to maximize your enjoyment of the product. Keep this manual for future reference.



Image 1.1: HOMCOM Electronic Dartboard mounted on a wall, ready for play.

2. Package Contents

Please check the package contents to ensure all items are present and undamaged:

- 1 x HOMCOM Electronic Dartboard with Cabinet
- 12 x Soft-Tip Darts
- 30 x Replacement Soft Tips
- 1 x 5V Power Adapter
- 1 x User Manual (this document)



Image 2.1: Dartboard with included darts and accessories.

3. Safety Instructions

To prevent injury or damage to the product, please observe the following safety precautions:

- Use only the provided soft-tip darts. Do not use steel-tip darts, as they can damage the electronic board.
- Ensure the dartboard is securely mounted before use.
- Keep children supervised when playing to prevent accidents.
- Do not throw darts at people or animals.
- Use only the specified 5V power adapter.
- Avoid exposing the dartboard to moisture or extreme temperatures.
- Do not attempt to disassemble or repair the dartboard yourself. Contact customer support if issues arise.

4. Setup

4.1 Mounting the Dartboard

The dartboard is designed to be wall-mounted. Choose a sturdy wall location with sufficient space for players to stand and throw darts safely. The recommended throwing distance is 2.37 meters (7 feet 9.25 inches) from the board, and the center of the bullseye should be 1.73 meters (5 feet 8 inches) from the floor.

1. Determine the desired mounting height and mark the screw positions on the wall.
2. Install appropriate wall anchors and screws (not included) suitable for your wall type.
3. Hang the dartboard securely onto the installed screws. Ensure it is level and stable.
4. Open the cabinet doors. These doors provide extra protection for your wall and convenient storage for darts.



Image 4.1: Dartboard cabinet doors open, revealing the playing surface.

4.2 Power Connection

Connect the provided 5V power adapter to the dartboard's power input jack and then plug it into a standard electrical outlet.

5. Operating Instructions

5.1 Control Panel Overview

The dartboard features an intuitive control panel with LED displays and various buttons for game selection, player settings, and sound control.



Image 5.1: Detailed view of the control panel with LED display.



Image 5.2: Close-up of the dartboard playing surface.

5.2 Power On/Off

Press the **POWER** button (if available, otherwise it powers on when plugged in) to turn the dartboard on. The LED display will light up. To turn off, press the **POWER** button again or unplug the adapter.

5.3 Game Selection

The dartboard offers 27 game categories with 202 variations.

- Press the **GAME** button repeatedly to cycle through the 27 main game categories.
- Once a game category is selected, press the **OPTION** button to choose from the available variations within that game.

5.4 Player Selection and Start

- Press the **PLAYER/SCORE** button to select the number of players (up to 8).
- For single-player practice, you can use the **CYBERMATCH** function to play against a computer opponent.
- After selecting the game and number of players, press the **START/NEXT** button to begin the game.

5.5 Automatic Scoring and Voice Feedback

The dartboard features automatic electronic scoring displayed on the 6 LED screens. It also provides English voice feedback for scores and game events. The volume can be adjusted through 8 levels using the **SOUND** button.

5.6 Special Functions

- **DOUBLE:** Activates double-in/double-out options for applicable games.
- **HANDICAP:** Allows setting handicaps for players to balance skill levels.
- **MISS:** Registers a missed throw.
- **ELIMINATE/TEAM:** Used for team play or eliminating players in certain game modes.

6. Maintenance

6.1 Cleaning

Wipe the dartboard and cabinet with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the

surface or electronic components.

6.2 Dart Storage

The cabinet doors are equipped with holders for convenient dart storage. Always store darts in these holders when not in use to prevent loss and keep them organized.



Image 6.1: Darts stored in the cabinet doors.

6.3 Replacing Soft Tips

The soft tips of the darts may wear out or break over time. Replace them with the provided spare tips by unscrewing the old tip and screwing on a new one.

7. Troubleshooting

- **Dartboard does not power on:**
  - Ensure the power adapter is securely plugged into both the dartboard and a working electrical outlet.

- Verify the power outlet is functional.

- **Darts are not registering hits:**
  - Ensure you are using soft-tip darts.
  - Check if the dart tips are bent or broken; replace if necessary.
  - Make sure darts are thrown with sufficient force to penetrate the segment holes.
  - If a segment is consistently not registering, gently check for any debris or obstruction in the hole.
- **Display shows erratic scores:**
  - Reset the dartboard by turning it off and on again.
  - Ensure no darts are stuck in the board from previous throws.
- **No sound or low volume:**
  - Press the **SOUND** button to adjust the volume level.
  - Ensure the dartboard is not in mute mode.

8. Specifications

Model Number:	A70-046V900531
Dimensions (Closed):	51 cm (L) x 6.5 cm (W) x 57 cm (H)
Dimensions (Open):	99.5 cm (L) x 6.5 cm (W) x 57 cm (H)
Weight:	4.7 kg
Material:	PS Plastic, PP Plastic, MDF
Power Input:	5V DC Adapter
Number of Games:	27 Categories
Number of Variations:	202
Max Players:	8
Display:	6 x LED Score Displays
Voice Feedback:	English, 8 Volume Levels
Darts Included:	12 Soft-Tip Darts, 30 Replacement Tips

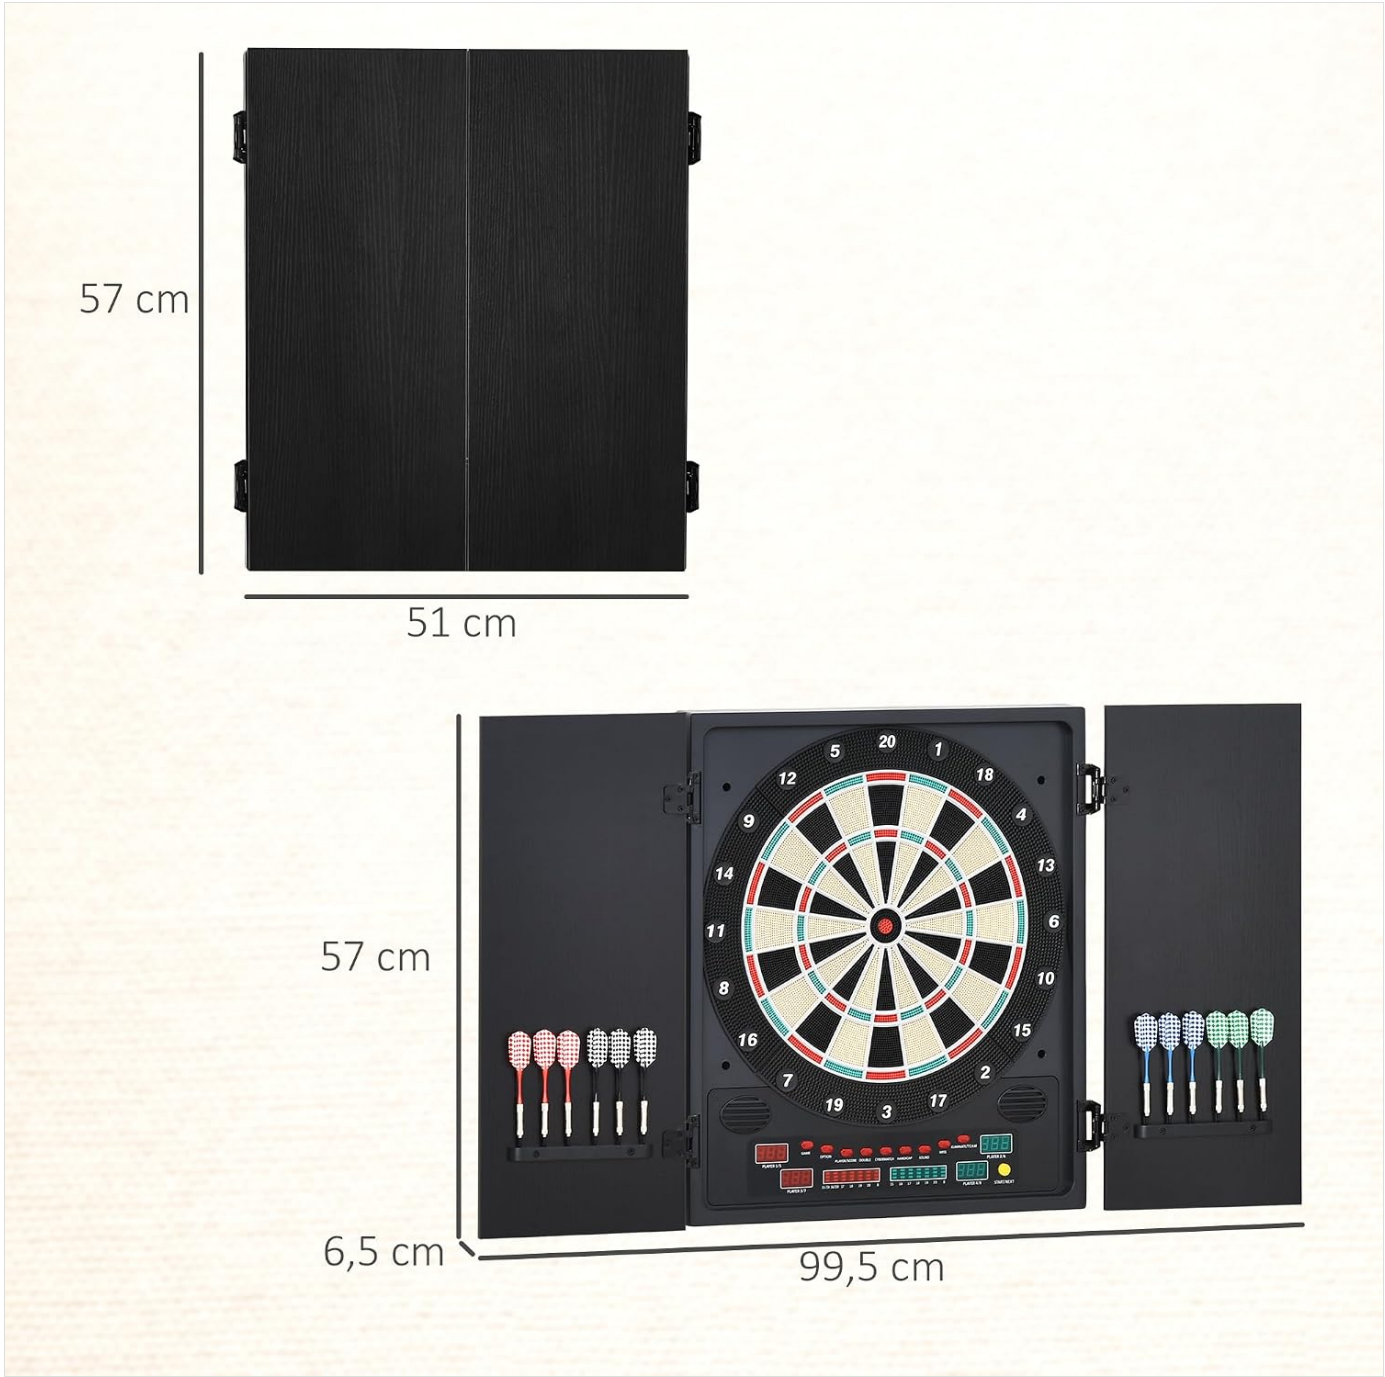


Image 8.1: Product dimensions diagram.

9. Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact HOMCOM customer service directly. Please have your model number (A70-046V900531) and purchase details ready when contacting support.

You can visit the HOMCOM brand store for more information:HOMCOM Official Store

© 2023 HOMCOM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question