Brydge BRY2303

Brydge W-Touch Wireless Precision Touchpad User Manual

Model: BRY2303
Brand: Brydge

Introduction

The Brydge W-Touch Wireless Precision Touchpad is engineered to provide a seamless and intuitive navigation experience for Windows users. Featuring a large, responsive surface and support for Windows Precision Touchpad gestures, it offers an efficient alternative to traditional mice, enhancing productivity and comfort for various computing tasks.

Brydge W-Touch Wireless Precision Touchpad, top-down view.

What's in the Box

- 1 x Brydge W-Touch Wireless Precision Touchpad (Black)
- 1 x USB-C Charging Cable
- 1 x User Manual

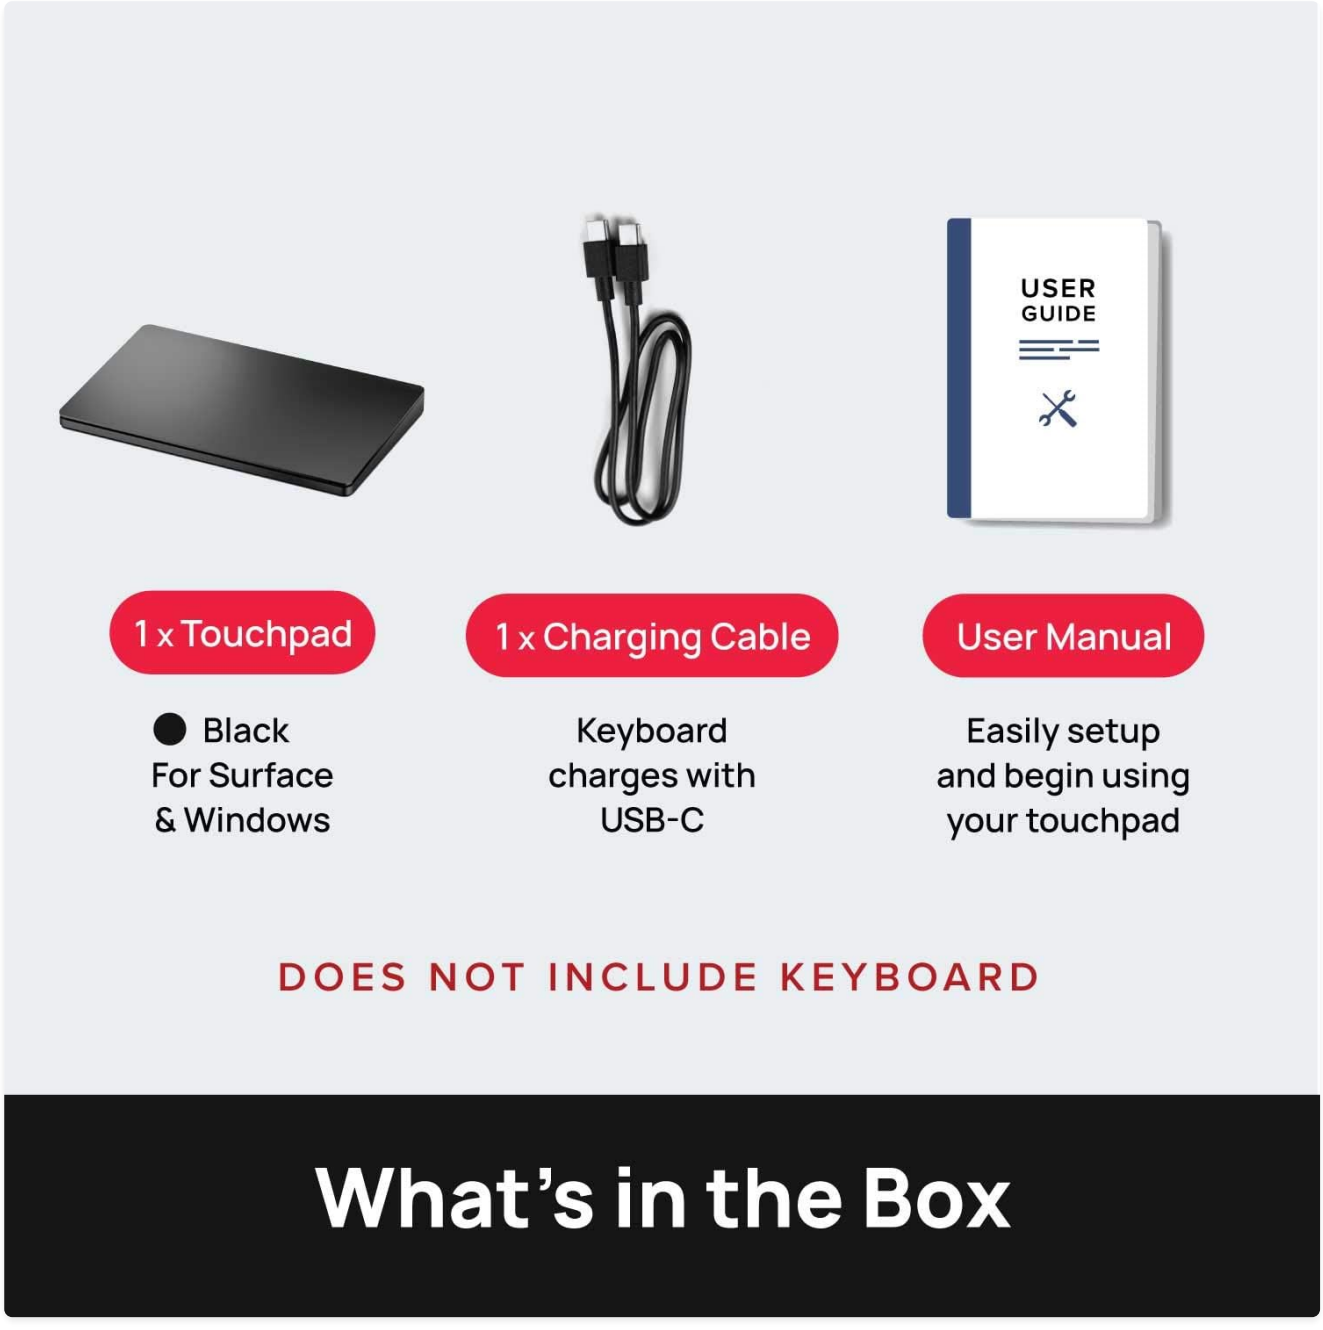

Contents included with your Brydge W-Touch.

Setup and Connectivity

The W-Touch connects wirelessly via Bluetooth. Ensure your Windows device has Bluetooth enabled. For initial pairing, turn on the touchpad and follow the pairing instructions in your Windows settings. The touchpad charges via a USB-C cable, which is included. A full charge provides up to 1-month battery life.

Key connectivity features of the W-Touch.

Pairing Instructions

1. Ensure the W-Touch is charged.
2. Turn on the W-Touch using the power switch.
3. On your Windows device, go to **Settings > Devices > Bluetooth & other devices**
4. Click **Add Bluetooth or other device** and select **Bluetooth**.
5. Select 'Brydge W-Touch' from the list of available devices to complete pairing.

Operating the Touchpad

Experience incredibly fast touch response and full gesture control with 2, 3, or 4 fingers. The large touch area of 140mm x 84mm provides ample space for navigation. Gestures are managed through Windows Precision Touchpad

settings.

Responsive touch and multi-finger gesture support.

Designed for Windows and Microsoft Surface, with a generous touch area.

Windows Precision Touchpad Gestures

The W-Touch leverages Windows Precision Touchpad drivers, allowing for customizable gestures:

- **One-finger tap:** Left-click
- **Two-finger tap:** Right-click
- **Two-finger scroll:** Scroll up/down or left/right
- **Pinch to zoom:** Zoom in/out
- **Three-finger swipe up:** Open Task View
- **Three-finger swipe down:** Show Desktop
- **Three-finger swipe left/right:** Switch between open windows
- **Four-finger tap:** Open Action Center

You can customize these gestures and sensitivity settings in**Settings > Devices > Touchpad**on your Windows device.

Your browser does not support the video tag.

Official product video demonstrating the Brydge W-Touch Wireless Precision Touchpad in use with a desktop computer, showcasing its responsiveness and gesture capabilities.

Maintenance

To maintain optimal performance and extend the lifespan of your Brydge W-Touch, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to gently wipe the touchpad surface. For stubborn smudges, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, store the touchpad in a cool, dry place.
- **Handling:** Avoid dropping the device or exposing it to extreme temperatures, direct sunlight, or liquids.

Troubleshooting

If you encounter issues with your Brydge W-Touch, please refer to the common solutions below:

- **Touchpad not responding or lagging:** The W-Touch may enter a sleep mode after a period of inactivity (approximately 10-20 minutes) to conserve battery. To wake it, perform a physical click on the touchpad. If issues persist, ensure your Bluetooth connection is stable and the touchpad is sufficiently charged. Sometimes, re-pairing the device can resolve connectivity issues.
- **Gestures not working as expected:** Ensure Windows Precision Touchpad drivers are up to date. Adjust gesture settings within Windows System settings by navigating to **Settings > Devices > Touchpad**
- **Battery life shorter than expected:** Ensure the touchpad is fully charged. Excessive use or frequent waking from sleep mode may affect battery duration. Reduce screen brightness on connected devices if applicable, as this can indirectly impact overall system power consumption.
- **Difficulty with physical clicks:** The click mechanism is designed to be more responsive towards the bottom of the touchpad. Ensure you are applying sufficient pressure. Tap-to-click can be enabled in Windows Touchpad settings for a lighter interaction.

Specifications

Feature	Detail
Product Dimensions	5.51 x 3.31 x 0.43 inches (140 x 84 x 11 mm)
Item Weight	9.6 ounces (272 g)

Feature	Detail
Manufacturer	Brydge
ASIN	B08D6XQX14
Item model number	BRY2303
Batteries	1 Lithium Polymer batteries required (included)
Date First Available	July 17, 2020
Brand	Brydge
Compatible Devices	Laptop (Windows)
Connectivity Technology	Bluetooth
Recommended Uses For Product	Office
Special Feature	Trackpad
Color	Black
Style	Modern
Material	Aluminum, Plastic
Included Components	USB Cable

Physical dimensions and material of the Brydge W-Touch.

Warranty and Support

For detailed support, troubleshooting guides, and warranty information, please refer to the official Brydge website or the comprehensive User Manual available as a PDF. Brydge is committed to providing high-quality products and customer satisfaction.

A digital version of the user manual can be found at:Brydge W-Touch User Manual (PDF)

For further assistance, please visit the official Brydge support page or contact their customer service directly.

© 2024 Brydge. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question