GYMAX Massage Gaming Recliner

GYMAX Gaming Recliner User Manual

Model: Massage Gaming Recliner
Brand: GYMAX

Introduction Setup & Assembly Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

Thank you for choosing the GYMAX Gaming Recliner. This manual provides essential information for the safe and efficient use of your new gaming chair. Please read it thoroughly before assembly and operation, and retain it for future reference.
The GYMAX Gaming Recliner is designed to provide maximum comfort and versatility for gaming, watching TV, or relaxing. It features an electric massage lumbar pillow, adjustable backrest and footrest, and is constructed with high-quality, durable materials.



Image Description: The GYMAX Gaming Recliner in pink, showcasing its sleek design and comfortable appearance.

2. Important Safety Information

- Please ensure the chair is fully assembled before use.
- Do not exceed the maximum weight capacity of**330 lbs**.
- Always follow the assembly instructions carefully to avoid injury.
- Keep the chair away from heat sources and sharp objects to prevent damage to the chair and potential injury.
- Do not allow children to play with the reclining mechanism or massage remote control unsupervised.

3. Setup & Assembly

The GYMAX Gaming Recliner is designed for easy assembly with pre-installed components. No additional tools are required.

3.1. Unpacking and Component Check

Carefully remove all components from the packaging. Verify that all parts listed in the user manual are present. The main components include the backrest, seat base, armrests, legs, and massage remote with power adapter.

3.2. Assembly Steps

1. **Attach the Backrest:** Align the metal connectors on the backrest with the corresponding slots on the seat base. Gently push down until the backrest clicks securely into place. Ensure both sides are aligned simultaneously for proper insertion.
2. **Install the Armrests:** Slide the armrests onto the metal brackets on both sides of the backrest. Push them down firmly until they are fully seated.
3. **Screw in the Legs:** Turn the chair upside down. Screw the four legs into the designated holes at each corner of the chair base. Ensure they are tightened securely.
4. **Connect the Massage Unit:** Locate the cables for the massage lumbar cushion. Connect the power adapter cable to the chair's massage unit cable. Insert the power adapter into a standard electrical outlet.

3.3. Assembly Video

For a visual guide, please refer to the official assembly video:

Your browser does not support the video tag.

Video Description: This video provides a step-by-step guide on how to assemble the GYMAX Gaming Recliner, demonstrating the connection of the backrest, armrests, legs, and massage unit cables.



Image Description: All components of the GYMAX Gaming Recliner, including the backrest, seat base, armrests, legs, and remote control, are laid out on a wooden floor, ready for assembly.

4. Operation

4.1. Reclining Function

The backrest can be adjusted from 90° (upright gaming position) to 160° (fully reclined resting position). The adjustable footrest extends to support your legs, providing optimal comfort for various activities such as gaming, watching TV, or napping.



Image Description: A man is seated in the GYMAX Gaming Recliner in an upright position, actively engaged in gaming at a desk, demonstrating the chair's ergonomic design for active use.



Image Description: A man is fully reclined in the GYMAX Gaming Recliner, with the footrest extended, illustrating the chair's maximum recline position for relaxation or napping.

Your browser does not support the video tag.

Video Description: This video demonstrates the reclining capabilities of the GYMAX Gaming Recliner, showing how the backrest and footrest adjust to different angles for various activities.

4.2. Massage Function

The electric massage lumbar pillow features 8 massage modes and 2 vibrating motors. Use the corded remote control, conveniently stored in the side pocket, to adjust the massage settings.

- **Power Button:** Turn the massage function ON/OFF.
- **Mode Selection:** Cycle through 8 different vibration modes.
- **Intensity Adjustment:** Increase or decrease the massage intensity.
- **Timer Setting:** Set the massage duration for 15 or 30 minutes.



Image Description: A close-up view of the GYMAX Gaming Recliner's massage lumbar cushion, highlighting the remote control and its features for adjusting massage modes, intensity, and timing.

Your browser does not support the video tag.

Video Description: This video showcases the massage features of the GYMAX Gaming Recliner, demonstrating the remote control's functions and the vibrating lumbar support.

4.3. Side Pockets

The chair includes extra storage bags on both sides, perfect for placing items like magazines, snacks, or the massage remote control for easy access.



Image Description: A close-up view of the convenient side storage pocket on the GYMAX Gaming Recliner, designed to hold small items like magazines or remote controls.

5. Maintenance

- **Cleaning:** The chair is covered with smooth PU leather, which is skin-friendly and easy to keep clean. Simply wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Regular Inspection:** Periodically check all connections and screws to ensure they remain tight. Re-tighten if necessary.
- **Storage:** If storing the chair for an extended period, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight and extreme temperatures.

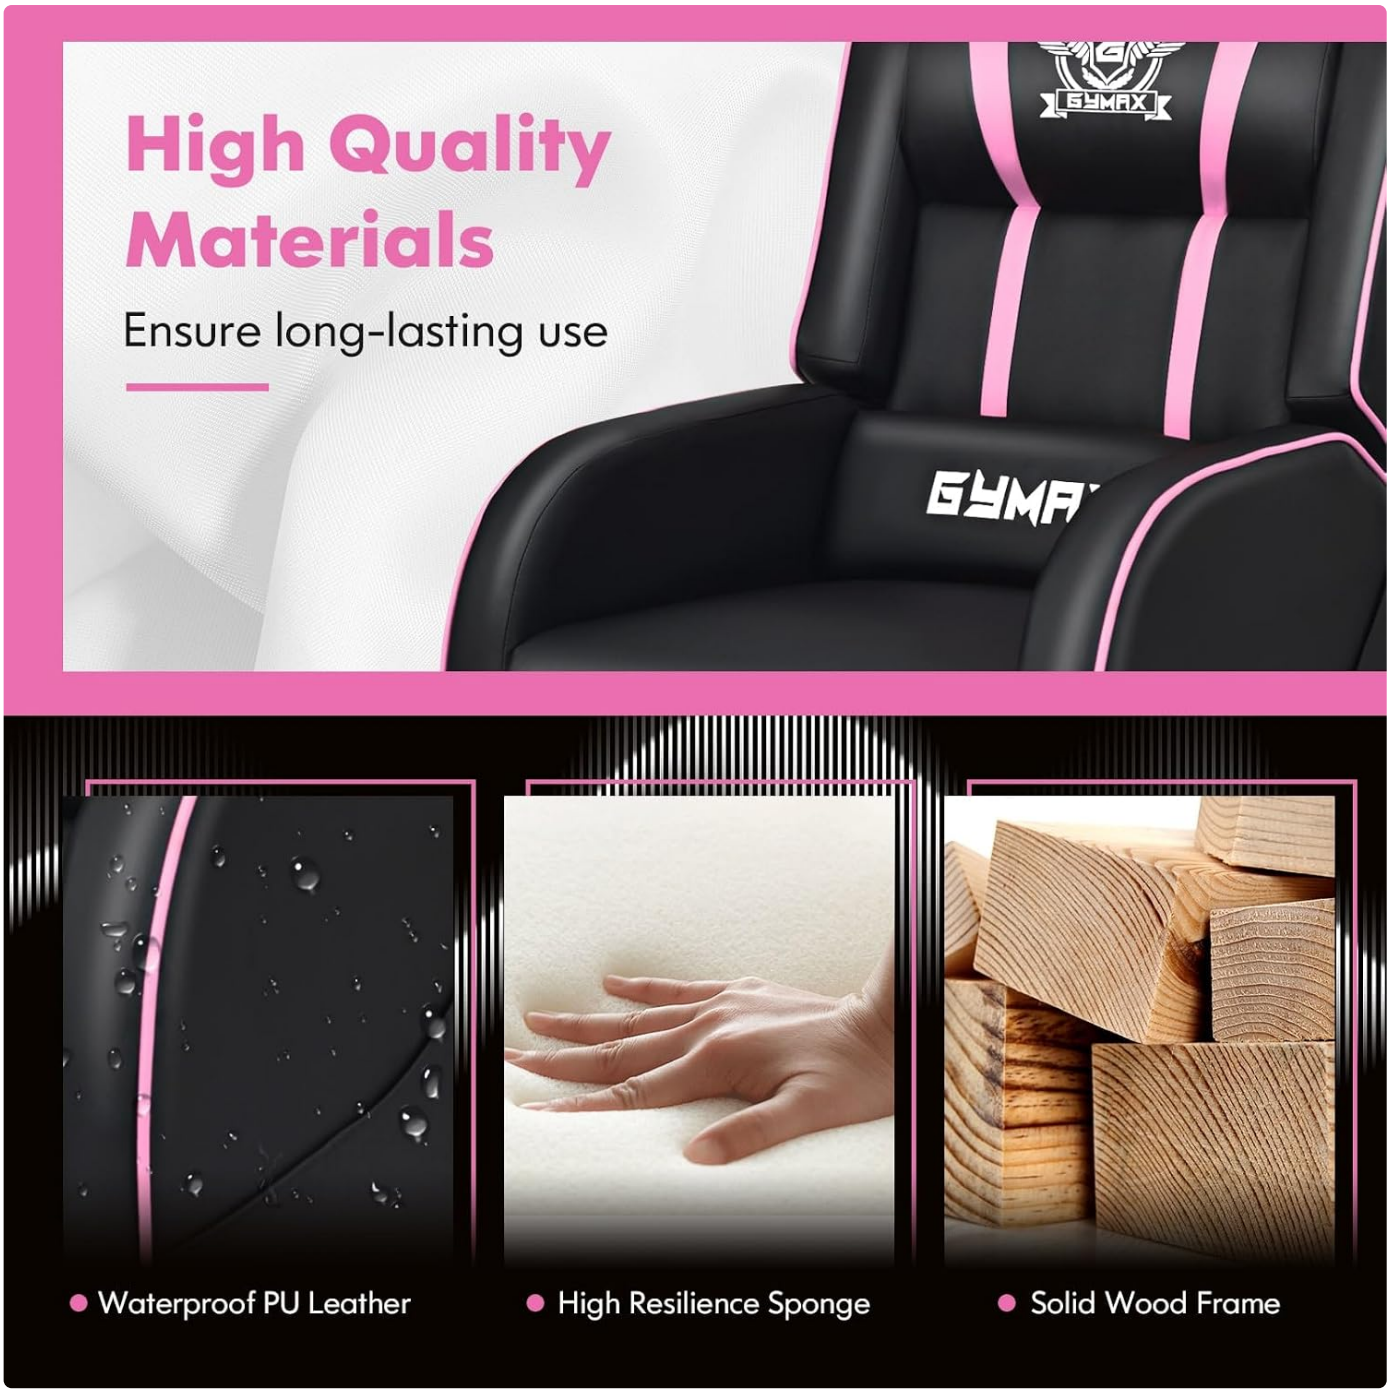


Image Description: A detailed view showcasing the high-quality materials of the GYMAX Gaming Recliner, including waterproof PU leather and high-resilience sponge padding, emphasizing durability and ease of cleaning.

6. Troubleshooting

Problem	Possible Cause	Solution
Chair does not recline smoothly.	Obstruction in mechanism; loose connections.	Check for any objects obstructing the reclining mechanism. Ensure all assembly connections are secure.
Massage function not working.	Power adapter not connected; remote control issue.	Verify the power adapter is securely plugged into both the chair and the electrical outlet. Check the remote control for any damage.

Problem	Possible Cause	Solution
Chair feels unstable or wobbly.	Loose legs or assembly connections.	Ensure all four legs are tightly screwed in. Re-check all assembly points for tightness.

7. Specifications

Feature	Detail
Brand	GYMAX
Model Name	Massage Gaming Recliner
Color	Pink
Product Dimensions	34"D x 25"W x 41"H
Maximum Weight Recommendation	330 Pounds
Material	PU Leather, Sponge, Solid Wood Frame
Reclining Position Count	3 (90°, 130°, 160°)
Massage Modes	8 Vibration Modes
Included Components	User Manual, Remote, Power Adaptor

8. Warranty & Support

For warranty information or technical support, please contact GYMAX customer service through the retailer where the product was purchased. Please have your purchase receipt and product model name ready when contacting support. You can also visit the official GYMAX store for more information and product registration.**GYMAX Store**

© 2024 GYMAX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question