Kocbelle KB05

Kocbelle Cordless Mini Food Processor User Manual

Model: KB05
Brand: Kocbelle

Introduction

Thank you for choosing the Kocbelle Cordless Mini Food Processor, Model KB05. This compact and portable appliance is designed to simplify your food preparation tasks, offering convenience and efficiency for chopping vegetables, fruits, nuts, and even preparing baby food. Its cordless design and durable glass container make it an ideal kitchen companion for both daily use and outdoor activities. Please read this manual thoroughly before first use to ensure safe and optimal operation.

Product Features

- **Cordless and Portable Design:** Enjoy the freedom of preparing food anywhere without being tethered to an outlet. Weighing only 0.9 kg (1.98 lbs) and measuring 4.2 x 4.2 x 8 inches, it's perfect for small kitchens, camping, or picnics.
- **Durable Glass Container:** Equipped with a 0.3 Liter (1.3 cup / 10 oz) glass bowl that is sturdy, easy to clean, and dishwasher safe. The glass material ensures no worry for scratches or leakage and is BPA-free, making it safe for baby food.
- **Efficient Chopping:** Features a 150-watt motor and 3 sharp stainless steel blades for quick and effective processing of ingredients like meats, nuts, onions, and garlic. Most ingredients are processed within 5-30 seconds.
- **Simple One-Touch Operation:** Easy to use with a simple press-to-go switch. The design incorporates safety features to prevent accidental blade contact and overheating.
- **Easy Assembly and Cleaning:** Designed for hassle-free assembly and disassembly. The dismantlable blade and glass bowl are dishwasher safe, ensuring effortless cleanup.
- **Rechargeable Battery:** Powered by a 1200mAh Lithium Metal battery (included), providing ample power for multiple uses on a single charge.

Package Contents

Upon opening your Kocbelle Cordless Mini Food Processor package, please ensure all the following components are present:

- 1 x Mini Chopper Motor Unit
- 1 x Glass Bowl (1.3 cup / 0.3 Liter capacity)
- 1 x Scraper
- 1 x Blade Assembly (with 3 stainless steel blades)
- 1 x USB Charging Cable
- 1 x User Manual (this document)



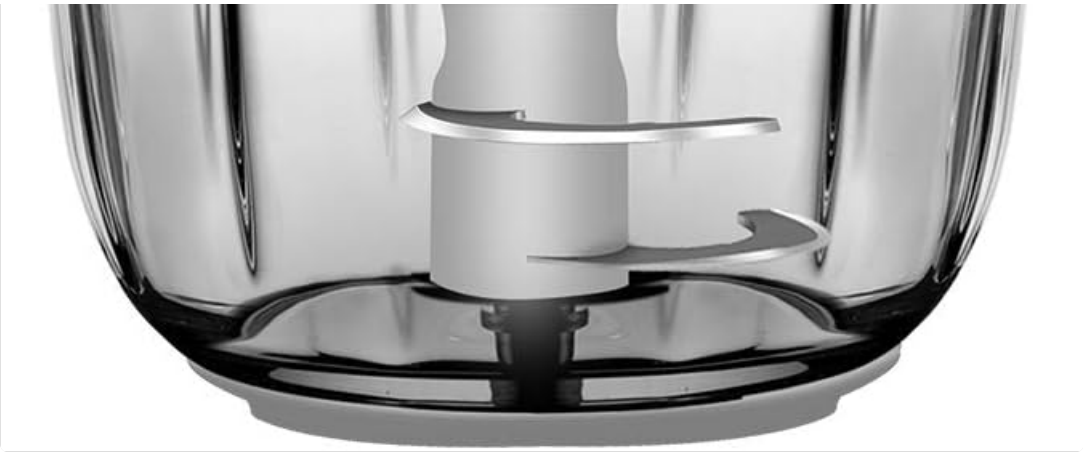


Figure 1: The Kocbelle Cordless Mini Food Processor, showcasing its compact design and green color.

Setup

1. **Initial Charge:** Before first use, if the battery is insufficient, connect the food processor to a power source using the provided USB charging cable and an Android adapter. Charge for more than 4 hours to ensure a full charge. The indicator lights on the motor unit will show charging status.
2. **Assemble the Unit:**
    - Carefully place the blade assembly onto the central pin inside the glass bowl. Ensure it sits securely.
    - Add your desired ingredients into the glass bowl. Do not overfill; ensure ingredients are cut into small enough pieces to allow the blades to move freely.
    - Place the motor unit onto the top of the glass bowl, aligning the motor's drive shaft with the top of the blade assembly. There is no difficult twisting or locking required; simply place it firmly.



Figure 2: Components and assembly of the food processor, showing the motor unit, blade, and glass bowl.

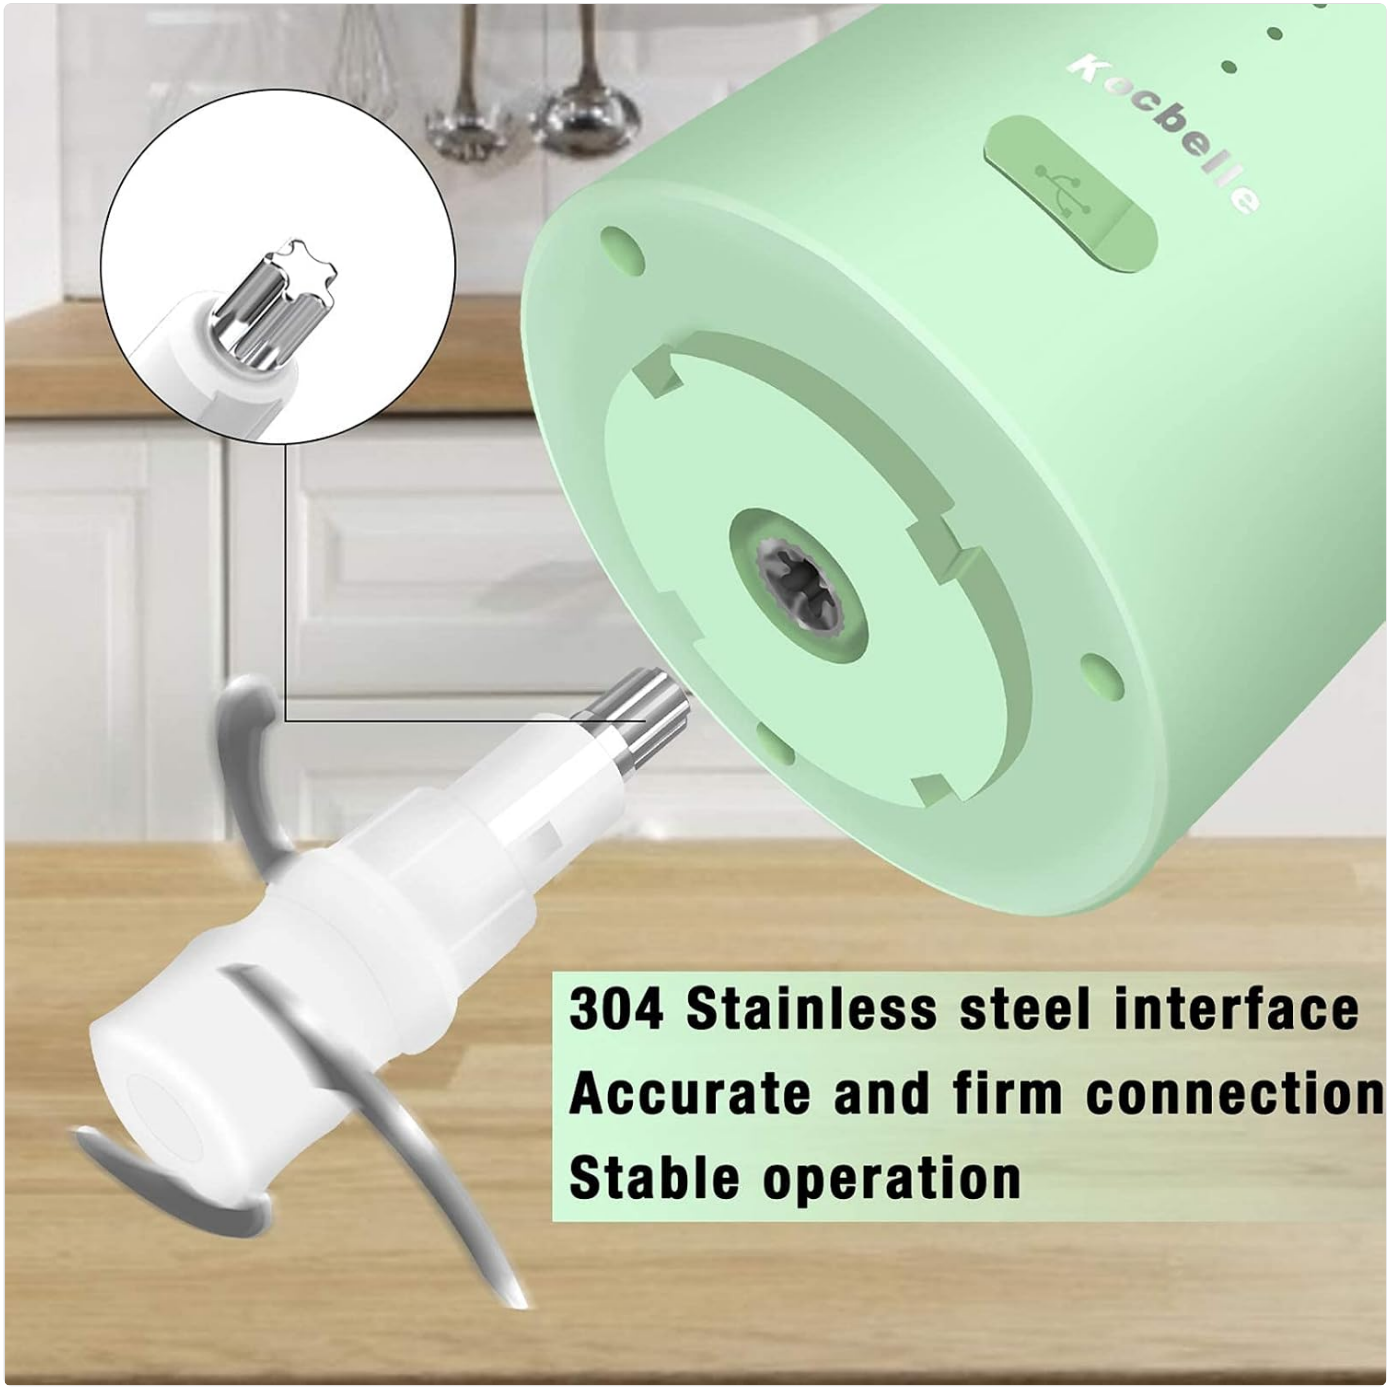


Figure 3: Detail of the 304 stainless steel interface, ensuring a stable and accurate connection.

Operating Instructions

1. **Prepare Ingredients:** Cut larger ingredients into smaller, manageable pieces before placing them into the glass bowl. This ensures efficient chopping and prevents strain on the motor.
2. **Secure the Unit:** Ensure the motor unit is properly seated on the glass bowl with the blade assembly in place.
3. **Start Chopping:** Press and hold the power button located on the top of the motor unit. The blades will begin to rotate and chop the ingredients.
4. **Control Consistency:** Pulse the button for coarse chopping or hold it down for finer results. Processing typically takes 5-30 seconds, depending on the ingredient and desired consistency.
5. **Stop Operation:** Release the power button to stop the chopping action.
6. **Remove Ingredients:** Carefully remove the motor unit, then the blade assembly. Use the provided scraper to remove processed food from the bowl.

Safety Note: The product is designed with safety features to prevent overheating. If the motor becomes too hot, it may temporarily shut off. Allow it to cool down before resuming operation. Always handle the sharp blades with extreme care.



Figure 4: Examples of ingredients before and after processing with the Kocbelle food processor.



Figure 5: The portable design allows for convenient use in various settings, including outdoor picnics.

Maintenance and Cleaning

Proper maintenance and cleaning will extend the life of your Kocbelle Mini Food Processor.

1. **Disassembly:** After each use, unplug the USB charging cable (if connected) and carefully separate the motor unit from the glass bowl. Remove the blade assembly from the bowl.
2. **Cleaning the Bowl and Blades:** The glass bowl and blade assembly are dishwasher safe. Alternatively, they can be washed by hand using warm, soapy water. Rinse thoroughly and dry completely before reassembly or storage.
3. **Cleaning the Motor Unit:** The motor unit is NOT dishwasher safe and should NOT be submerged in water. Wipe the motor unit with a damp cloth to clean. Ensure no water enters the charging port or internal components.
4. **Storage:** Store the clean and dry food processor in a cool, dry place, away from direct sunlight.



Figure 6: The ease of cleaning makes it suitable for preparing sensitive foods like baby food.

Troubleshooting

If you encounter any issues with your Kocbelle Mini Food Processor, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	Battery is low or depleted.	Charge the unit for at least 4 hours using the provided USB cable and an Android adapter.
Unit stops during operation.	Overheating protection activated.	Allow the motor unit to cool down for at least 15-20 minutes before attempting to use it again.

Problem	Possible Cause	Solution
Ingredients are not chopping effectively.	Bowl is overfilled or ingredients are too large.	Reduce the amount of ingredients in the bowl or cut them into smaller pieces. Ensure the blade assembly is correctly seated.
Loud noise or unusual vibration.	Blade assembly not properly installed or damaged.	Ensure the blade assembly is securely placed on the central pin. Inspect blades for any damage. If damaged, discontinue use and contact customer service.

If the problem persists after trying these solutions, please contact Kocbelle customer service for further assistance.

Specifications

Feature	Detail
Brand	Kocbelle
Model Number	KB05
Power Source	Battery Powered (1 Lithium Metal battery included)
Motor Power	150 Watts
Bowl Capacity	0.3 Liters (approx. 1.3 cups / 10 oz)
Blade Material	Stainless Steel
Product Dimensions	5.1"D x 5.1"W x 8.3"H (13cm D x 13cm W x 21cm H)
Item Weight	1.98 pounds (0.9 kg)
Color	Green
Care Instructions	Glass bowl and blades are Dishwasher Safe; Motor unit wipe clean only.



Figure 7: Visual representation of the product dimensions.

Warranty and Support

Kocbelle is committed to providing high-quality products and excellent customer service. If you have any problems or questions regarding your Kocbelle Cordless Mini Food Processor, please do not hesitate to contact our professional customer service team. We are available to assist you daily and ensure a smooth experience with your product.
For support, please refer to the contact information provided on the product packaging or the official Kocbelle website.

© 2025 Kocbelle. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question