Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CalExotics 14300

CalExotics Opulence Body Wand

Instruction Manual - Model 14300

Brand: CalExotics

Introduction

The CalExotics Opulence Body Wand is a multi-function personal massager designed for external use. It features an ultra-soft, flexible head and offers a variety of vibration patterns and speeds. This manual provides essential information for the safe and effective use, maintenance, and care of your Opulence Body Wand.

Important Safety Information

- This device is intended for adult use as a non-medical pleasure device only. It is not for medical use.
- Discontinue use immediately in the event of any medical condition, pain, discomfort, or skin irritation. Consult a healthcare professional if symptoms persist.
- Do not use if the device appears damaged or if the silicone is torn or compromised.
- Keep out of reach of children.
- Do not expose the device to extreme temperatures or direct sunlight for prolonged periods.
- Use only water-based lubricants with this device. Oil-based lubricants may damage the silicone material.

Package Contents

- 1 x CalExotics Opulence Body Wand
- 1 x USB Charging Cable

Setup and Initial Charge

Before first use, fully charge your Opulence Body Wand. The device is equipped with a rechargeable battery.

1. Locate the charging port on the device.
2. Connect the provided USB charging cable to the device and plug the other end into a USB power source (e.g., computer, USB wall adapter).
3. The LED indicator light will flash while charging. It will glow solid when fully charged.

4. A full charge typically takes approximately 1.5 hours and provides up to 3 hours of use.



Image: The Opulence Body Wand connected to its USB charging cable.

Operating Instructions

The Opulence Body Wand features multiple control buttons for easy operation.



Image: The Opulence Body Wand with its control panel visible.

1. **Unlock Device:** Press and hold the power button () for 3 seconds to unlock the device.
2. **Turn ON Vibration:** Press any button (other than the power button) once to activate the vibration.
3. **Cycle Functions:** Press the function button (**F**) to cycle through the 6 different vibration functions.
4. **Increase Speed:** Press the plus button (**+**) to increase the speed within the current function. There are 5 speeds for each function.
5. **Decrease Speed:** Press the minus button (**-**) to decrease the speed within the current function.
6. **Turn OFF All Vibrations:** Press the power button () at any time to turn off all vibrations.
7. **Resume Vibration:** If vibrations are off, press the power button () again to resume the last used setting.
8. **Lock Device:** To lock the device for travel or storage, press and hold the power button () for 3 seconds.

Your browser does not support the video tag.

Video: Official CalExotics video demonstrating the operation of the Opulence Body Wand, including power, function, and speed controls.

Cleaning and Maintenance

Proper cleaning and maintenance will extend the life of your device.

- The Opulence Body Wand is waterproof. Clean the device thoroughly before and after each use.
- Hand wash the device with warm water and a mild soap or a toy cleaner.
- Rinse thoroughly and pat dry with a lint-free cloth.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.



Image: The Opulence Body Wand shown in water, illustrating its waterproof design.

Storage

Store your Opulence Body Wand in a clean, dry place away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent potential damage or reactions.

Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted or device is locked.	Charge the device fully. Ensure the device is unlocked by pressing and holding the power button for 3 seconds.
Vibrations are weak.	Low battery.	Recharge the device.
Device not charging.	Charging cable or power source issue.	Ensure the USB cable is securely connected. Try a different USB port or power adapter.

Specifications

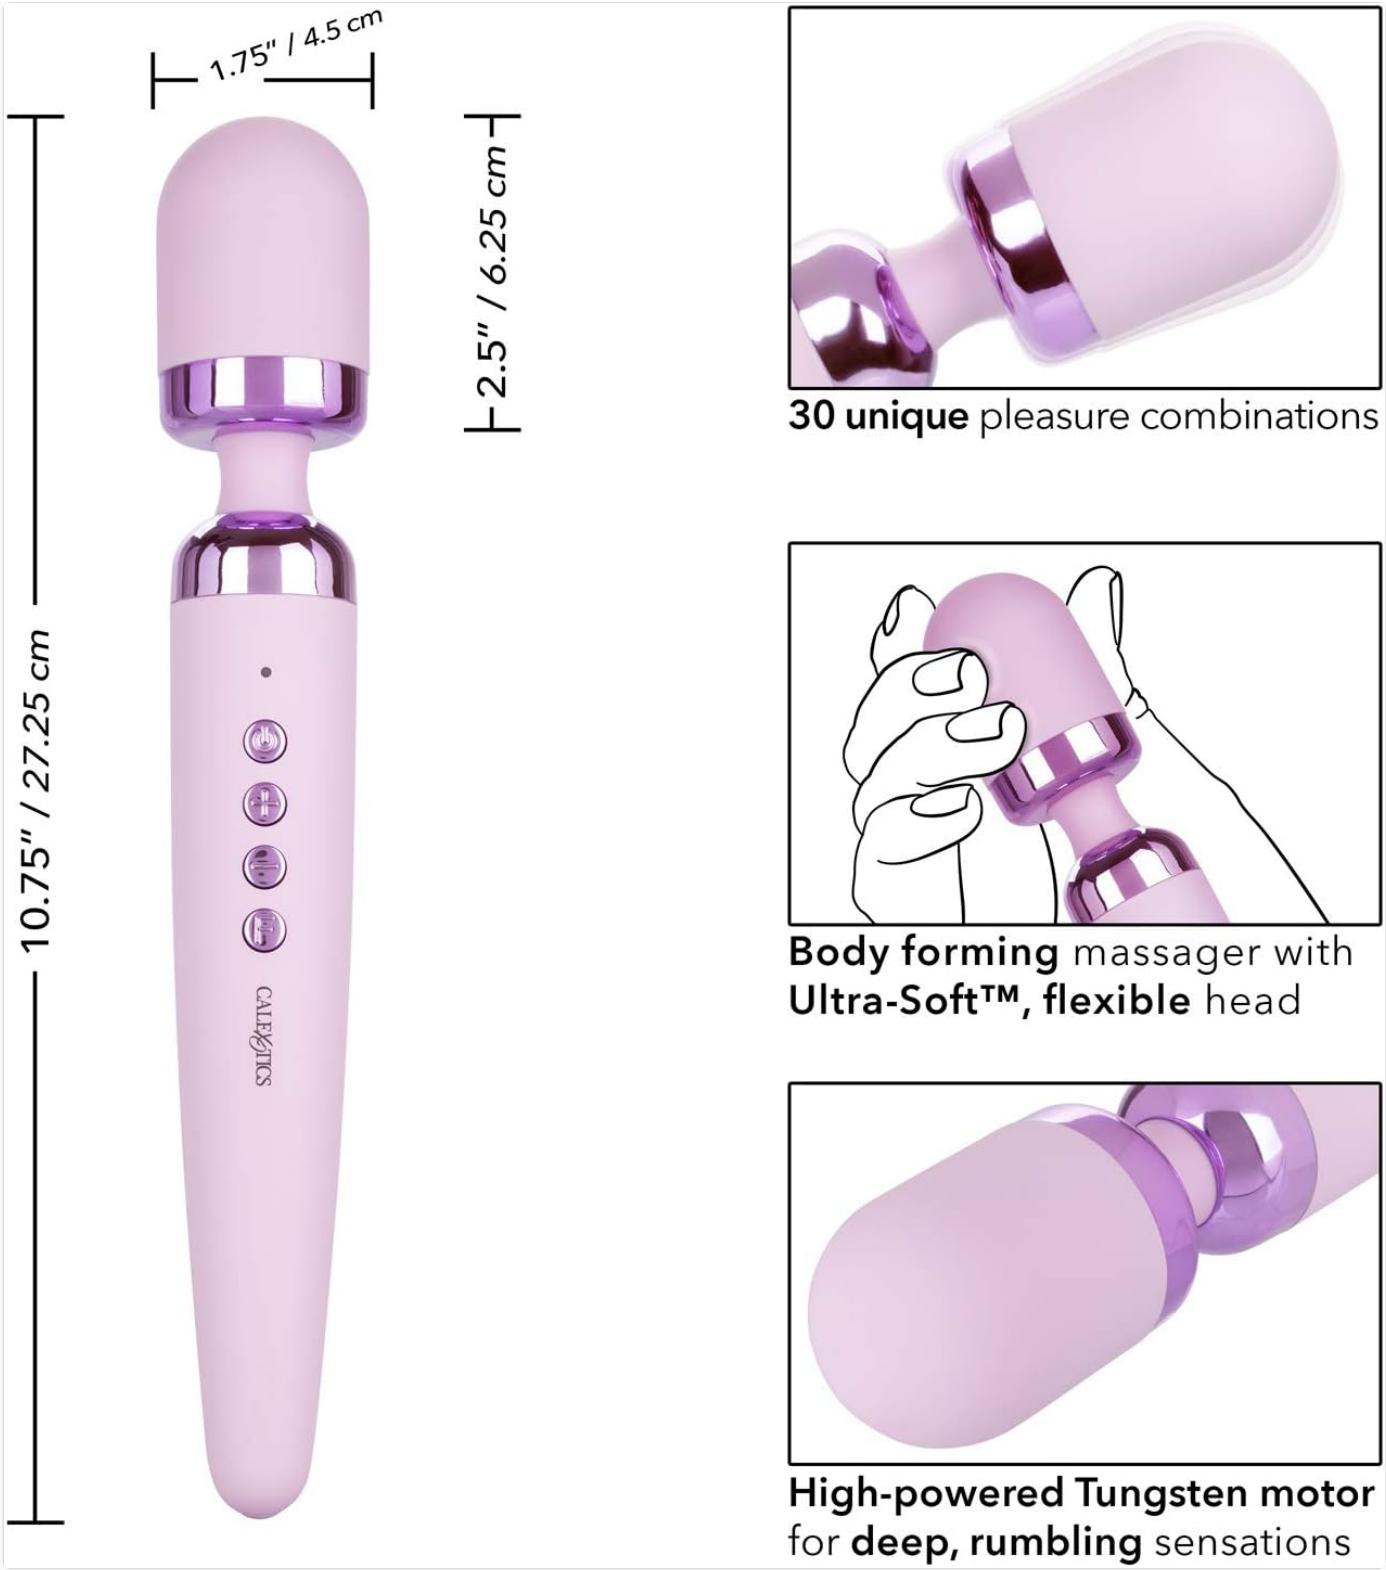


Image: Dimensions and key features of the Opulence Body Wand.

Feature	Detail
Model Number	14300
Material	Silicone
Color	Purple
Dimensions (L x W x H)	3 x 13.5 x 3 inches
Weight	1.5 ounces

Feature	Detail
Vibration Functions	6 functions
Speed Settings	5 speeds per function
Battery	Rechargeable (USB)
Charge Time	Approx. 1.5 hours
Run Time	Up to 3 hours
Waterproof	Yes

Warranty and Support

The CalExotics Opulence Body Wand comes with a one-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use.
For warranty claims, technical support, or any questions regarding your product, please contact CalExotics customer service. Refer to the product packaging or the official CalExotics website for the most current contact information.

© 2020 CalExotics. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08DPMSMVG

More documents and user manuals: **https://manuals.plus/**