Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

waxkiss PWH-3000A

Waxkiss PWH-3000A Paraffin Wax Machine User Manual

Model: PWH-3000A | Brand: Waxkiss

Introduction

The Waxkiss PWH-3000A Paraffin Wax Machine is designed to provide a soothing and hydrating paraffin wax treatment for hands, feet, and elbows. This device helps to smooth and soften skin, promote blood circulation, and relieve discomfort associated with dry skin or conditions like arthritis. This manual provides essential information for the safe and effective operation of your paraffin wax machine.



Image: The Waxkiss PWH-3000A Paraffin Wax Machine, showcasing its oval design and a pool of melted purple paraffin wax. The image also highlights key features such as 24-hour warmth retention, 3000ml capacity, and a temperature range of 35°C-85°C (95°F-185°F).

Safety Instructions

- Always place the machine on a stable, heat-resistant surface.
- Do not immerse the machine in water or any other liquid.
- Keep out of reach of children and pets.
- Ensure the power cord is not damaged and is properly plugged into a grounded outlet.
- Do not touch the melted wax directly until you have tested its temperature. The machine features constant temperature protection at 50°C to prevent burns, but always exercise caution.
- Unplug the machine when not in use and before cleaning.
- Do not use if the machine or power cord is damaged.
- The machine is equipped with an integrated thermistor and fuse to prevent overheating and short circuits.

Package Contents

Please check the package to ensure all items are present:

- 1 x Waxkiss PWH-3000A Paraffin Wax Machine (3-liter capacity)
- 1 x User Manual
- 1 x Transparent Heat Insulating Grid
- 1 x Peach Paraffin Wax (450g)
- 1 x Lavender Paraffin Wax (450g)
- 1 x Pair of Thermal Mitts
- 1 x Pair of Thermal Booties
- 25 x Pairs of PE Disposable Gloves
- 1 x Beauty Brush



Image: An overview of the Waxkiss Paraffin Wax Kit contents, including the machine, two bags of paraffin wax (peach and lavender), a

beauty brush, user manual, heat insulating grid, thermal mitts, thermal booties, and PE mitts.

Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the paraffin wax machine on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit.
3. **Add Wax:** Open the lid and place the desired amount of paraffin wax into the machine's basin. The machine has a 3-liter capacity. It is recommended to use at least 0.9 kg (2 lbs) of wax for optimal immersion.
4. **Connect Power:** Plug the power cord into a standard electrical outlet.



Image: A visual guide showing the steps for using the paraffin wax machine, starting with placing wax into the unit.

Operating Instructions

1. Melting the Wax

- **Power On:** Press the power button on the control panel. The digital display will illuminate.
- **Select Mode:** The machine offers two heating modes: "Temperature Mode" and "Quantitative Mode". Press the +/-

button to switch between these modes.

- **Temperature Mode:** Allows you to set a specific temperature between 35°C and 85°C (95°F-185°F). Use the **+/-** buttons to adjust the desired temperature.
- **Quantitative Mode:** This mode is designed for specific wax quantities. For example, R-1 for 1 bag of wax, R-2 for 2 bags, R-3 for 3 bags. The machine will automatically heat to 55°C (131°F) and signal when ready.

- **Start Heating:** The machine will begin heating the wax. Melting 0.9 kg (2 lbs) of paraffin wax to 85°C typically takes approximately 45 minutes.
- **Ready Indicator:** In Quantitative Mode, when the wax reaches 55°C (131°F), the machine will emit three "Di, Di, Di" sounds, indicating it is ready for use. The temperature will then stabilize at 50°C for safe application.
- **Temperature Check:** Always test the wax temperature on a small area of your skin (e.g., wrist) before full immersion to ensure it is comfortable and safe.

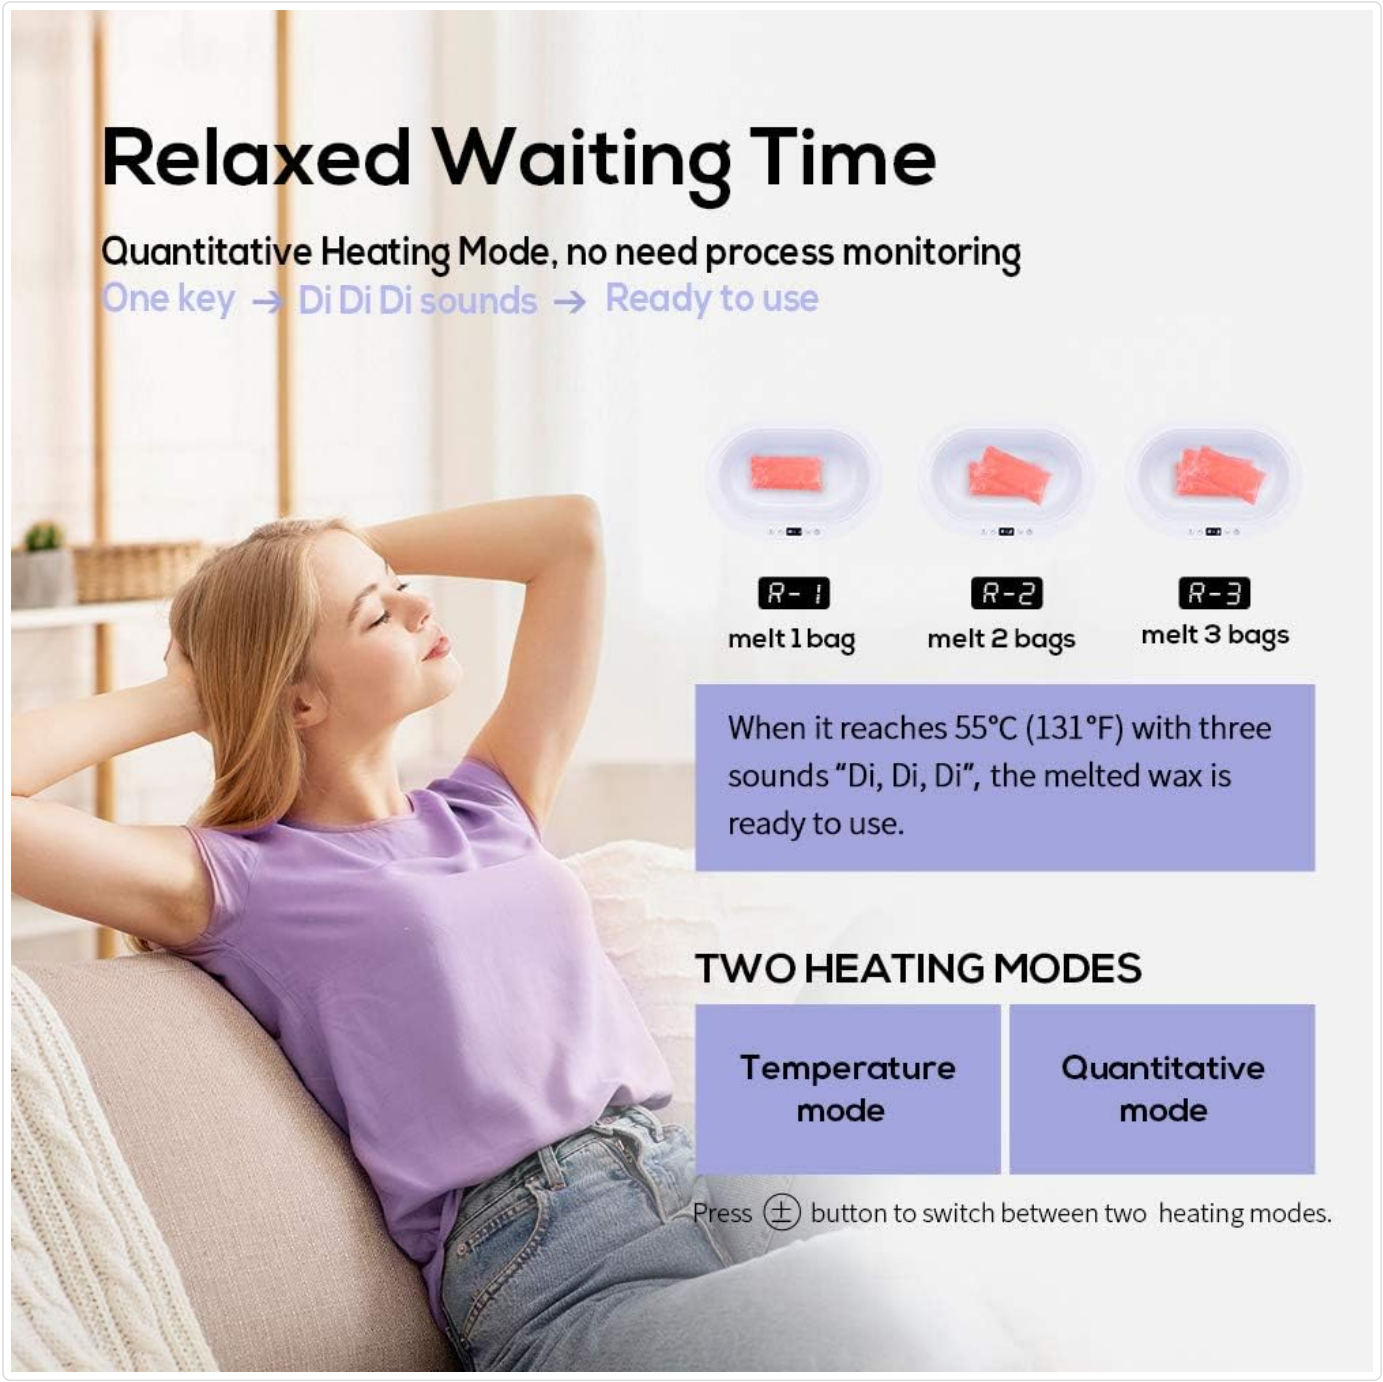


Image: The control panel of the Waxkiss Paraffin Wax Machine, illustrating the "Relaxed Waiting Time" feature and the two heating modes: Temperature Mode and Quantitative Mode. It shows how the machine signals readiness at 55°C.



Image: A detailed view of the Waxkiss Paraffin Wax Machine's control panel, highlighting the one-button auto-processing system, colorfully shining lights, and the use of high-quality, flame-retardant, and heat-resistant materials.

2. Applying the Wax Treatment

1. **Prepare Skin:** Ensure the area to be treated (hands, feet, or elbows) is clean and dry.
2. **Insert Grid:** Once the wax is melted and at a safe temperature, place the transparent heat insulating grid into the basin. This prevents direct contact with the heating element.
3. **Dip:** Slowly dip the hand, foot, or elbow into the melted wax. Immediately withdraw for a few seconds to allow the wax to cool and solidify slightly. Repeat this process 3-5 times to build up a thick layer of wax.
4. **Cover:** After the final dip, immediately cover the treated area with a disposable PE glove. For enhanced heat retention and deeper penetration, place a thermal mitt (for hands) or thermal booty (for feet) over the PE glove.
5. **Relax:** Allow the wax to remain on the skin for 10-15 minutes. This allows the heat and moisturizing properties of the wax to work effectively.
6. **Remove:** Gently peel off the wax, starting from the wrist or ankle. The wax should come off easily, taking dead skin cells with it. Dispose of the used wax and disposable gloves.



Image: A visual sequence demonstrating the application process: putting in wax, wax melting, inserting the heat insulating grid, dipping hands/feet/elbows, wearing disposable liners and thermal mitts, and finally removing the wax.

Maintenance

- **Cleaning:** After each use, allow the remaining wax to cool and solidify completely. Once solid, gently remove the wax block from the basin. You can reuse the wax if it remains clean.
- **Wipe Down:** Use a soft, damp cloth to wipe the interior and exterior of the machine. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the machine in a cool, dry place, away from direct sunlight and moisture. Ensure the lid is securely closed to prevent dust accumulation.

Troubleshooting

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue; damaged cord.	Check power connection. Try a different outlet. Inspect power cord for damage.

Problem	Possible Cause	Solution
Wax not melting or melting slowly.	Insufficient heating time; incorrect temperature setting; too much wax.	Allow more time for heating. Increase temperature setting. Ensure wax quantity is appropriate for the selected mode.
Wax is too hot.	Temperature set too high.	Lower the temperature setting. Allow wax to cool to 50°C (122°F) before use. Always test temperature.
Wax is leaking.	Machine damage; overfilling.	Unplug immediately. Do not use if machine is damaged. Ensure wax level does not exceed the MAX fill line.

Specifications

- **Model:** PWH-3000A
- **Brand:** Waxkiss
- **Capacity:** 3 Liters (3000 ml)
- **Temperature Range:** 35°C - 85°C (95°F - 185°F)
- **Constant Temperature Protection:** 50°C (122°F)
- **Material:** ABS (High-temperature resistant)
- **Internal Dimensions (approx.):** 27.9 cm (11 in) opening length, 12.7 cm (5 in) depth, 16.5 cm (6.5 in) top width.
- **Package Dimensions:** 37.6 x 24.4 x 19.3 cm (14.8 x 9.6 x 7.6 inches)
- **Package Weight:** 2.97 kg (6.55 lbs)
- **Manufacturer Reference:** PWH-WK-S02
- **ASIN:** B08G4V3K34

Warranty and Support

Specific warranty information is not provided in the product details. For any product inquiries, technical support, or warranty claims, please contact your retailer or the manufacturer directly using the contact information provided at the point of purchase.

© 2023 Waxkiss. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08G4V3K34

More documents and user manuals: **https://manuals.plus/**