Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kastar MH-3B-BT905-F

Kastar Replacement Battery User Manual

For Uniden 5.8GHz Cordless Phone Models

Introduction

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of your Kastar 3-Pack Battery Replacement for Uniden 5.8GHz Cordless Phones. Please read this manual thoroughly before use to ensure optimal performance and safety.

Product Overview

The Kastar BT-905 Ni-MH rechargeable battery is designed as a direct replacement for various Uniden 5.8GHz cordless phone models. This 3-pack ensures you have reliable power for multiple handsets or spares. Each battery features a 3.6V voltage and 600mAh capacity, providing long-lasting performance for your cordless phone.

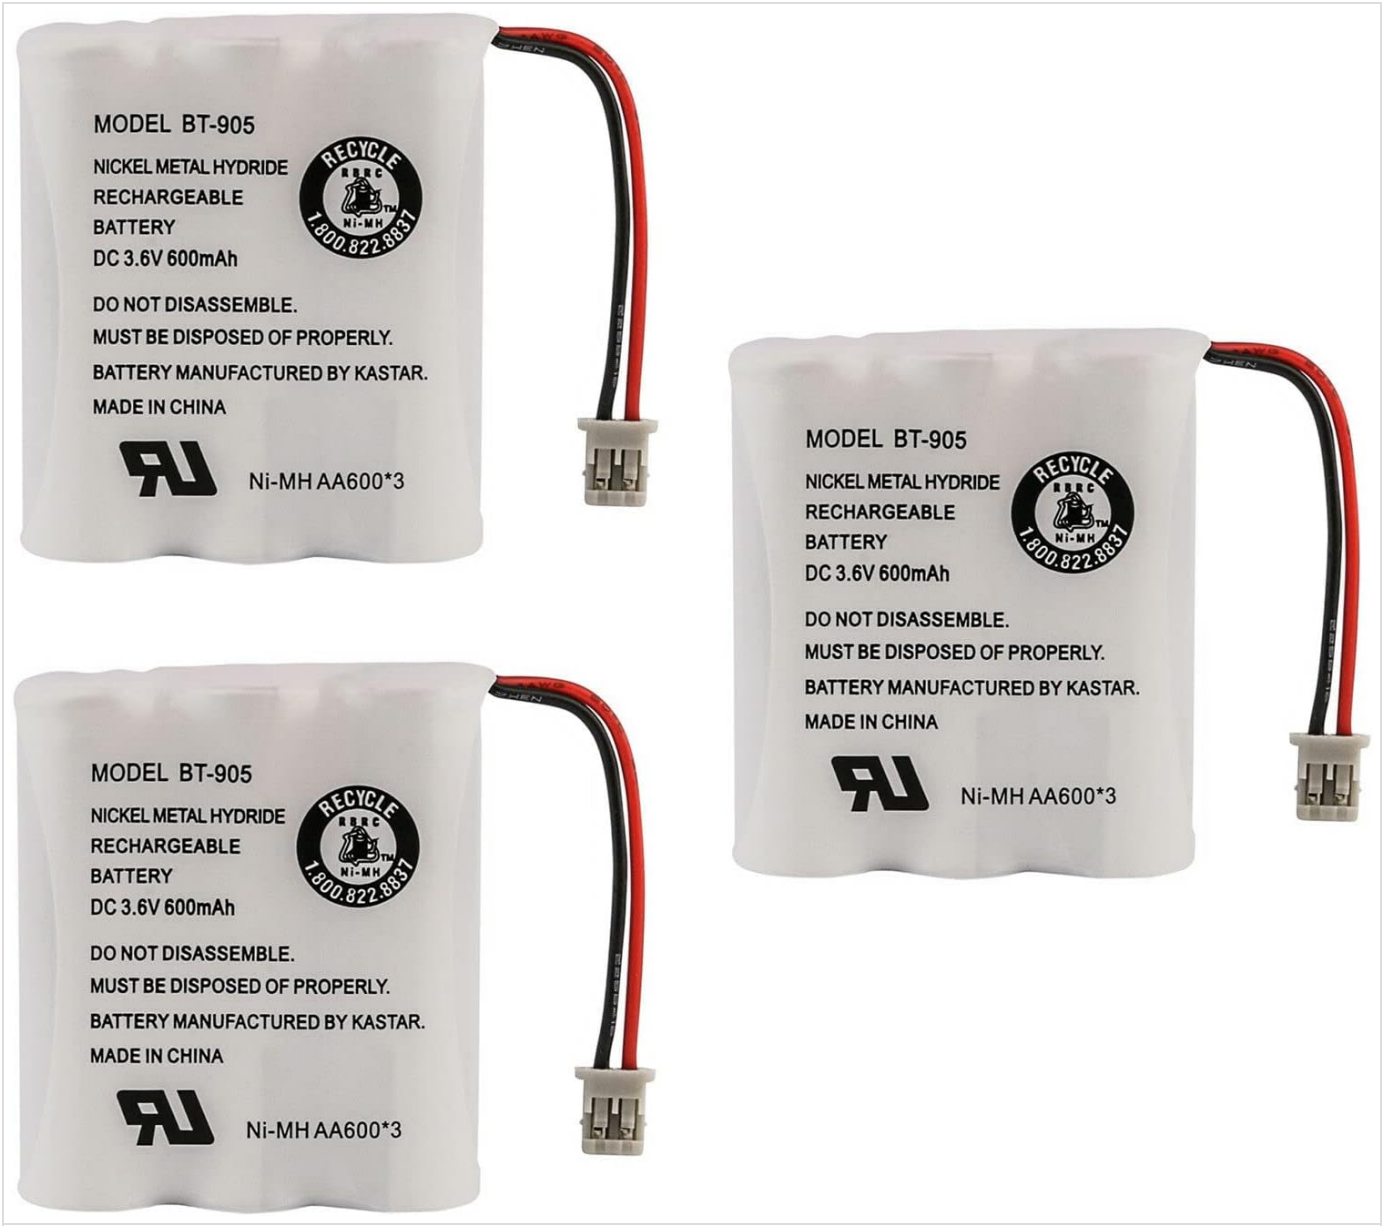


Image: Kastar 3-Pack BT-905 Ni-MH Replacement Batteries.

Compatibility

The Kastar BT-905 replacement battery is compatible with a wide range of Uniden 5.8GHz cordless phone models. Please verify your phone's model number against the list below to ensure compatibility:

- 24-148
- AE-255
- B1000
- B300
- B300A
- B900
- BATT-3AAB
- BBTY-0300001
- BBTY-0444001
- BBTY-0449001
- BBTY0300001
- BBTY0449001
- BBTY0663001
- BP-800

- BP-905
- BP800
- BP905
- BT-1006
- BT-800
- BT-905
- BT800
- BT905
- CDU5160
- CEZAI998
- CP-355
- CXAI5198
- CXAI5698
- DXA6505
- DXAI3288
- DXAI3288-2
- DXAI388-2
- DXAI3882
- DXAI4288-2
- DXAI4588-2
- DXAI5180
- DXAI5186-2
- DXAI5188-2
- DXAI5588-2
- DXAI5588-3
- DXAI5588-4
- DXAI5688-2
- DXAI5688-3
- DXAI5688-4
- DXAI7288-2
- DXAI8580-2
- DXAI8580-3
- DXI3268-2
- DXI3286
- DXI386-2
- DXI4286-2
- DXI4560-2
- DXI4561-2
- DXI5186-2
- DXI5586-2
- DXI5586-3
- DXI5586-3T
- DXI5586-3TA
- DXI5686-2
- DXI5686-3
- DXI7286-2
- DXI7286-2HS
- DXI8560-2

- DXI8560-3
- DXI986-2
- EHD1200
- EWCI936
- EX1960
- EX1980
- EX2100
- EX255
- EX3101
- EX3102
- EX3800
- EX3810
- EX4100
- EX4101
- EX4102
- EX4800
- EX905
- EX925
- EX945
- EX965
- EXA2245
- EXA2850
- EXA2950
- EXA2955
- EXA3245
- EXA3955
- EXA6950
- EXA7250
- EXA7950
- EXA8955
- EXA915
- EXA918
- EXA950
- EXAI2248
- EXAI2248i
- EXAI2980
- EXAI3248
- EXAI3248i
- EXAI378
- EXAI398
- EXAI3985
- EXAI4248
- EXAI4248-2
- EXAI4248i
- EXAI4580
- EXAI5180
- EXAI5580
- EXAI5680

- EXAI6980
- EXAI7248
- EXAI978I
- EXAI980
- EXAI985HS
- EXI2246
- EXI2926
- EXI2960
- EXI2965
- EXI3226
- EXI3246
- EXI376
- EXI386
- EXI3965
- EXI4246
- EXI4246C
- EXI4560
- EXI4561
- EXI5160
- EXI5560
- EXI6960
- EXI7246
- EXI7246C
- EXI8600A
- EXI8965
- EXI8966
- EXI916
- EXI917
- EXI960
- EXL8900
- EXL8901
- EXL8945
- EXLA8950
- EXLI8962
- EXP2240
- EXP2241
- EXP2243
- EXP2800
- EXP2900
- EXP2901
- EXP2903
- EXP2905
- EXP3240
- EXP3241
- EXP4240
- EXP4241
- EXP6900
- EXP7240

- EXP7241
- EXP7900
- EXP91
- EXP92
- EXP920
- EXP93
- EXP97
- EXS2010
- EXS2050
- EXS2060
- EXS2080
- EXS9005
- EXT1160
- EXT1165
- EXT1265
- EXT1365
- EXT1760
- EXT1865
- EXT3165
- EXV990
- EZI996
- TRU241
- TRU246
- TRU248
- TRU341
- TRU3455
- TRU346
- TRU3465
- TRU3466
- TRU348
- TRU3485
- TRU546
- TRU548
- XE895
- XE8950
- XE965
- XE985

Setup

Before installing the new battery, ensure your cordless phone handset is powered off and disconnected from its charging base.

1. **Locate the Battery Compartment:** On the back of your Uniden cordless phone handset, locate the battery compartment cover. This is typically secured by a small latch or screw.
2. **Remove the Old Battery:** Carefully open the battery compartment. Disconnect the old battery's connector from the phone's port. Remove the old battery.
3. **Insert the New Battery:** Take one Kastar BT-905 replacement battery. Align the battery connector with the port inside the phone's battery compartment. Gently push the connector until it clicks securely into place.

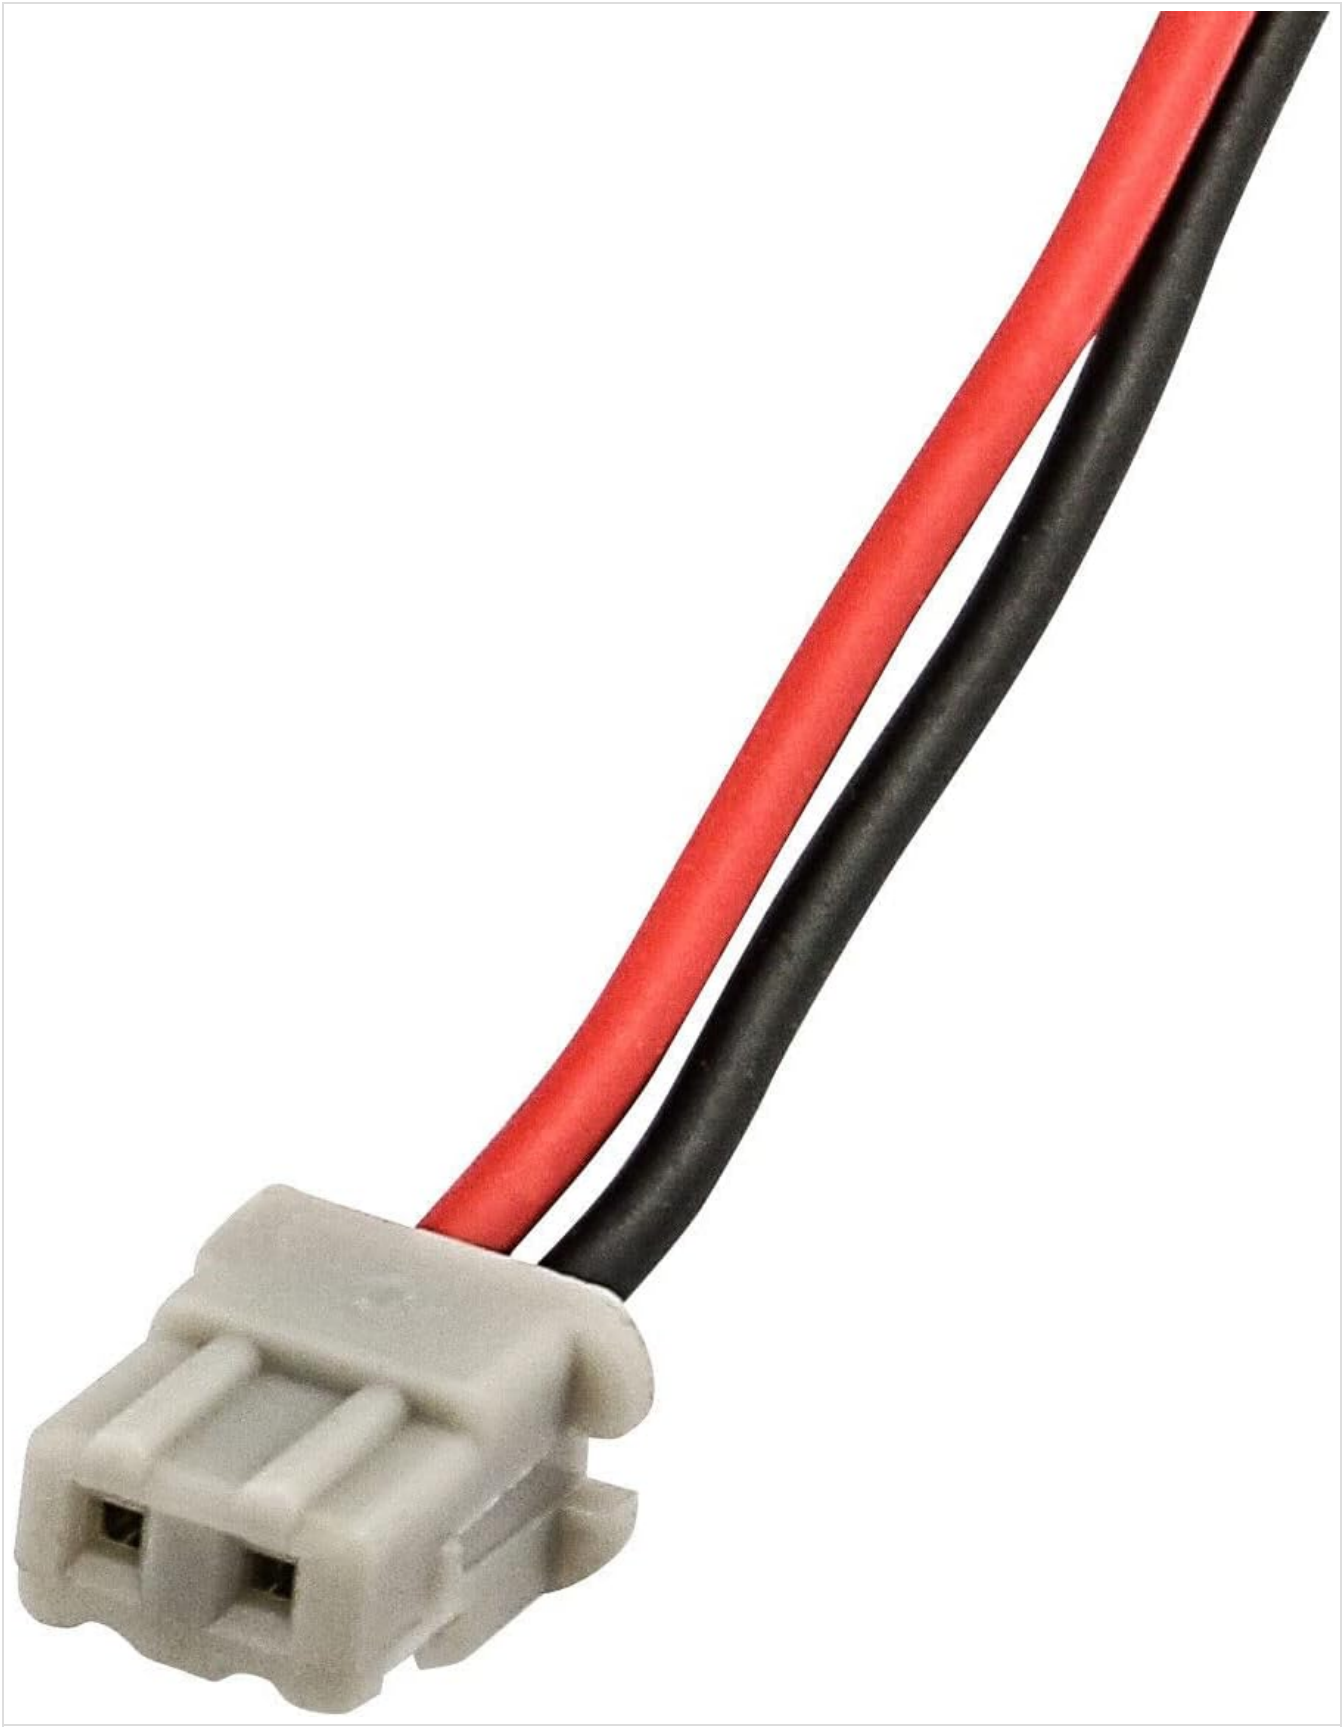


Image: Close-up of the battery connector.

4. **Position the Battery:** Place the battery flat within the compartment, ensuring no wires are pinched.
5. **Close the Compartment:** Replace the battery compartment cover and secure it.
6. **Initial Charge:** Place the handset on its charging base. Allow the battery to charge for at least 12-16 hours before its first use, even if the phone indicates a full charge sooner. This initial charge is crucial for conditioning the battery and maximizing its lifespan.

Operating Instructions

Once installed and initially charged, your Kastar replacement battery will power your Uniden cordless phone.

- **Charging:** Always return the handset to its charging base when not in use to keep the battery fully charged.
- **Battery Indicator:** Monitor your phone's battery indicator. Recharge the battery when the indicator shows low power to prevent complete discharge, which can shorten battery life.
- **Optimal Performance:** For best performance, avoid frequently removing the handset from the charger for short periods if it's not in active use.

Maintenance and Care

Proper care can significantly extend the life of your Kastar replacement battery.

- **Avoid Extreme Temperatures:** Do not expose the battery or phone to extreme heat or cold. Optimal operating temperature is between 0°C and 45°C (32°F and 113°F).
- **Store Properly:** If storing the battery for an extended period, charge it to about 50% capacity and store it in a cool, dry place. Recharge it every 3-6 months to prevent deep discharge.
- **Clean Contacts:** Periodically clean the charging contacts on both the handset and the charging base with a clean, dry cloth to ensure a good connection.
- **Recycle:** When the battery reaches the end of its life, dispose of it responsibly according to local regulations. Do not dispose of batteries in household waste.

Troubleshooting

If you encounter issues with your Kastar replacement battery, consider the following:

Problem	Possible Cause	Solution
Phone does not power on after battery installation.	Battery not properly connected or not charged.	Ensure the battery connector is firmly seated. Place the handset on the charging base for at least 12-16 hours.
Battery life is shorter than expected.	Initial charge not completed, frequent deep discharges, or battery nearing end of life.	Perform a full 12-16 hour initial charge. Always return the handset to the charger when not in use. If the battery is old, consider replacement.
Handset not charging.	Dirty charging contacts or faulty charging base.	Clean the charging contacts on both the handset and the base. Ensure the charging base is properly plugged into a working power outlet.

Specifications

The following are the technical specifications for the Kastar BT-905 replacement battery:

Model Number: MH-3B-BT905-F
Battery Type: Ni-MH (Nickel-Metal Hydride)
Voltage: 3.6V
Capacity: 600mAh
Dimensions: Approximately 1.98" x 1.67" x 0.57" (50.29 x 42.4 x 14.37 mm)
Lifespan: Up to 1200 cycles
Environmental Features: Ni-MH eco-friendly cell, free from Hg/Cd/Pb, DBCK steel shell for explosion protection.

Warranty and Support

Kastar products are designed for reliability and performance. For warranty information or technical support, please contact Kastar customer service.



Image: Kastar product packaging, indicating customer support.

For further assistance, visit the official Kastar website or refer to the contact information provided with your purchase. When contacting support, please have your product model number (MH-3B-BT905-F) and purchase details ready.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08GLCVD8Z

More documents and user manuals: **https://manuals.plus/**