ZdalaMit SE-R0295

ZdalaMit SE-R0295 Replacement Remote Control User Manual

For Toshiba DVD Video Recorder / VCR Models

1. Introduction

This manual provides instructions for the ZdalaMit SE-R0295 Replacement Remote Control. This remote is designed to be compatible with various Toshiba DVD Video Recorder and VCR models, offering a direct replacement for your original remote without the need for programming.
Compatible models include, but are not limited to:**DVR620KU, D-VR620, DKVR60KU, D-VR610KU, DVR610KU, D-VR620KU, D-VR610, DVR620KC, DVR610, D-KVR20U, D-KVR20KU, DKVR20U, DKVR20KU, DVR630, DVR630KC**.



Image 1.1: Front view of the ZdalaMit SE-R0295 Replacement Remote Control. This image displays the layout of all buttons, including power, input select, numerical keys, navigation, playback controls, and mode selection for VCR and DVD.

2. Setup: Battery Installation

The SE-R0295 remote control requires two AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Important:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

3. Operating Instructions

This remote control is pre-programmed and ready for use with compatible Toshiba DVD Video Recorder / VCR units immediately after battery installation. No additional programming or pairing is required.

3.1. Basic Functions

- **Power (I/O)**: Turns the connected Toshiba unit on or off.
- **Input Select**: Cycles through available input sources on your Toshiba unit.
- **HDMI**: Selects the HDMI input source directly.
- **Number Buttons (0-9)**: Used for direct channel selection or inputting numerical values.
- **Volume Up/Down (Tracking)**: Adjusts the volume level. (Note: Some models may use 'Tracking' for VCR tracking adjustment).
- **Channel Up/Down (SAT.LINK)**: Changes channels. (Note: 'SAT.LINK' may have specific functions on certain Toshiba models).

3.2. DVD/VCR Playback Controls

- **VCR / DVD Mode Buttons**: Press to switch between VCR and DVD operating modes. The active mode button will typically illuminate or be indicated on your unit's display.
- **Play (►)**: Starts playback of a DVD or VCR tape.
- **Pause ( )**: Pauses playback. Press again to resume.
- **Stop (■)**: Stops playback.
- **Fast Forward (FWD)**: Fast forwards through content.
- **Rewind (REV)**: Rewinds through content.
- **Skip (/)**: Skips to the next or previous track/chapter on DVD, or skips forward/backward on VCR.
- **REC (●)**: Initiates recording on the VCR or DVD recorder. Ensure the correct mode (VCR or DVD) is selected.
- **REC MODE**: Selects the recording quality or duration mode.
- **Dubbing**: Used to copy content between DVD and VCR sections of your unit. Refer to your Toshiba unit's manual for specific dubbing procedures.

3.3. Menu and Navigation

- **Disc Menu**: Accesses the main menu of a DVD.
- **Setup**: Enters the system setup menu of your Toshiba unit.
- **Display**: Shows on-screen information about the current playback or system status.
- **Audio**: Cycles through available audio tracks or sound modes.
- **Top Menu**: Returns to the top menu of a DVD.
- **Navigation Arrows (Up, Down, Left, Right)**: Used to navigate through menus and selections.
- **ENTER**: Confirms a selection in menus.
- **Clear**: Clears an entry or cancels a selection.
- **Return**: Goes back to the previous menu or screen.

4. Maintenance

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage**: Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement**: Replace batteries promptly when the remote's responsiveness decreases. Always replace both batteries at the same time.

5. Troubleshooting


If your remote control is not functioning as expected, please follow these steps:

1. **Check Batteries**: Ensure that new, fresh 1.5V AAA alkaline batteries are correctly installed with the correct polarity (+/-).
2. **Line of Sight**: Make sure there is a clear line of sight between the remote control and the infrared sensor on your Toshiba DVD/VCR unit. Obstructions can block the signal.
3. **Distance**: Operate the remote control within a reasonable distance from your Toshiba unit (typically up to 20 feet or 6 meters).
4. **No Programming Needed**: This remote control is designed to work out of the box with compatible models. No programming or pairing is required. If it's not working, it's likely a battery or line-of-sight issue, or an incompatibility with your specific unit (though it's designed for broad compatibility).
5. **Test with Camera**: You can test if the remote is emitting an IR signal by pointing the remote's front end at a digital camera (like a smartphone camera) and pressing a button. You should see a light flash on the camera screen if the remote is working.

6. Specifications

- **Model Number**: SE-R0295
- **Brand**: ZdalaMit
- **Compatible Devices**: Toshiba DVD Video Recorder / VCR units (e.g., DVR620KU, D-VR610KU series)
- **Power Supply**: 2 x 1.5V AAA Alkaline Batteries (not included)
- **Color**: Black
- **Product Dimensions**: Approximately 8.4 x 2.1 inches (21.3 x 5.3 cm)
- **Item Weight**: Approximately 1.41 ounces (40 grams) without batteries
- **Special Feature**: Pre-programmed, no setup required

- **Max Number of Supported Devices**: 1 (controls the specified Toshiba unit)

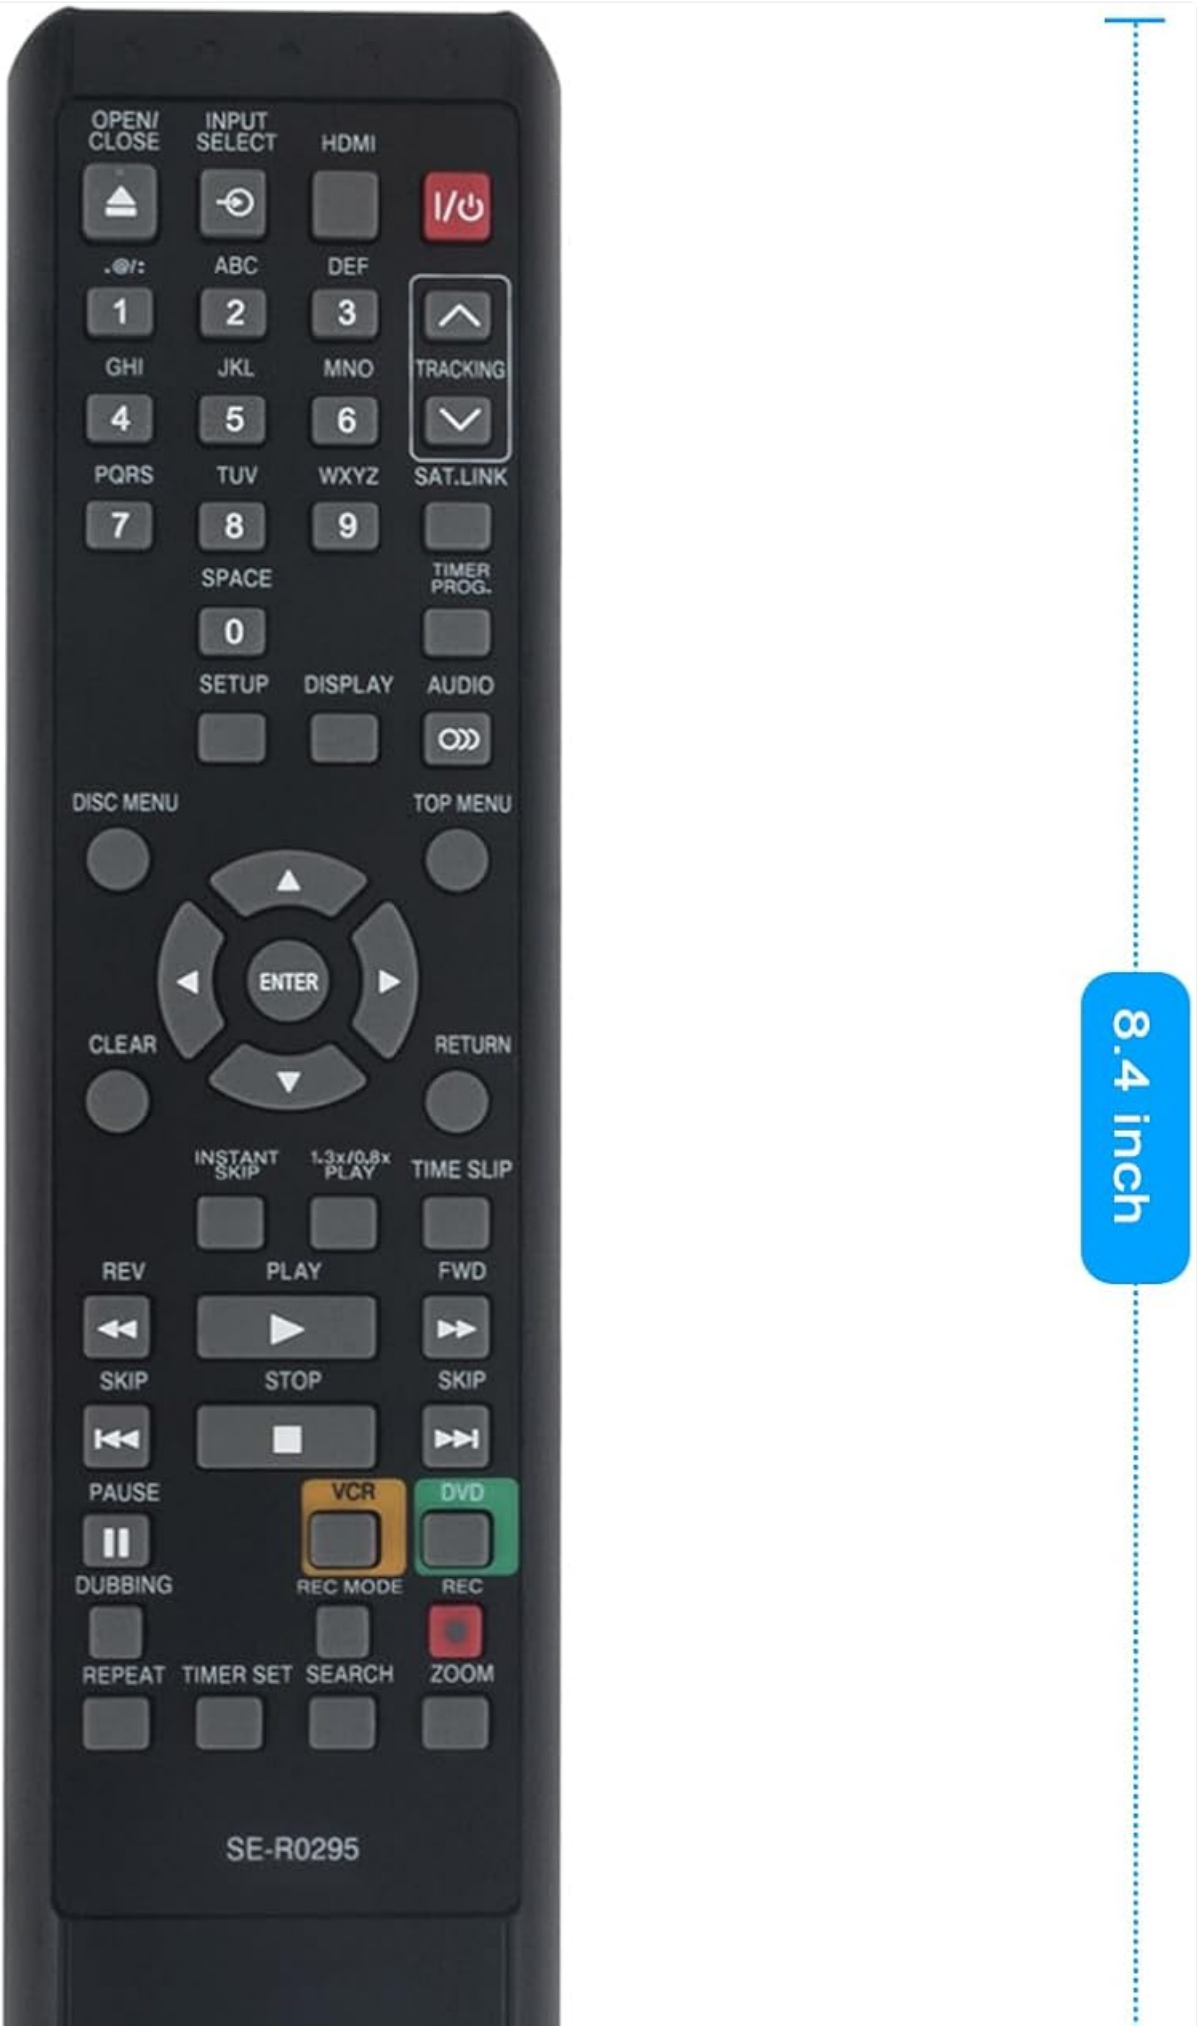

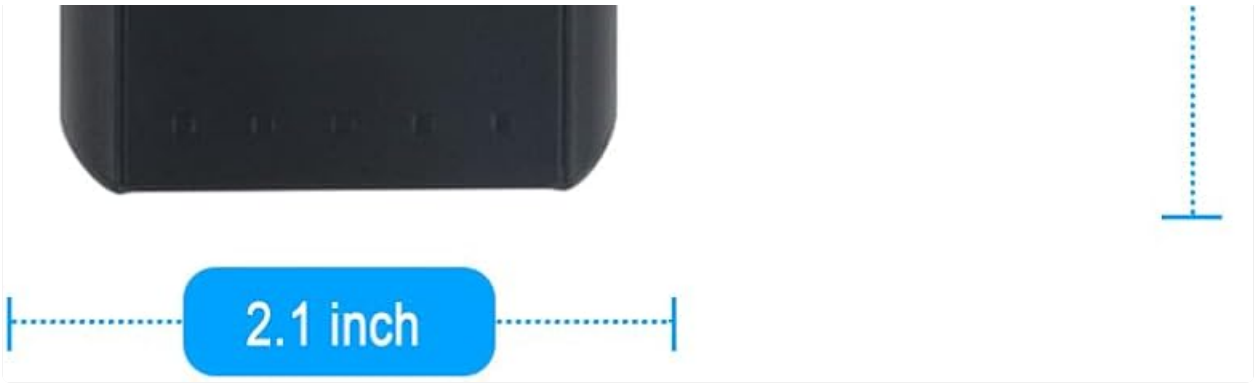


Image 6.1: Dimensions of the ZdalaMit SE-R0295 Remote Control, showing a length of 8.4 inches and a width of 2.1 inches.

7. Warranty and Support

This product is a replacement remote control. For specific warranty information, please refer to the retailer or the original purchase documentation. If you encounter any issues or have questions regarding the functionality of this remote control, please contact the seller or manufacturer for assistance.
The manufacturer encourages users to contact them with any queries.