WANAI BCD63white

WANAI Chest Freezer User Manual

Model: BCD63white | Capacity: 3.5 Cubic Feet

Introduction
Safety Information
Setup
Operation
Maintenance
Troubleshooting
Specifications
Support

1. Introduction to Your WANAI Chest Freezer

The WANAI 3.5 cubic feet free-standing chest freezer is designed for efficient and compact food storage. Its versatile design makes it an excellent choice for various spaces including kitchens, apartments, offices, bars, and college dorms, ensuring your food remains cold and fresh.



Image: The WANAI 3.5 cubic feet chest freezer, showcasing its compact size and ample storage capacity for various items.

Your browser does not support the video tag.

Video: An overview of the WANAI 3.5 Cu.Ft Chest Freezer, demonstrating its features and compact design suitable for various living spaces.

2. Important Safety Information

Please read all safety warnings and instructions carefully before using your appliance to reduce the risk of fire, electric shock, or injury.

- **Electrical Safety:** Ensure the freezer is connected to a properly grounded electrical outlet. Do not use extension cords or ungrounded adapters.
- **Ventilation:** Allow adequate space around the freezer for proper ventilation to prevent overheating.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **Children Safety:** Supervise children to ensure they do not play with the appliance. Keep packaging materials out of reach of children.
- **Disposal:** Dispose of the appliance according to local regulations for flammable refrigerants and blowing gas.
- **Stability:** Place the freezer on a firm, level surface to ensure stability and proper operation.

3. Setup and Installation

3.1 Unpacking

Carefully remove all packaging materials, including tape and labels. Inspect the freezer for any shipping damage. Keep packaging materials until you are satisfied with the product.

3.2 Placement

This compact freezer is designed to fit seamlessly into various environments. Its low noise operation (less than 40dB) makes it suitable for quiet spaces.

- Ensure the freezer is placed on a level surface.
- Avoid direct sunlight or heat sources.
- Allow sufficient clearance around the unit for air circulation.



Image: The freezer positioned in a kitchen, illustrating its compact size and quiet operation.



Image: Visual representation of ideal placement areas for the freezer, including bars, kitchens, dorms, and living rooms.

3.3 Initial Power-On

IMPORTANT: After transporting, please allow the freezer to stand upright for at least 24 hours before plugging it in. This allows the refrigerant to settle, ensuring optimal performance and longevity.

3.4 Handle Installation

The freezer comes with side handles for easy portability. Attach the handles to the designated slots on the sides of the freezer using the provided screws. Ensure they are securely fastened.

4. Operating Instructions

4.1 Temperature Adjustment Control

Your WANAI chest freezer features a 7-level temperature adjustment control, allowing you to switch between freezing and refrigerating functions based on your needs.

- **Levels 1-2:** Refrigerator temperature range from 32°F to 50°F (0°C to 10°C), ideal for beverages and fruits.
- **Levels 3-7:** Freezer temperature range from -11.2°F to 32°F (-24°C to 0°C), suitable for meat, seafood, and ice cream.



Image: The temperature control dial with settings from 1 to 7, indicating different temperature zones.



Image: Examples of items best stored at refrigerator temperatures (Levels 1-2).



Image: Examples of items best stored at freezer temperatures (Levels 3-7).

4.2 Removable Storage Basket

The freezer includes a removable storage basket for convenient organization of smaller or frequently accessed items. This helps in keeping the main compartment tidy and accessible.



Image: The interior of the freezer with the removable basket, demonstrating efficient storage.

4.3 Top Open Door Operation

The balanced hinge-style door is designed to remain open at angles from 45 to 90 degrees, providing easy access to the contents without the need to hold the lid. The fully sealed door ensures efficient temperature retention.



Image: The freezer lid demonstrating its ability to stay open at various angles for convenience.

5. Maintenance and Care

5.1 Cleaning the Interior and Exterior

- Unplug the freezer before cleaning.
- Clean the interior with a solution of mild detergent and warm water. Rinse thoroughly and dry.
- Wipe the exterior with a soft cloth and mild detergent.
- Do not use abrasive cleaners or sharp objects.

5.2 Defrosting

This is a manual defrost freezer. Defrost when frost accumulation reaches about 1/4 inch (6 mm) thick. To defrost:

1. Unplug the freezer.
2. Remove all food items and store them in another freezer or cooler.
3. Open the lid and allow the frost to melt naturally. You can place towels at the bottom to absorb water.
4. The drain dial (located at the bottom of the freezer) can be opened to facilitate water drainage during defrosting.
5. Once defrosted, clean and dry the interior thoroughly before plugging it back in and returning food.



Image: The drain dial at the base of the freezer, used for manual defrosting.

5.3 Power Saving Tips

The freezer is designed for lower energy consumption with its R600a high-efficiency compressor, using approximately

0.56 kilowatt-hour per day. To maximize energy efficiency:

- Avoid opening the lid too frequently or for extended periods.
- Ensure the lid seal is clean and intact.
- Do not place hot food directly into the freezer.
- Keep the freezer away from direct sunlight and heat-producing appliances.

6. Troubleshooting

If you experience issues with your freezer, please consult the table below for common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Freezer does not operate	Not plugged in; circuit breaker tripped; power outage.	Check power cord; reset circuit breaker; check household power.
Temperature is not cold enough	Temperature control set too warm; lid not closed properly; excessive door openings; large amount of warm food added.	Adjust temperature control to a colder setting; ensure lid is sealed; reduce lid openings; allow time for new food to cool.
Excessive frost buildup	Lid not sealed properly; high humidity; frequent lid openings.	Check lid gasket for damage or obstruction; reduce lid openings; defrost as needed.
Freezer runs too frequently	High ambient temperature; temperature control set too cold; lid opened too often.	Move freezer to a cooler location; adjust temperature control; reduce lid openings.

7. Product Specifications

Feature	Detail
Brand Name	WANAI
Model Info	BCD63white
Item Weight	35 pounds
Product Dimensions	30.3"D x 28.5"W x 18.8"H
Country of Origin	China
Capacity	3.5 Cubic Feet
Installation Type	Freestanding

Feature	Detail
Form Factor	Mini Fridges (functions as freezer)
Color	White
Voltage	110 Volts
Door Hinges	Top
Door Material Type	Stainless Steel
Shelves	1 (removable basket)
Certification	Energy (EnergyGuide compliant)
Included Components	Switch, Side Handle

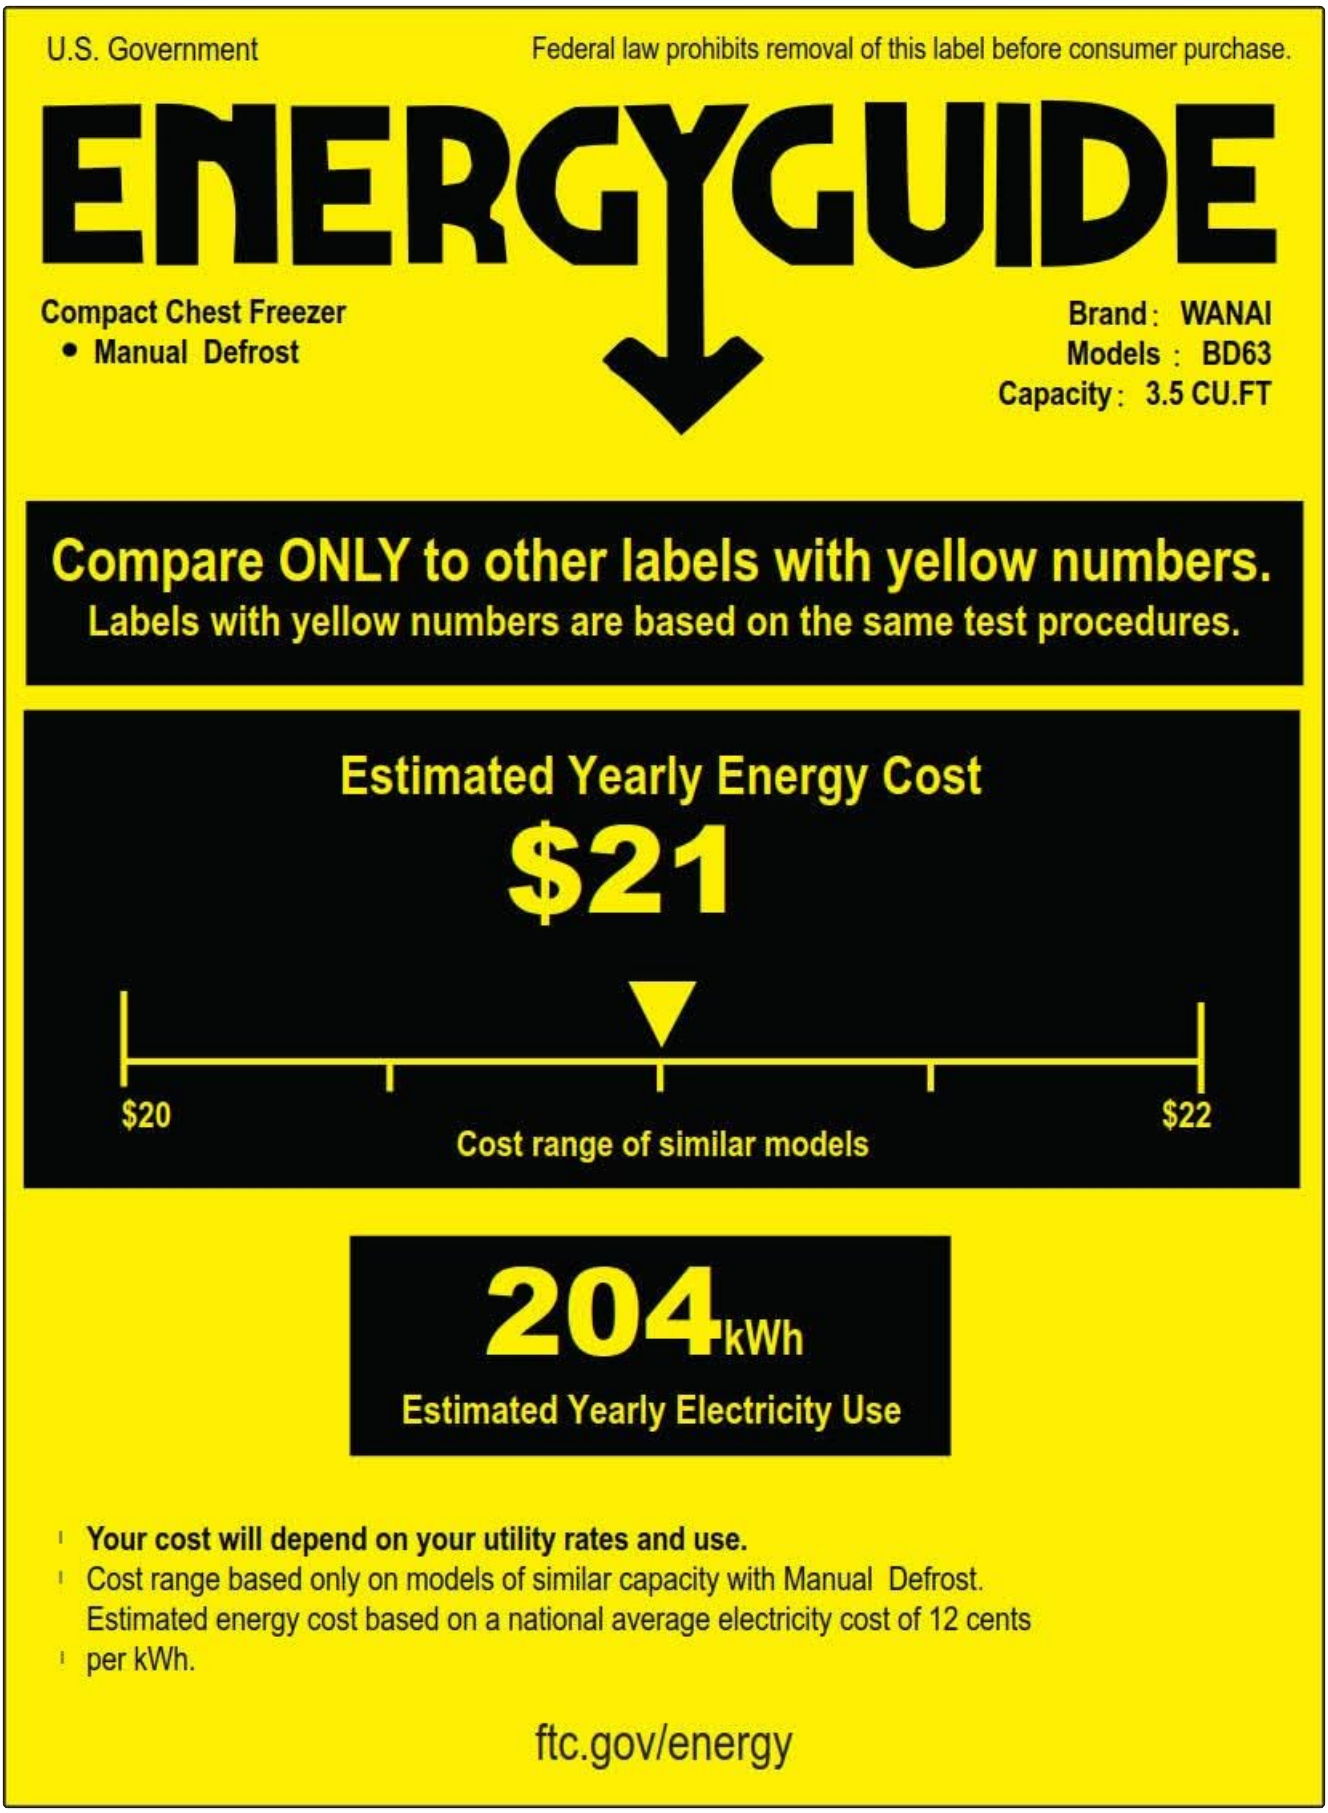


Image: The EnergyGuide label for the WANAI Chest Freezer, detailing its energy efficiency.

8. Warranty and Customer Support

8.1 Warranty Information

WANAI products are manufactured with high-quality materials and craftsmanship. For specific warranty details, please refer to the warranty card included with your product or contact WANAI customer service.

8.2 Contact Us

We are committed to providing the highest standard of customer service. If you have any questions about your WANAI chest freezer, require assistance with setup, operation, or troubleshooting, please do not hesitate to contact us. Our customer service team is available 24 hours to assist you.
For support, please visit the WANAI store on Amazon or refer to the contact information provided in your product packaging.

Copyright © WANAI. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question