Whirlpool MAGICOOK PRO 26CE

Whirlpool MAGICOOK PRO 26CE 24 L Convection Microwave Oven User Manual

1. Introduction

Thank you for choosing the Whirlpool MAGICOOK PRO 26CE 24 L Convection Microwave Oven. This appliance is designed to provide versatile cooking options, including microwave, grill, and convection functions, to enhance your culinary experience. Please read this manual thoroughly before operating your new oven to ensure safe and efficient use. Keep this manual for future reference.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, burns, or injury to persons. These include:

- Read all instructions before using the appliance.
- Do not operate the oven if the door or door seals are damaged. Contact qualified service personnel.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not use this oven for commercial purposes. It is intended for household use only.
- Ensure the appliance is properly grounded.
- Do not immerse the cord or plug in water.

3. Product Overview

Key Features

- 24L Capacity with Large Cavity
- Convection Microwave Features: Baking, Grilling, Reheating, Defrosting, Calorie Meter, and Cooking.
- 130 Auto Cook Menus, Combination Cooking & Defrost Function

- Smarter Than Air Fryers: Cooks 50% faster while retaining 45% more moisture than a conventional air fryer.
- Zero Oil Cooking: Enjoy healthy food without added oil.

Components and Design

The Whirlpool MAGICOOK PRO 26CE features a sleek black design with a user-friendly control panel and a spacious stainless steel interior.



Figure 3.1: Front view of the Whirlpool MAGICOOK PRO 26CE Microwave Oven, highlighting its multi-heat technology and 5-year magnetron warranty.



Figure 3.2: Appliance dimensions: 48.2 cm (width) x 47.5 cm (depth) x 28 cm (height).



Figure 3.3: Detailed view of the control panel with instant menu options and function buttons.

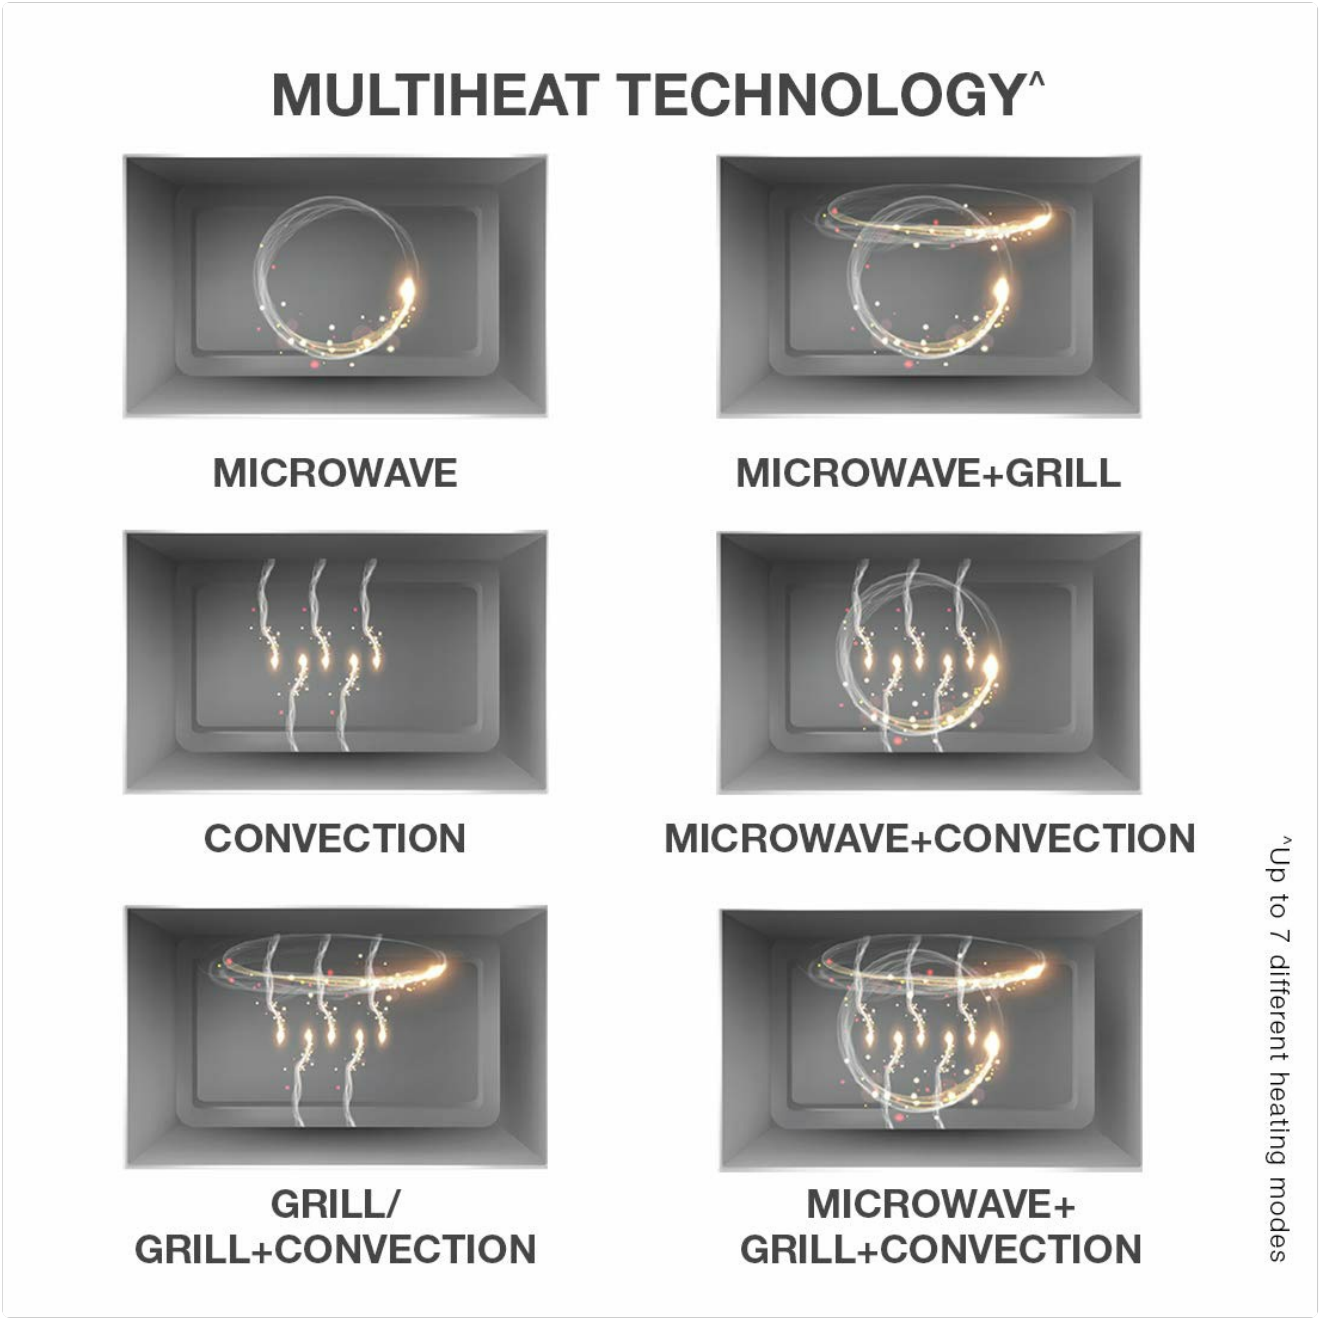


Figure 3.4: Visual representation of the Multiheat Technology, showing various heating modes including Microwave, Grill, Convection, and combinations.

4. Setup

4.1 Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape. Check for any damage during transit. Do not operate the oven if it appears damaged.

4.2 Placement

Place the oven on a flat, stable surface strong enough to hold its weight. Ensure there is adequate ventilation around the oven. Maintain a minimum clearance of 10 cm at the rear, 20 cm at the sides, and 30 cm above the oven for proper airflow. Do not block any ventilation openings.



Figure 4.1: Proper placement of the microwave oven on a kitchen countertop, ensuring adequate space.

4.3 Electrical Connection

Plug the oven into a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications listed on the appliance rating label (230 Volts, 900 Watts). Do not use extension cords or adapters.

5. Operating Instructions

5.1 Control Panel Overview

The control panel features a digital display, instant menu buttons, function buttons (Microwave, Grill, Convection, Defrost, Combi, Clock), and time/power adjustment buttons.



Figure 5.1: Detailed view of the control panel for function selection and time adjustment.

5.2 Basic Microwave Cooking

1. Place food in a microwave-safe container inside the oven.
2. Close the oven door.
3. Press the 'Microwave' button.
4. Use the '+' and '-' buttons to set the desired cooking time.
5. Press 'Start' (Jet Start) to begin cooking.

5.3 Convection Cooking

Convection mode uses a fan to circulate hot air, ideal for baking and roasting.

1. Place food on the appropriate rack (if provided) inside the oven.
2. Press the 'Convection' button.
3. Adjust the temperature using the control buttons.
4. Set the cooking time.

5. Press 'Start' (Jet Start).

5.4 Grill Cooking

Grill mode is suitable for browning and toasting.

1. Place food on the grill rack inside the oven.
2. Press the 'Grill' button.
3. Set the grilling time.
4. Press 'Start' (Jet Start).

5.5 Combination Cooking

This oven offers various combination modes (Microwave + Grill, Microwave + Convection, Grill + Convection, Microwave + Grill + Convection) for faster and more versatile cooking results.

1. Select the desired 'Combi' mode.
2. Adjust power levels or temperatures as needed.
3. Set the cooking time.
4. Press 'Start' (Jet Start).

5.6 Defrost Function

Use the defrost function to thaw frozen foods quickly and evenly.

1. Place frozen food in the oven.
2. Press the 'Defrost' button.
3. Select defrost by weight or time, and adjust accordingly.
4. Press 'Start' (Jet Start).

5.7 Auto Cook Menus

The oven features 130 pre-programmed auto cook menus for various dishes. Refer to the recipe book (if included) or the control panel for specific menu options and instructions.

1. Press the 'Auto Cook' button or select from the instant menu options.
2. Choose the desired menu number or food category.
3. Enter the weight or quantity if prompted.
4. Press 'Start' (Jet Start).

5.8 Zero Oil Cooking

This feature allows you to cook various dishes without adding oil, promoting healthier eating. Select the appropriate Zero Oil Cooking menu from the Auto Cook options.

5.9 Child Lock

To prevent accidental operation by children, activate the child lock function. Typically, this involves pressing and holding a specific button (e.g., 'Stop' or 'Child Lock') for a few seconds until an indicator appears on the display.

5.10 Jet Start

The 'Jet Start' button provides a quick way to start cooking at full microwave power for a preset duration (e.g., 30 seconds). Each press adds more time.

5.11 Calorie Meter

The Calorie Meter feature helps you track the estimated calorie content of certain dishes prepared using the auto cook menus. Consult the recipe book for details on supported dishes.

5.12 Microwave Recipes

For additional recipes and cooking ideas, scan the QR code below:



Figure 5.2: Scan this QR code to access a collection of microwave recipes. Access Recipes Online

6. Maintenance and Cleaning

6.1 Exterior Cleaning

Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.

6.2 Interior Cleaning

Clean the oven interior regularly. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes. The steam will loosen food particles, making them easier to wipe away. Use a mild detergent and a soft cloth. Ensure the oven is unplugged before cleaning.



Figure 6.1: Interior view of the microwave oven with a cooking dish, illustrating the spacious cavity.



Figure 6.2: Empty interior of the microwave oven, showing the stainless steel finish and glass turntable.

6.3 Turntable and Roller Ring

The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.

7. Troubleshooting

If you encounter any issues with your microwave oven, please refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Oven does not start	Power cord unplugged; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker.

Problem	Possible Cause	Solution
Food not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time.	Stir or turn food halfway through cooking; Adjust power level and cooking time as per recipe.
Light not working	Bulb burnt out.	Contact qualified service personnel for bulb replacement.
Excessive steam inside oven	High moisture content in food.	This is normal for foods with high moisture. Wipe interior after use.

8. Specifications

Specification	Value
Brand	Whirlpool
Model	MAGICOOK PRO 26CE BLACK
Capacity	24 litres
Installation Type	Countertop
Special Features	Auto Cook
Oven Cooking Mode	Convection
Colour	Black
Voltage	230 Volts
Wattage	900 Watts
Fuel Type	Electric
Defrost System	Defrost
Door Orientation	Left
Material	Stainless Steel
Item Weight	14 kg 100 g
Item Dimensions LxWxH	39 x 48.2 x 28 Centimeters

9. Warranty and Support

9.1 Warranty Information

Your Whirlpool MAGICOOK PRO 26CE Microwave Oven comes with a**1-year comprehensive warranty on the**

product and a **5-year warranty on the Magnetron** from the date of purchase. Please retain your purchase receipt for warranty claims.

9.2 Customer Support

For service, support, or any queries, please contact Whirlpool customer care:

- **Toll-Free:** 1800 208 1800
- **Email:** helpdeskindia@whirlpool.com
- **Manufacturer/Importer:** Whirlpool of India Limited, Plot No. A-4, MIDC Ranjangaon, Taluka Shirur, Dist: Pune, Maharashtra 412220, India.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question