JVC HAA7TW

JVC Gumy Truly Wireless Earbuds Headphones

Model: HAA7TW

Introduction

The JVC Gumy truly wireless earbuds are designed for comfort and convenience, featuring a secure fit with included S/M/L earpieces. They offer IPX4 water resistance, making them suitable for various environments, including outdoor use. With Bluetooth 5.0 technology, these earbuds provide a stable connection and come with a compact charging case that extends their playback time up to 15 hours.



Image: JVC Gumy Truly Wireless Earbuds (White) with their charging case.

What's in the Box

Your JVC Gumy Truly Wireless Earbuds package includes the following items:

- Headphones (Left and Right Earbuds)
- Wireless Charging Case
- Charging Cable
- Ear Cushions (S/M/L sizes)



JVC

Gumy

TRUE WIRELESS



WIRELESS HEADPHONES
ÉCOUTEURS SANS FIL
AURICULARES INALÁMBRICOS
KABELLOSER KOPFHÖRER

HA-A7T

Coconut White / Blanc Coco

Eco-Friendly
Less-Plastic
Package

15h

Image: The retail packaging for the JVC Gumy True Wireless Earbuds, showing the earbuds and charging case.

Setup

Initial Charging

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case, ensuring they are properly seated. Connect the charging cable to the case and a USB power source. The indicator lights on the case will show the charging status.



Image: JVC Gumy Earbuds placed inside their open charging case, showing the charging contacts.

Pairing with a Device

The earbuds feature an auto-connect function. Simply remove them from the charging case, and they will automatically power on and enter pairing mode. On your device (e.g., smartphone, tablet), enable Bluetooth and select "JVC HAA7TW" from the list of available devices to complete the pairing process.

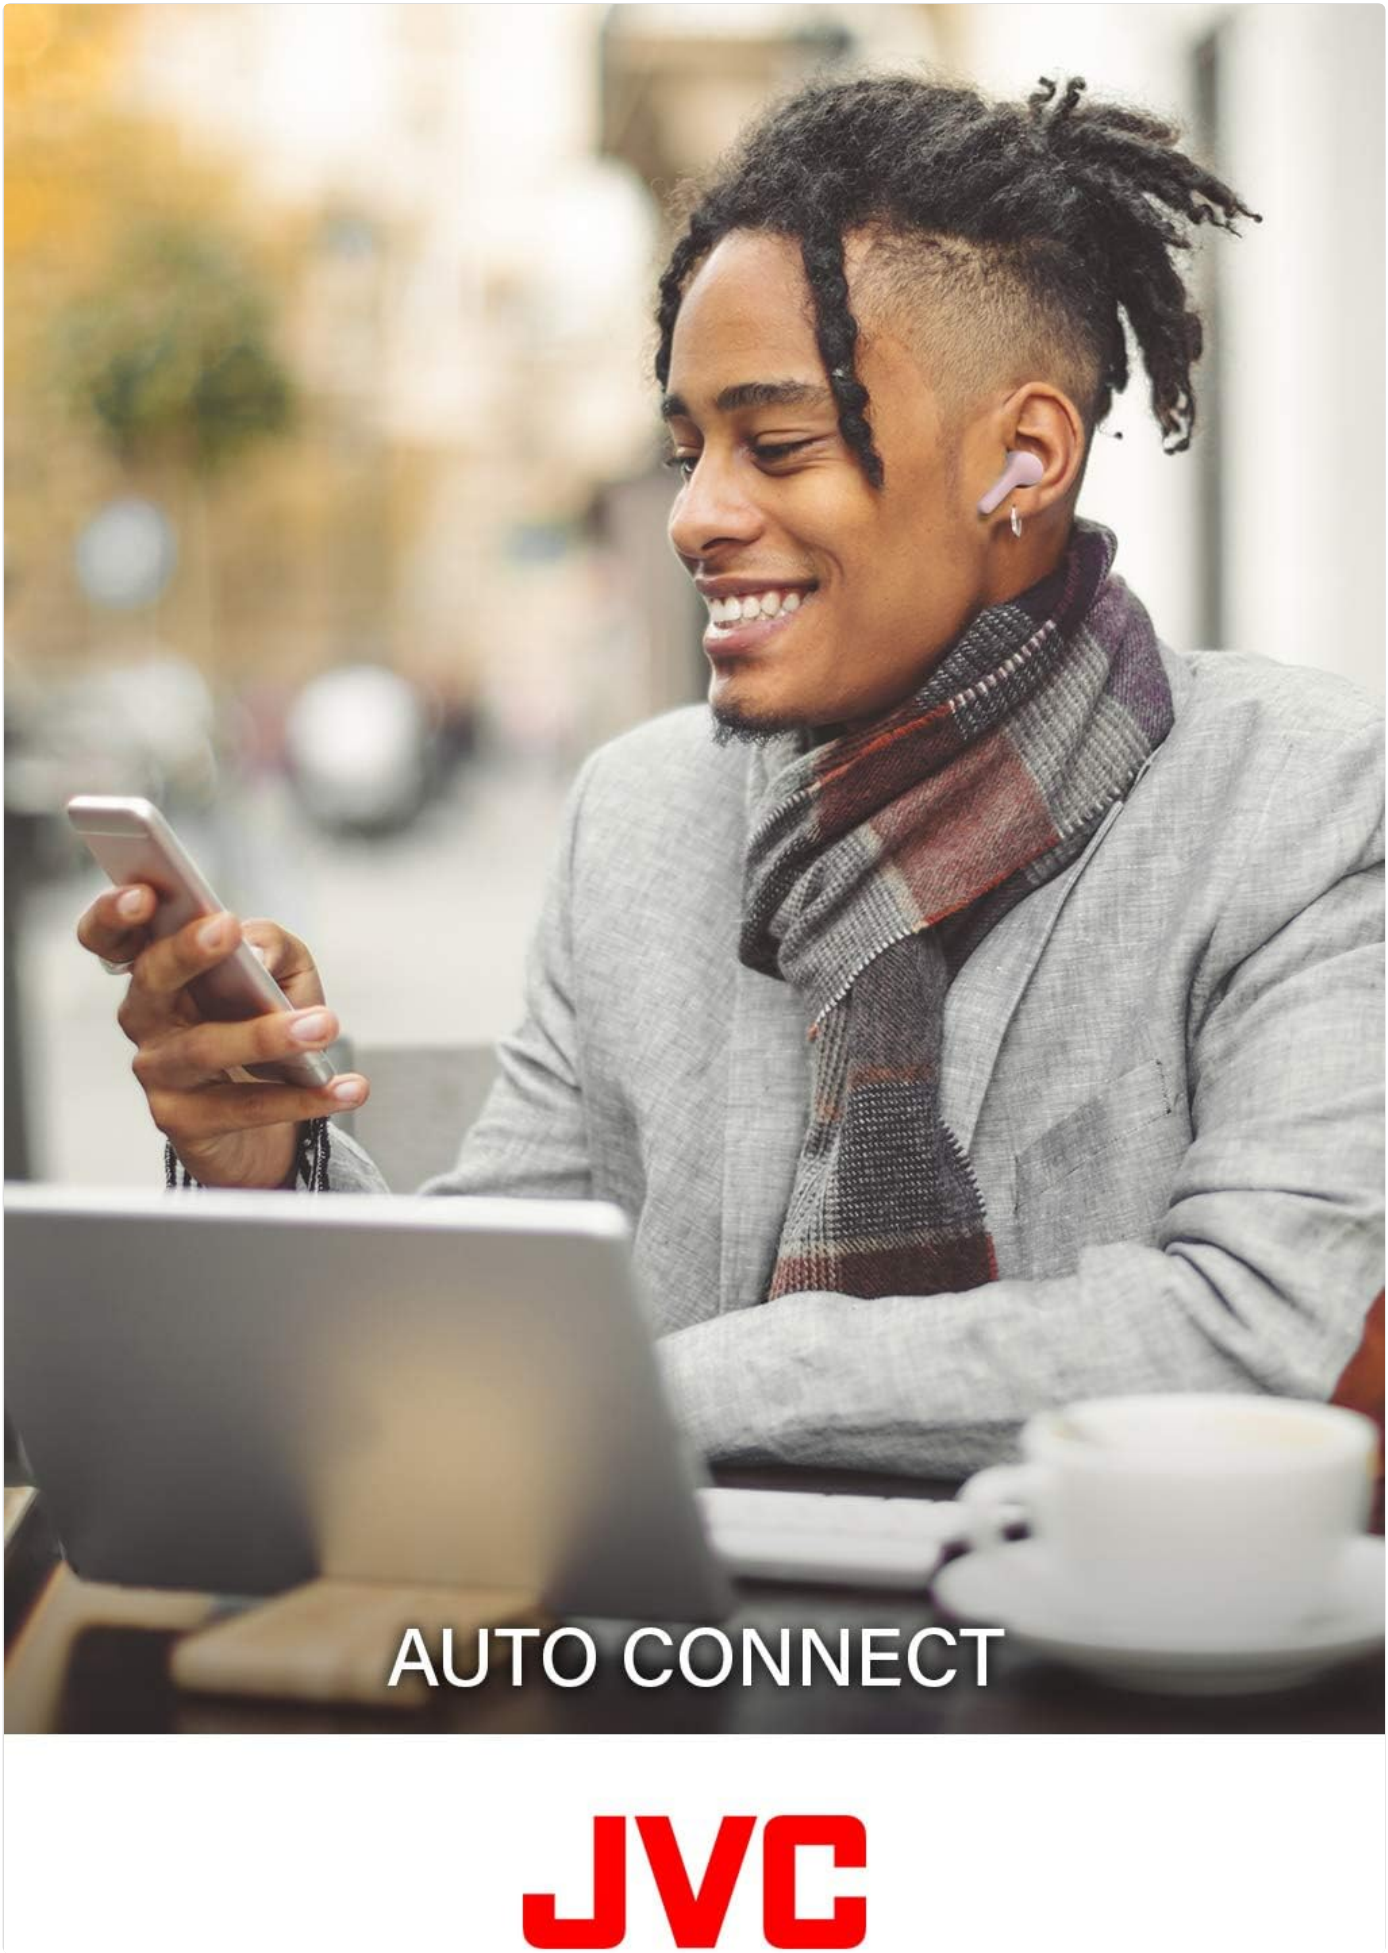


Image: A person wearing JVC Gumy Earbuds while looking at a smartphone, illustrating the auto-connect feature.

For detailed pairing and restore settings, refer to the official video below:

Your browser does not support the video tag.

Video: Official JVC guide on pairing and restoring settings for Gumy True Wireless Earbuds.

Operating Instructions

Wearing the Earbuds

Select the ear cushions that provide the most comfortable and secure fit for your ears. Proper fit is crucial for optimal sound quality and call performance. Gently insert the earbuds into your ear canals and adjust them until they feel snug.



Image: A detailed view of the JVC Gumy Earbuds, highlighting their ergonomic design.

Controls and Functions

The earbuds feature intuitive controls for managing audio playback and calls. Refer to the user manual for specific button functions (e.g., play/pause, skip track, answer/end call, activate voice assistant). The earbuds are compatible with voice assistants for hands-free operation.
Note: The right earbud does not work independently; only the left earbud can be used alone.

Your browser does not support the video tag.
Video: An overview of the features of the Gumy True Wireless Earbuds.

Maintenance

Cleaning

Regularly clean the earbuds and charging case with a soft, dry cloth. For the ear cushions, you may gently wipe them with a damp cloth and mild soap, ensuring they are completely dry before reattaching. Avoid using harsh chemicals or abrasive materials.

Storage

When not in use, store the earbuds in their charging case to protect them and ensure they remain charged. Store the case in a cool, dry place away from direct sunlight and extreme temperatures.

Water Resistance (IPX4)

The earbuds are rated IPX4, meaning they are resistant to splashing water from any direction. This makes them suitable for light rain or sweaty workouts. However, they are not designed for submersion in water. Avoid exposing them to strong jets of water or prolonged immersion.



Image: The underside of the JVC Gumy Earbuds, displaying the charging contacts and the IPX4 water resistance marking.

Troubleshooting

Problem	Possible Cause	Solution
Earbuds do not power on.	Low battery or not properly seated in case.	Ensure earbuds are fully charged in the case. Verify charging cable connection.
Cannot pair with device.	Earbuds not in pairing mode, or device Bluetooth is off.	Remove earbuds from case to activate pairing mode. Ensure Bluetooth is enabled on your device. Forget previous pairings and re-pair.
Sound is distorted or intermittent.	Poor Bluetooth connection, interference, or improper fit.	Move closer to your device. Avoid obstacles between earbuds and device. Adjust earbud fit and try different ear cushion sizes.
Only one earbud works.	Right earbud cannot function alone.	Ensure both earbuds are removed from the case. The right earbud requires the left earbud to be active.

For further assistance, please consult the official user guide or contact JVC customer support.

Specifications

Model Name	GUMY True Wireless (HAA7TW)
Connectivity Technology	Bluetooth 5.0
Water Resistance Level	IPX4 (Splash Resistant)
Battery Life (Earbuds + Case)	Up to 15 Hours (6H + 9H)
Frequency Range	20 Hz - 20,000 Hz
Impedance	16 Ohm
Noise Control	Sound Isolation
Control Type	Voice Control, Remote, Touch
Material	Silicone
Product Dimensions	7.28 x 1.69 x 2.87 inches
Item Weight	3.84 ounces

Warranty and Support

For detailed warranty information and customer support, please refer to the official JVC documentation. You can find additional resources and contact information via the links below:

- Instructions for Use (PDF)
- Troubleshooting Guide (PDF)
- User Guide (PDF)
- User Manual (PDF)

For direct support, visit the official JVC website or contact their customer service line.

© 2024 JVC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question