Havells BT9009

Havells BT9009 Digital Display Beard & Moustache Trimmer User Manual

Model: BT9009

1. Product Overview

The Havells BT9009 is a rechargeable beard and moustache trimmer designed for precise grooming. It features a digital display for battery percentage, titanium-coated blades, and multiple length settings for versatile styling.



Image 1: The Havells BT9009 trimmer body and a detached comb guide, positioned near a bathroom sink. This illustrates the main components of the grooming device.



Image 2: A visual representation of the trimmer's ergonomic design, emphasizing the 360-degree comfort grip for secure and easy handling during use.

2. Package Contents

Please check the box for the following items:

- Havells BT9009 Trimmer Unit
- Detachable Comb Guide
- Charging Cable (USB or AC adapter, depending on region)
- Cleaning Brush
- Lubricating Oil
- User Manual (this document)

3. Setup and Charging

3.1 Initial Charge

Before first use, fully charge the trimmer for approximately 8 hours. This ensures optimal battery performance and longevity. The digital display will show the charging progress.



Image 3: A close-up of the trimmer's digital display, indicating a 95% battery charge level. This display provides real-time battery status.

3.2 Connecting the Charger

Connect the charging cable to the trimmer's charging port and plug the other end into a suitable power outlet. The digital display will illuminate to indicate charging.

3.3 Battery Life

A full charge provides sufficient power for approximately 30 or more trimming sessions, depending on usage duration and hair type.

4. Operating Instructions

4.1 Attaching the Comb Guide

Ensure the trimmer is switched off. Align the comb guide with the trimmer head and gently push until it clicks into place. To remove, pull the comb guide away from the trimmer head.

4.2 Adjusting Trimming Length

The BT9009 features an auto-locking zoom wheel for precise length adjustments. Rotate the wheel to select your desired trimming length from 0.5 mm to 10 mm, with 0.5 mm precision. The selected length will be indicated on the trimmer.



Image 4: The trimmer's side profile, highlighting the auto-locking zoom wheel. An inset shows a magnified view of the wheel, demonstrating how to adjust the 20 available length settings for precise trimming.

4.3 Trimming Technique

1. Ensure your beard or moustache is clean and dry.
2. Turn on the trimmer by pressing the power button.
3. Hold the trimmer with the comb guide flat against your skin.
4. Move the trimmer against the direction of hair growth using slow, controlled strokes.
5. For a closer trim, remove the comb guide and use the trimmer blades directly on the skin, being careful around sensitive areas.



Image 5: A detailed view of the trimmer head in action on facial hair, emphasizing its extra-wide mouth opening and Capture-Trim Technology for efficient cutting in a single stroke.

5. Maintenance and Cleaning

5.1 Cleaning the Trimmer

1. Turn off and unplug the trimmer before cleaning.
2. Remove the comb guide.
3. Use the provided cleaning brush to remove hair clippings from the blades and comb guide.
4. The blades can be rinsed under running water. Ensure the trimmer body is not submerged unless specified as waterproof (refer to product specifications for water resistance).
5. Allow all parts to air dry completely before reassembling or storing.

5.2 Lubricating the Blades

After every few uses, or if the trimmer's performance decreases, apply a small drop of the provided lubricating oil to the blades. Turn on the trimmer for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.

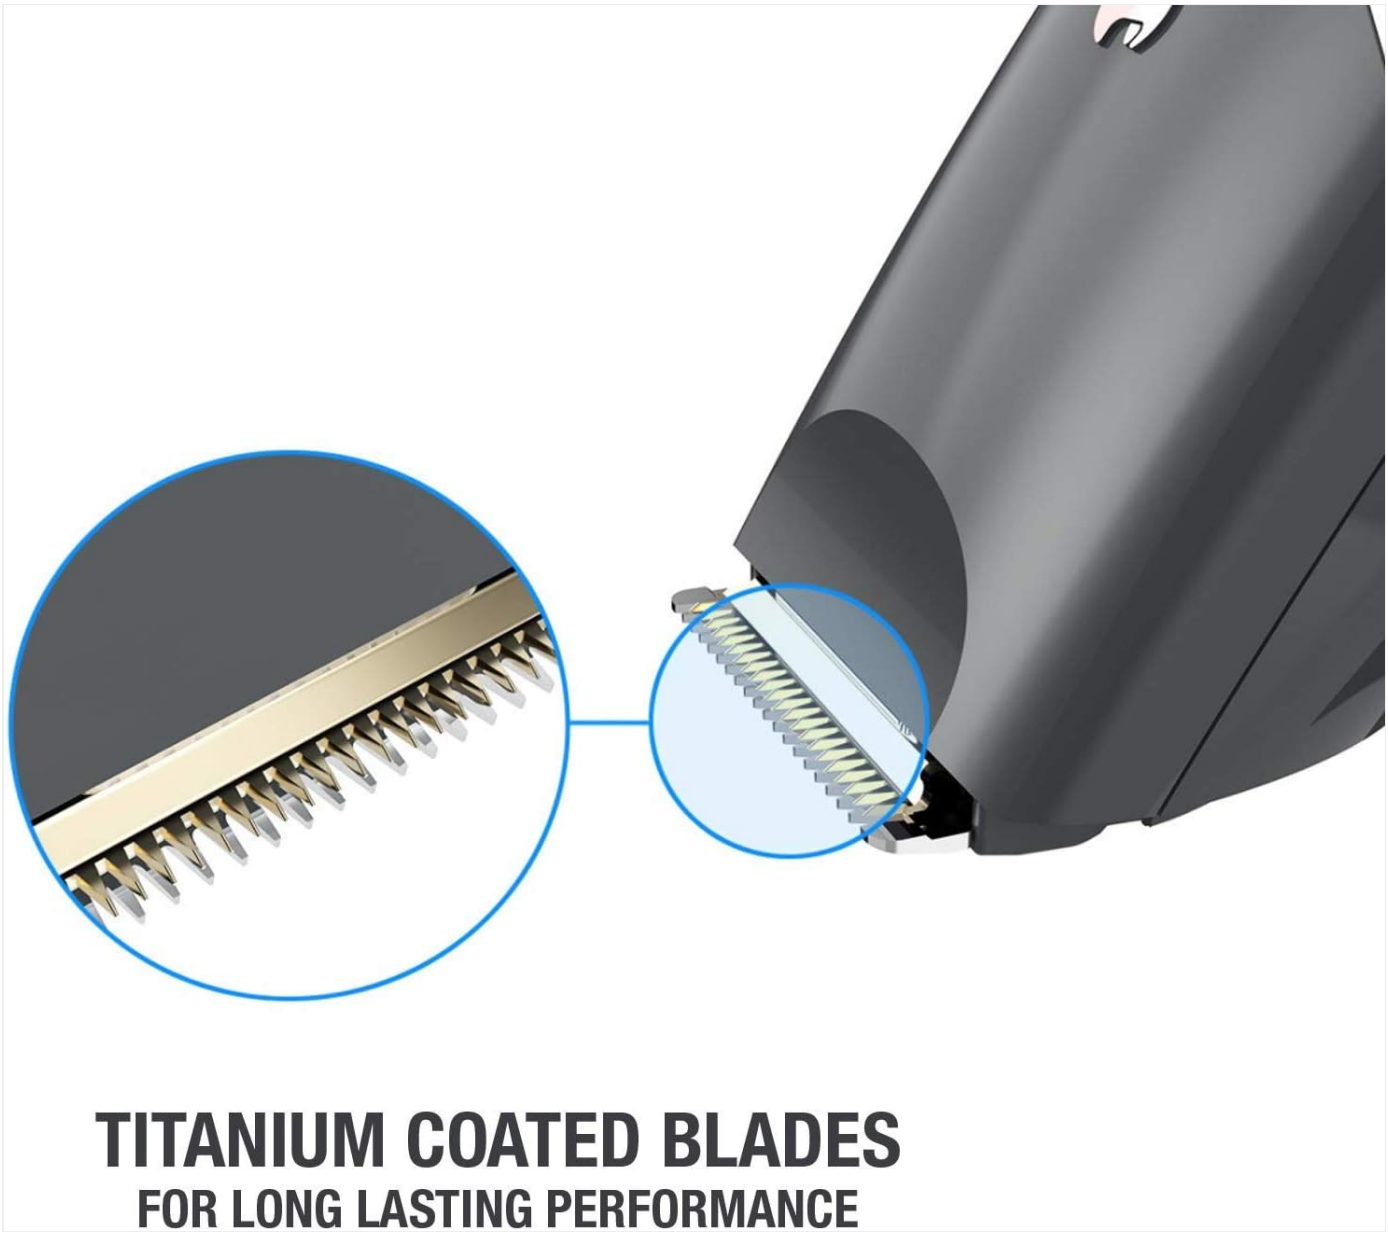


Image 6: A magnified view of the trimmer's titanium-coated blades, highlighting their sharp edges and durable construction designed for long-lasting performance.

6. Troubleshooting

- **Trimmer not turning on:** Ensure the trimmer is fully charged. Check if the power button is pressed correctly.
- **Reduced trimming performance:** Clean the blades and comb guide thoroughly to remove hair buildup. Lubricate the blades with oil.
- **Battery not charging:** Verify the charging cable is securely connected to both the trimmer and the power outlet. Ensure the power outlet is functional.
- **Blades pulling hair:** This usually indicates dull blades or insufficient lubrication. Clean and oil the blades. If the issue persists, the blades may need replacement (contact customer support).

7. Specifications

Model Number	BT9009
Brand	Havells
Power Source	Battery Powered (Rechargeable)
Trimming Lengths	0.5 mm to 10 mm (20 settings, 0.5 mm precision)
Blade Material	Titanium Coated Blades
Product Dimensions (L x W x H)	4.3 x 4 x 17.8 cm
Item Weight	160 Grams
Special Features	Digital Display, Portable, Rechargeable

8. Safety Information

- Keep the appliance dry. Do not use it near water or while bathing/showering unless explicitly stated as waterproof.
- Do not use the appliance if it is damaged.
- Keep out of reach of children.
- Only use the charging cable provided with the appliance.
- Do not disassemble the appliance. For repairs, contact authorized service personnel.
- Avoid using the trimmer on irritated or broken skin.

9. Warranty and Support

For warranty information, service, or support, please refer to the warranty card included with your product or visit the official Havells website. You may also contact Havells customer service directly for assistance with your BT9009 trimmer.

© 2024 Havells. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question