Joiedomi X0-492J-U87A

Joiedomi 6 FT Stacked Snowman Christmas Inflatable Instruction Manual

Model: X0-492J-U87A

Introduction

This manual provides essential instructions for the safe and proper setup, operation, and maintenance of your Joiedomi 6 FT Stacked Snowman Christmas Inflatable. Please read all instructions carefully before use to ensure optimal performance and longevity of your product.

Safety Information

- Keep away from heat sources.
- Ensure proper ventilation for the built-in air blower.
- Secure the inflatable properly with stakes and ropes to prevent it from becoming a projectile in high winds.
- Do not attempt to inflate the product during exceptionally strong winds. If weather conditions are too windy for safe operation, simply allow the inflatable to deflate.
- Do not use the product if the external flexible cable or cord is damaged. Any damaged main connection cable must be repaired by qualified technicians.
- Before connecting to a power supply, completely remove the equipment from its packaging. This product is designed for safe use in winter weather and can withstand normal exposure to rain and snow. It should not be submerged under liquid in any circumstances.
- Avoid contact with sharp objects during product use. Do not climb or ride on the product, and refrain from leaning against it.
- Adult supervision is recommended when children are near the inflatable.

Package Contents

Your Joiedomi 6 FT Stacked Snowman Christmas Inflatable package includes:

- 1 x 6 FT Stacked Snowman Inflatable with Built-in LED Lights and Air Blower
- Extended Power Cord with UL Certification Plug
- Ground Stakes
- Fastened Ropes
- Built-in Sandbags for stability

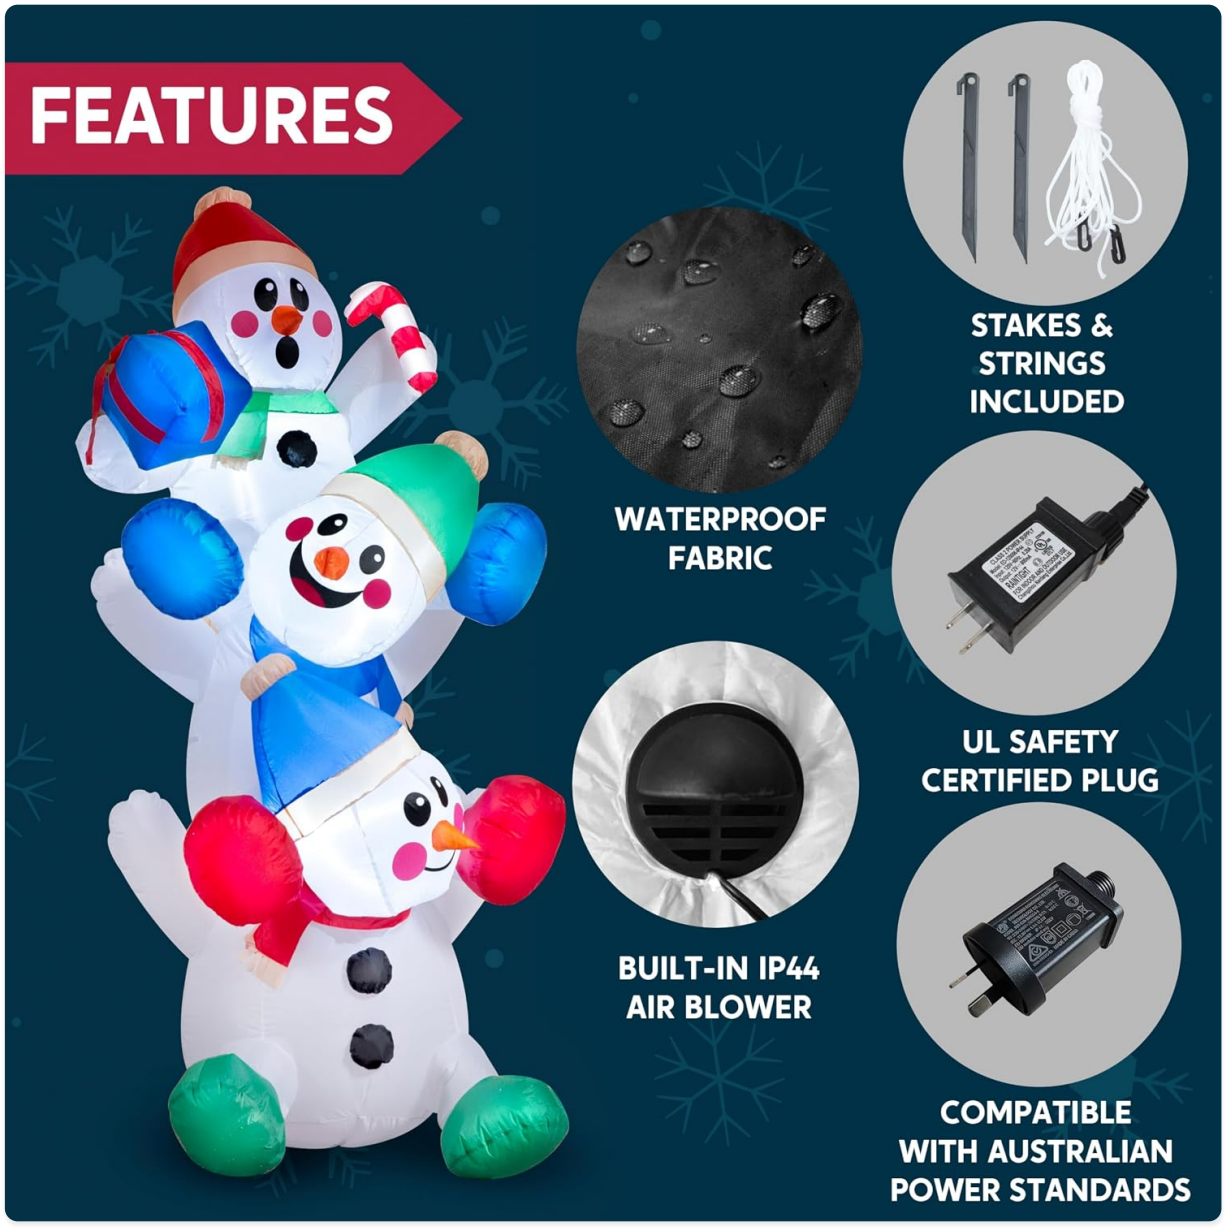


Figure 1: Included components and features of the inflatable.

Setup Instructions

Follow these steps to set up your inflatable snowman:

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
2. **Position:** Place the deflated inflatable in your desired outdoor location, ensuring the air blower is clear of obstructions and on a flat, stable surface.
3. **Close Zipper:** Locate the zipper at the bottom of the inflatable and ensure it is fully closed.

4. **Inflate:** Plug the UL certified power cord into a standard electrical outlet. The built-in air blower will begin to inflate the snowman. Inflation typically takes approximately 30-60 seconds.
5. **Secure:** Once fully inflated, use the provided ground stakes and fastened ropes to secure the inflatable to the ground. Attach ropes to the designated loops on the inflatable and anchor them with stakes. The built-in sandbags provide additional stability.



Figure 2: Visual guide for easy setup.

Video 1: Demonstration of the Joiedomi 6 FT Christmas Snowman Inflatable setup and inflation process.

Operating Instructions

Your Joiedomi Stacked Snowman Inflatable is designed for simple operation:

- **Power On:** Once properly set up and plugged in, the inflatable will automatically inflate and the built-in LED lights will illuminate.
- **LED Lights:** The inflatable features bright, built-in LED lights that enhance visibility and create a festive atmosphere, especially in the evening.
- **Power Off/Deflate:** To deflate the snowman, simply unplug the power cord from the electrical outlet. The inflatable will slowly deflate.



Figure 3: The inflatable snowman illuminated at night.

Video 2: Overview of the Joiedomi 6 FT Christmas Inflatable Stacked Snowman in operation.

Maintenance

- **Cleaning:** To clean the inflatable, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Storage:** When not in use, ensure the inflatable is fully deflated and dry. Fold or roll it compactly and store it in a cool, dry place away from direct sunlight and pests.
- **Inspection:** Periodically inspect the power cord, air blower, and fabric for any signs of wear or damage. Address any issues promptly to ensure safe operation.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Inflatable does not inflate fully.	Power cord unplugged, zipper open, air blower obstructed, or fabric tear.	Check power connection, ensure zipper is fully closed, clear any obstructions from the air blower, inspect for and repair small tears.
Inflatable falls over easily.	Insufficient securing, strong winds.	Ensure all stakes and ropes are properly installed and tightened. Consider adding additional weights if in a very windy area. Deflate during extreme weather.
LED lights are not working.	Power issue, damaged lights.	Check power connection. If lights remain off, contact customer support.

Specifications

Feature	Detail
Brand	Joiedomi
Model Number	X0-492J-U87A
Theme	Christmas
Character	Stacked Snowman
Height	6 Feet
Dimensions (L x W x H)	10.24 x 7.68 x 6.81 inches (packaged)
Item Weight	3.16 pounds
Light Type	Bright Built-in LED Lights
Material	Waterproof Fabric
Power Certification	UL Certified Plug
UPC	840165815879



Figure 4: Product size illustration (6 FT tall).

Warranty and Support

Joiedomi is committed to customer safety and satisfaction. If your product does not meet your expectations, please contact us. We are dedicated to ensuring every moment brings you joy.
For support, please refer to the contact information provided with your purchase or visit the official Joiedomi website.