Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

INFURTURE BN701A

INFURTURE H1 Wireless Active Noise Cancelling Headphones User Manual

Model: BN701A

Introduction

Thank you for choosing the INFURTURE H1 Wireless Active Noise Cancelling Headphones. These headphones are designed to provide a superior audio experience with powerful deep bass, effective noise cancellation, and extended playtime. This manual will guide you through the setup, operation, and maintenance of your new headphones.



Image: Front view of the INFURTURE H1 Wireless Active Noise Cancelling Headphones in black.

What's in the Box

Please check the package contents to ensure all items are present:

- INFURTURE H1 Wireless Active Noise Cancelling Headphones
- USB-C Charging Cable
- 3.5mm Audio Cable
- Carrying Pouch
- User Manual (this document)



Image: The INFURTURE H1 headphones, a carrying pouch, a USB-C charging cable, and a 3.5mm audio cable laid out, representing the package contents.

Product Overview

Familiarize yourself with the various parts and controls of your INFURTURE H1 headphones.

Key Features:

- **Active Noise Cancellation (ANC):** Reduces environmental noise for an immersive listening experience.
- **Deep Bass:** Oversized 40mm dynamic drivers deliver high-resolution sound with powerful bass.
- **Extended Playtime:** Up to 90 hours of playtime on a single charge.
- **USB-C Fast Charging:** Quick charging capability for convenience.
- **Comfortable Design:** Memory foam ear cushions, multi-angle rotation, and adjustable headband for a comfortable fit.
- **Bluetooth 5.3:** Stable and efficient wireless connection.
- **Built-in Microphone:** CVC8.0 microphone for clear hands-free calls.



Image: Close-up views highlighting the multi-angle rotation, memory foam ear cups, and adjustable headband for enhanced comfort.



Image: The INFURTURE H1 headphones with feathers floating around them, illustrating their lightweight design of only 7.2 ounces (204g).

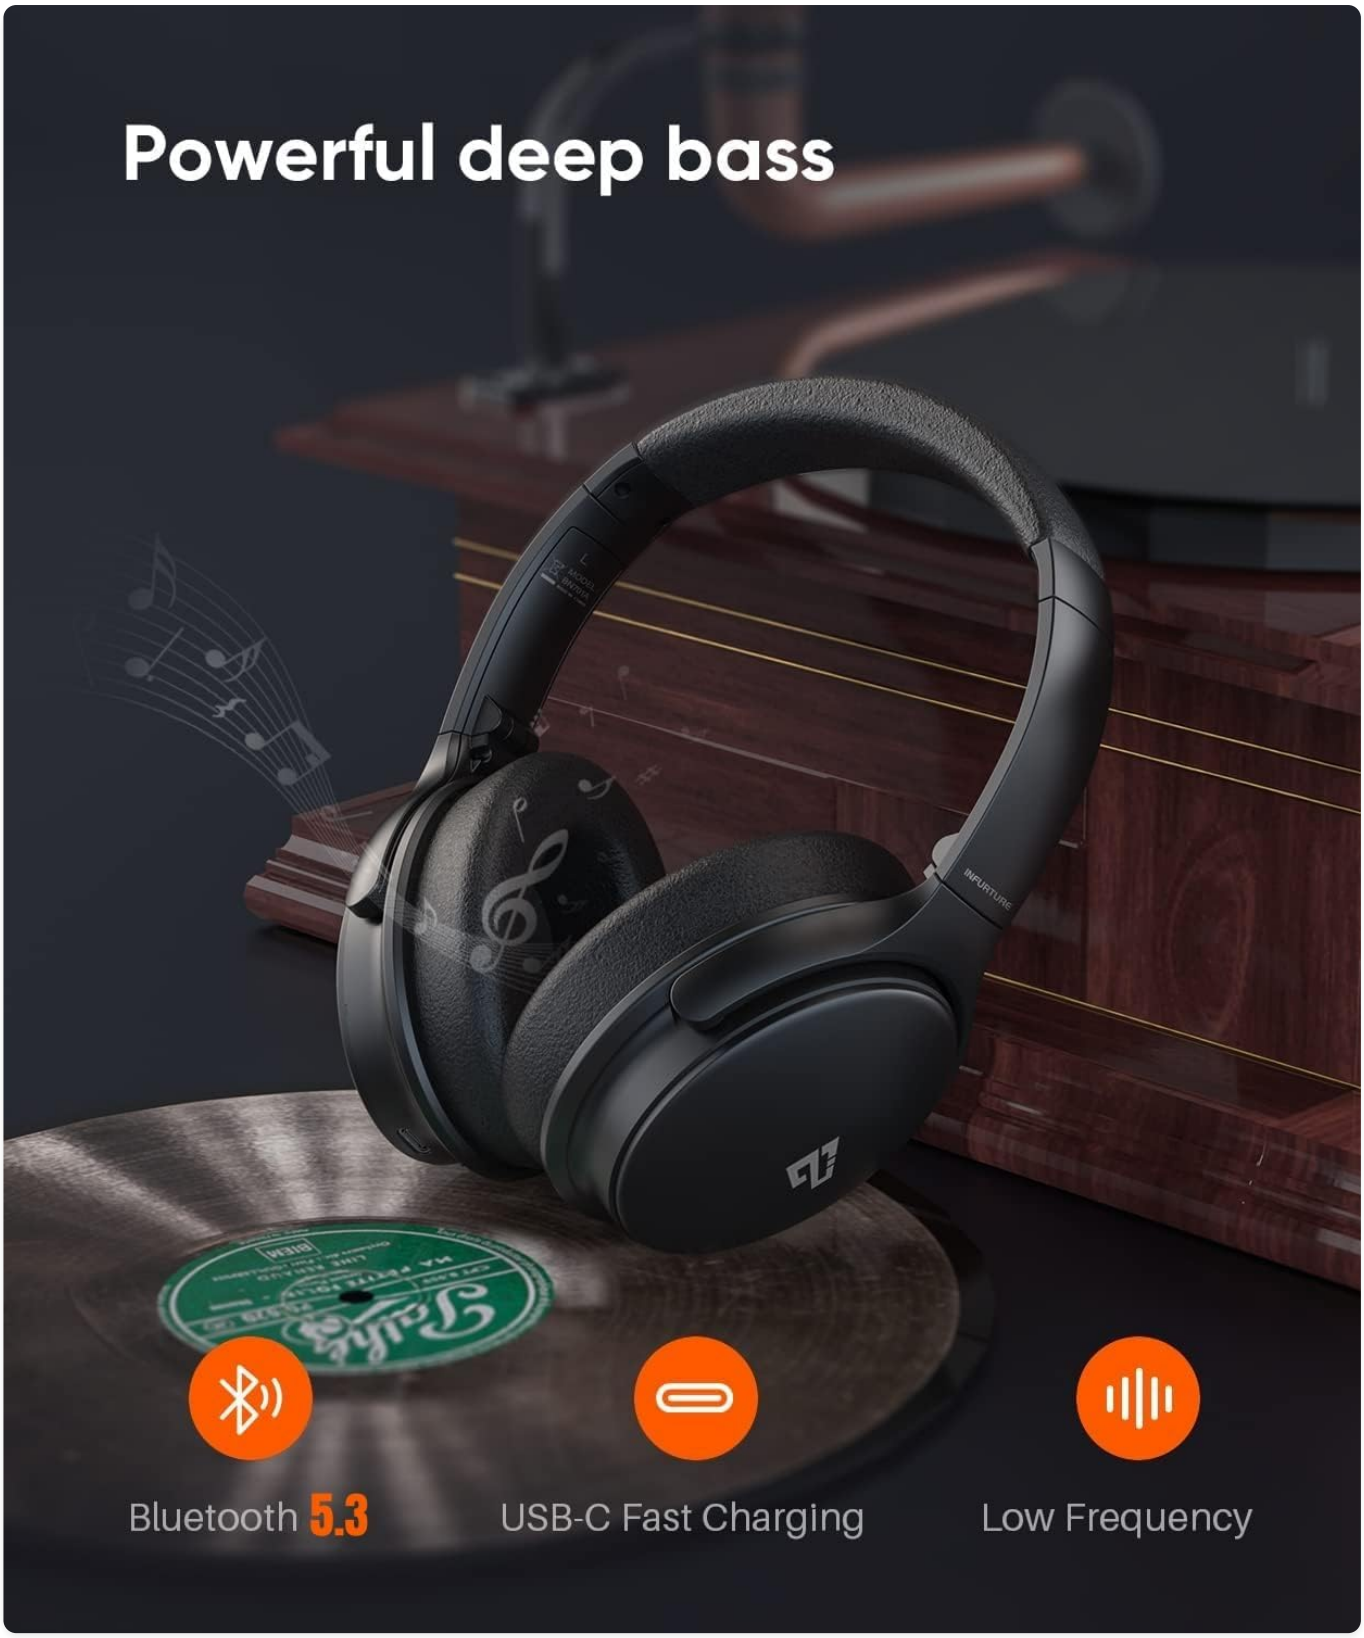


Image: The INFURTURE H1 headphones with icons representing Bluetooth 5.3 connectivity, USB-C fast charging, and powerful low-frequency deep bass.

Setup

1. Charging the Headphones:

Before first use, fully charge your headphones. Connect the provided USB-C cable to the charging port on the headphones and the other end to a USB power adapter (not included) or a computer's USB port.

- A full charge takes approximately 5 hours.

- A 10-minute charge can provide up to 2 hours of listening time.
- The LED indicator will show charging status (e.g., red for charging, blue for fully charged).

2. Bluetooth Pairing:

To connect your headphones to a Bluetooth-enabled device:

1. Ensure the headphones are powered off.
2. Press and hold the power button for approximately 5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for new devices.
4. Select "INFURTURE H1" from the list of available devices.
5. Once connected, the LED indicator will turn solid blue.

The headphones can connect to two devices simultaneously (multipoint connection). If connected to both a PC and a phone, audio will automatically switch to the device playing sound.



Image: The INFURTURE H1 headphones shown with a smartphone displaying a Bluetooth connection screen and a laptop, illustrating the Bluetooth 5.3 and 3.5mm wired connection options.

Operating Instructions

Power On/Off:

- **Power On:** Press and hold the power button until the LED indicator lights up.
- **Power Off:** Press and hold the power button until the LED indicator turns off.

Active Noise Cancellation (ANC):

The ANC feature effectively reduces low to mid-range ambient noise. It is ideal for travel or noisy environments.

- **Activate ANC:** Locate the ANC switch on the left earcup and slide it to the ON position.
- **Deactivate ANC:** Slide the ANC switch to the OFF position.
- **Note:** Remember to turn off ANC when not in use to conserve battery life.



Image: A graphic representation of noise reduction, showing sound waves being dampened, with a microphone in the background, indicating the headphones' ability to reduce noise by 20dB.

Battery Life:

The INFURTURE H1 headphones offer an impressive battery life for extended listening sessions.

- Enjoy up to 90 hours of playtime on a single full charge.
- Fast charging allows for 2 hours of playtime with just a 10-minute charge.



Image: A man wearing the INFURTURE H1 headphones, with overlaid text highlighting the 90-hour playtime and fast charging capabilities.

Music Playback and Calls:

Use the buttons on the right earcup to control your audio and calls.

- **Volume Control:** Use the volume up (+) and volume down (-) buttons.
- **Play/Pause:** Press the multi-function button (center button).
- **Next Track:** Press and hold the volume up (+) button.
- **Previous Track:** Press and hold the volume down (-) button.

- **Answer/End Call:** Press the multi-function button.
- **Reject Call:** Press and hold the multi-function button.
- **Voice Assistant:** Double-press the multi-function button (if supported by your device).
- **Note:** The built-in microphone for calls only works in Bluetooth mode.

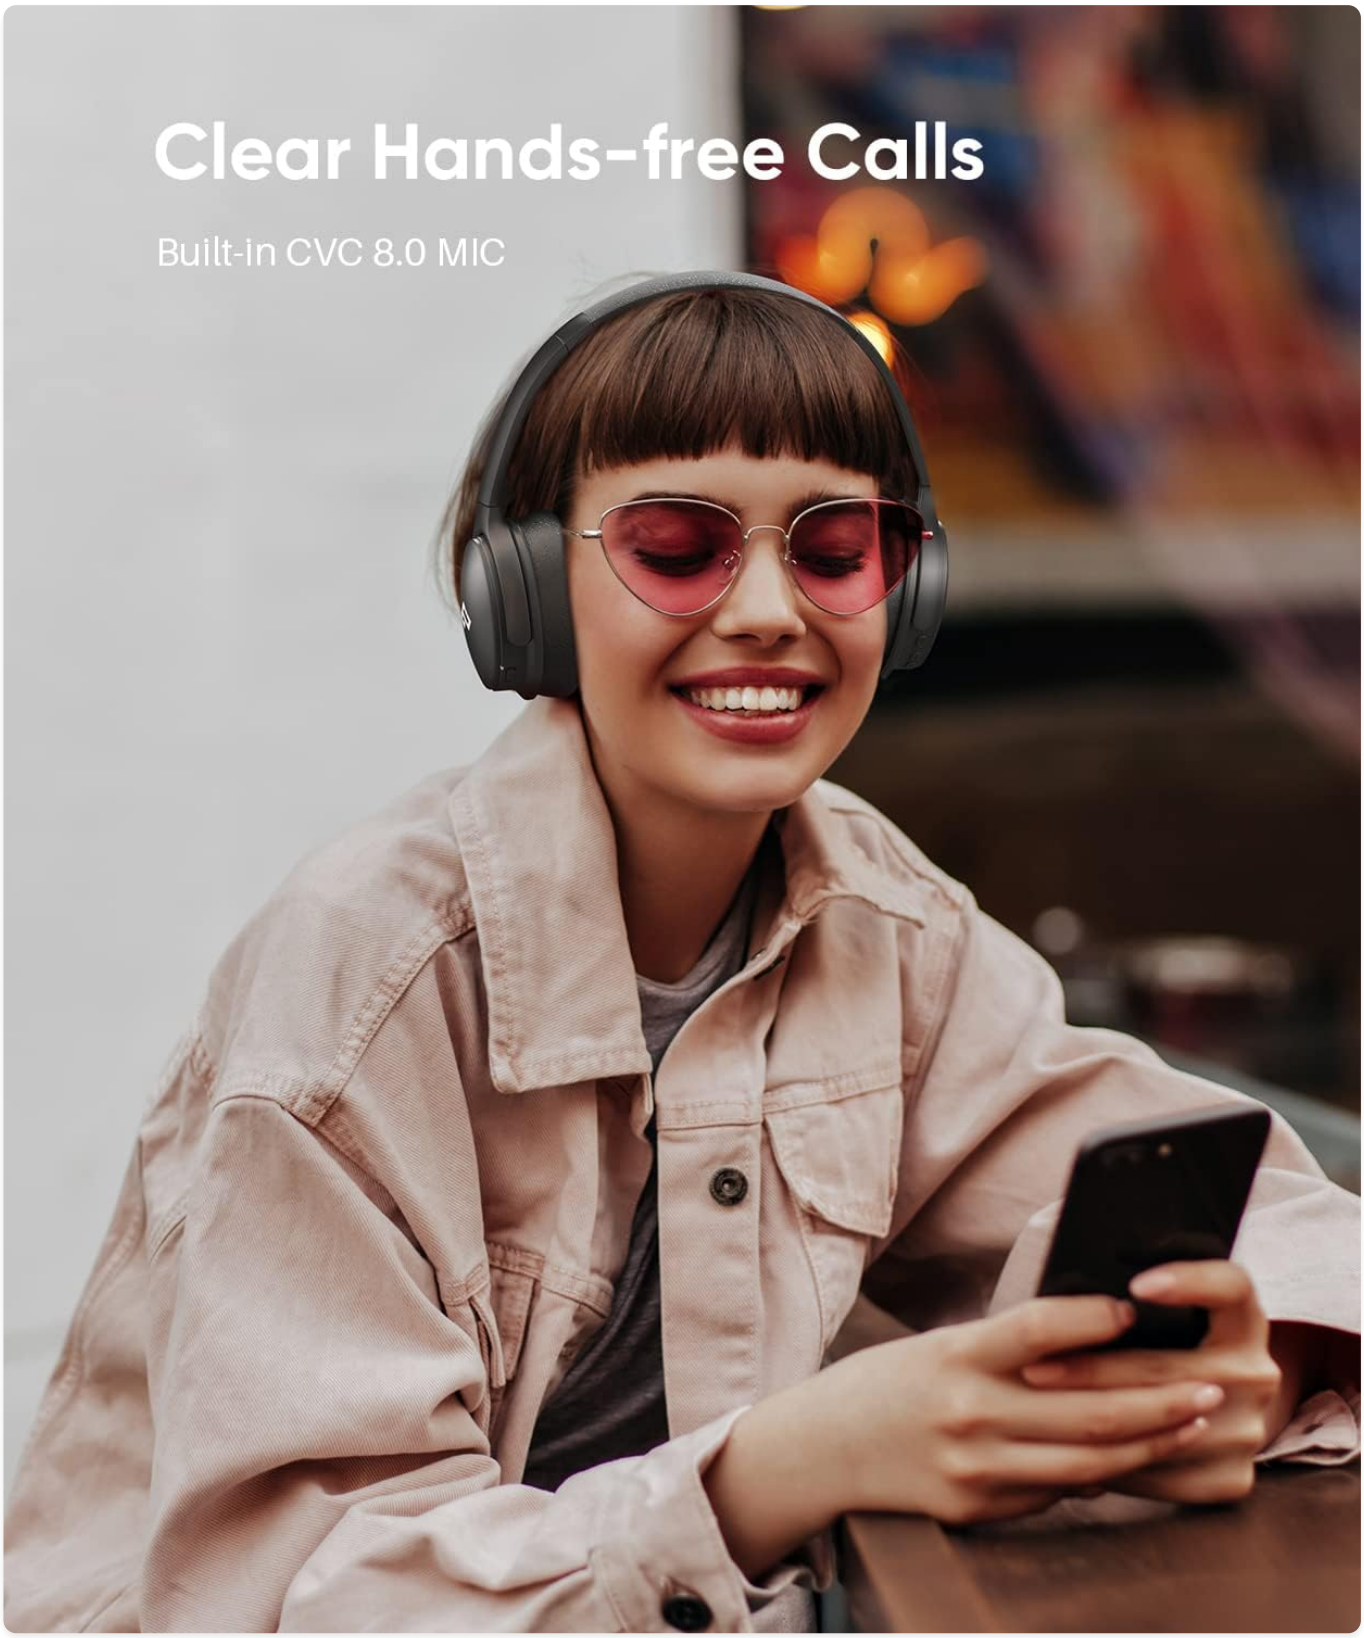


Image: A woman wearing the INFURTURE H1 headphones, smiling and looking at her smartphone, illustrating the clear hands-free call feature with the built-in CVC 8.0 microphone.

Wired Mode:

You can use the headphones with the included 3.5mm audio cable when the battery is low or for devices without

Bluetooth. Simply plug one end into the headphone's 3.5mm jack and the other into your audio source.

- In wired mode, Bluetooth functions and the microphone will be disabled.
- ANC can still be used in wired mode if the headphones have battery.

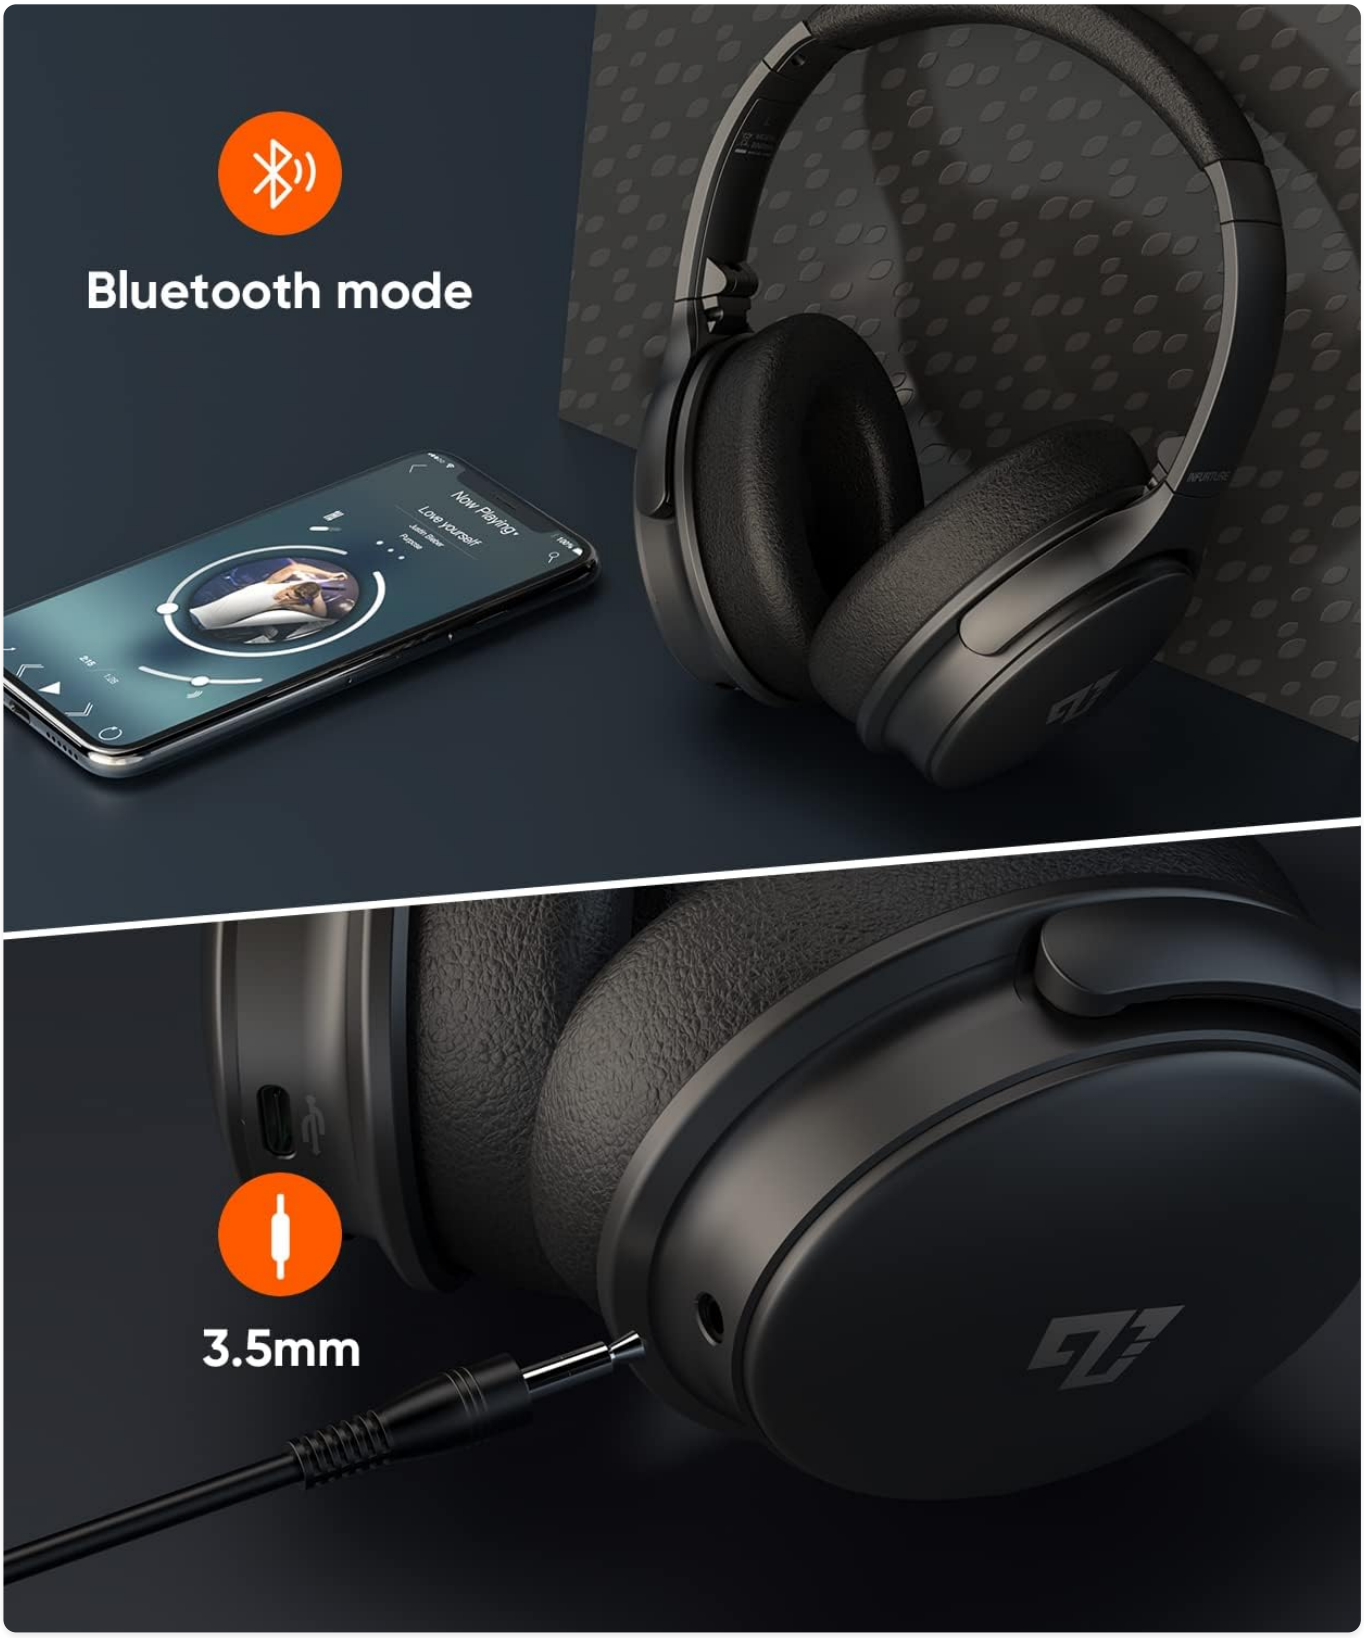


Image: The INFURTURE H1 headphones demonstrating both Bluetooth wireless mode with a smartphone and a wired connection using the 3.5mm audio jack.

Maintenance

To ensure the longevity and optimal performance of your headphones, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the earcups and headband. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in the provided carrying pouch to protect them from dust and scratches.
- **Avoid Moisture:** These headphones are not water-resistant. Avoid exposure to water, rain, or excessive humidity.
- **Temperature:** Do not expose the headphones to extreme temperatures (hot or cold).
- **Battery Care:** For optimal battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in constant use.

Troubleshooting

If you encounter any issues with your INFURTURE H1 headphones, refer to the following common solutions:

Problem	Possible Solution
Headphones won't turn on.	Ensure the headphones are charged. Connect them to a power source using the USB-C cable.
Cannot pair with device.	Ensure headphones are in pairing mode (flashing blue/red LED). Make sure Bluetooth is enabled on your device. Move headphones closer to your device. Forget/remove "INFURTURE H1" from your device's Bluetooth list and try pairing again.
No sound or low volume.	Adjust volume on both headphones and your connected device. Ensure headphones are properly connected via Bluetooth or 3.5mm cable. If using wired mode, ensure the cable is fully inserted.
ANC not working effectively.	Ensure the ANC switch is in the ON position. ANC primarily reduces low-frequency noise; it may not completely eliminate all sounds.
Microphone not working.	Ensure headphones are in Bluetooth mode. The microphone does not function in wired mode.

Specifications

Feature	Detail
Model Name	H1
Item Model Number	BN701A
Connectivity Technology	Wireless, Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Bluetooth Range	15 Meters
Headphones Jack	3.5 mm Jack
Noise Control	Active Noise Cancellation

Feature	Detail
Audio Driver Type	Dynamic Driver
Audio Driver Size	40 Millimeters
Frequency Range	20 Hz - 20,000 Hz
Battery Life	Up to 90 Hours (Playtime)
Charging Time	5 Hours
Item Weight	7.8 ounces (0.49 Pounds)
Product Dimensions	6.14 x 5.28 x 3.43 inches
Material	Plastic
Water Resistance Level	Not Water Resistant
Included Components	Cable, User Manual

Warranty and Support

INFURTURE provides a **12-month warranty** for the H1 Wireless Active Noise Cancelling Headphones from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.
For any questions, technical support, or warranty claims, please contact INFURTURE customer service. Our team is available to provide **24-hour after-sale customer services** and quick assistance.
You can also refer to the officialUser Guide (PDF) for additional information.

© 2024 INFURTURE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08HDBZNZ9

More documents and user manuals: **https://manuals.plus/**