Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PROZOR VC471LNK

PROZOR RCA Stereo Audio Switcher

Model: VC471LNK - User Manual

Introduction

The PROZOR RCA Stereo Audio Switcher (Model VC471LNK) is a versatile device designed to manage audio signals between multiple RCA-enabled devices. It supports both 2-in-1-out and 1-in-2-out configurations, allowing you to connect two audio sources to one output device or one audio source to two output devices. This switcher operates without external power, ensuring a simple plug-and-play experience with lossless audio transmission.



Image: The PROZOR RCA Stereo Audio Switcher, a compact black device with RCA ports, a volume knob, and selector buttons.

Package Contents

Please verify that all items are present in the package:

- 1x Bi-Directional Switcher
- 1x L/R Stereo RCA Cable (1.5m)
- 1x User Manual

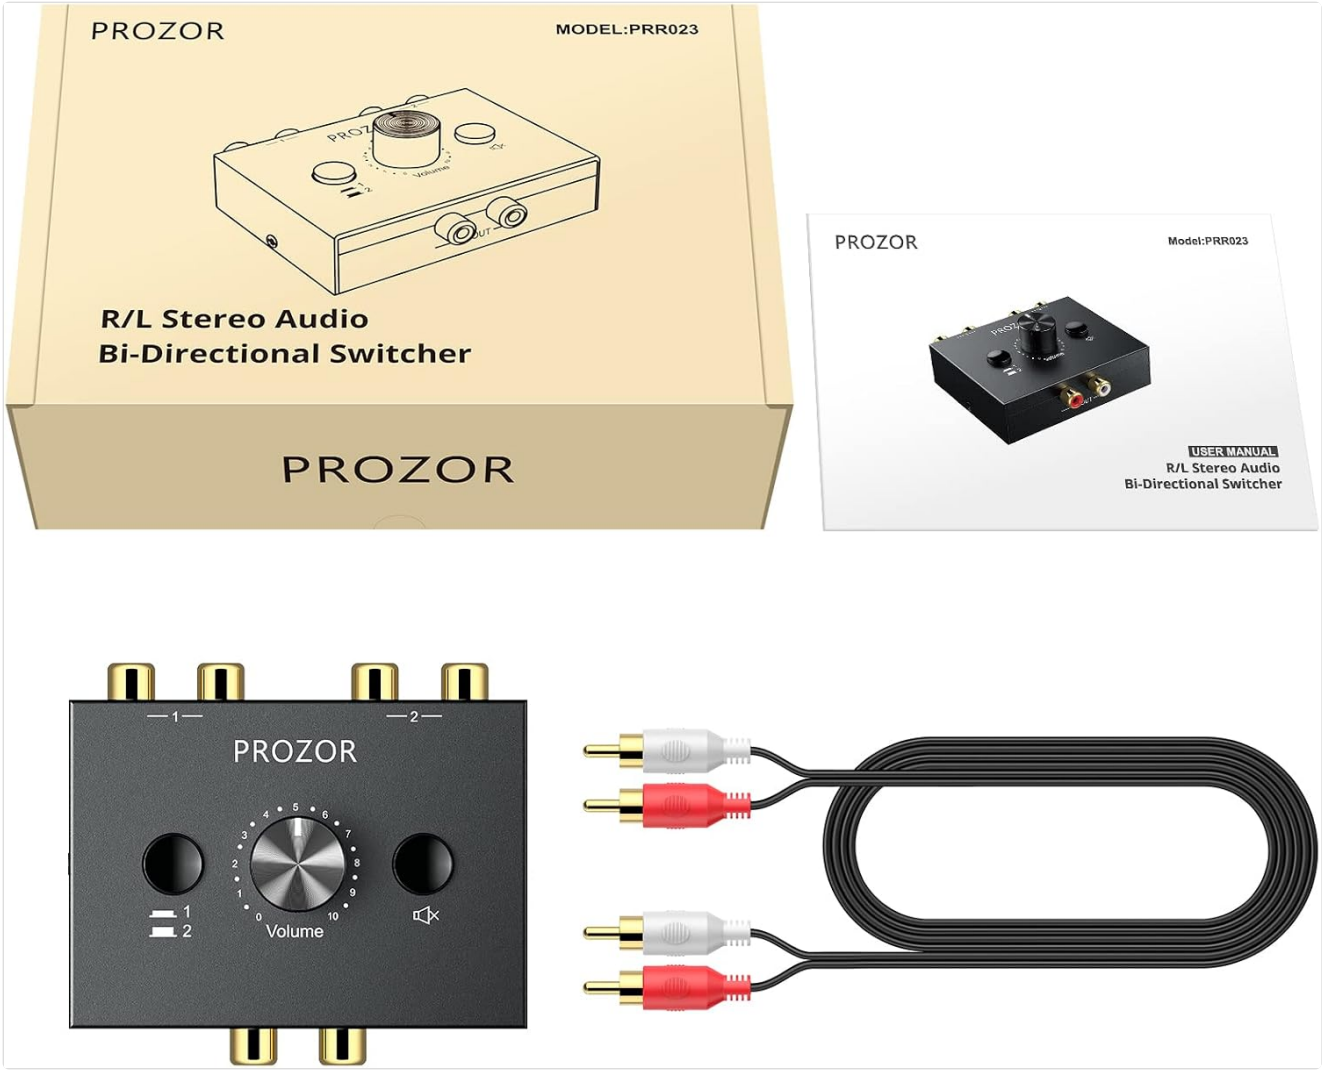


Image: The package contents including the switcher unit, an RCA cable, and the user manual.

Product Features

- **Bi-Directional Functionality:** Supports 2 inputs to 1 output or 1 input to 2 outputs.
- **Effortless Audio Control:** Features an OFF switch for quick power control and a dedicated audio rotary switch for selecting inputs/outputs.
- **Perfect Sound Quality:** Ensures lossless transmission and clear audio without interference.
- **Plug and Play:** No external power supply is required for operation.
- **Compact and Portable:** Designed for easy carrying and minimal desk space usage.
- **Gold-Plated Interface:** Enhanced with gold-plated shielded RCA cable interfaces for stable connections.



Image: A close-up view of the switcher highlighting its gold-plated RCA interfaces.

Setup Instructions

The PROZOR RCA Stereo Audio Switcher offers flexible connectivity options. Ensure all devices are powered off before making connections.

Configuration 1: Two Inputs to One Output (2-in-1-out)

1. Connect your first audio source (e.g., DVD player, PC) to the RCA input labeled "1" on the switcher using an RCA cable.
2. Connect your second audio source (e.g., smartphone, CD player) to the RCA input labeled "2" on the switcher using an RCA cable.
3. Connect the RCA output of the switcher to your single audio output device (e.g., amplifier, speakers) using an RCA cable.
4. Use the selector switch on the front panel to choose between input 1 or input 2.

2 In 1 Out

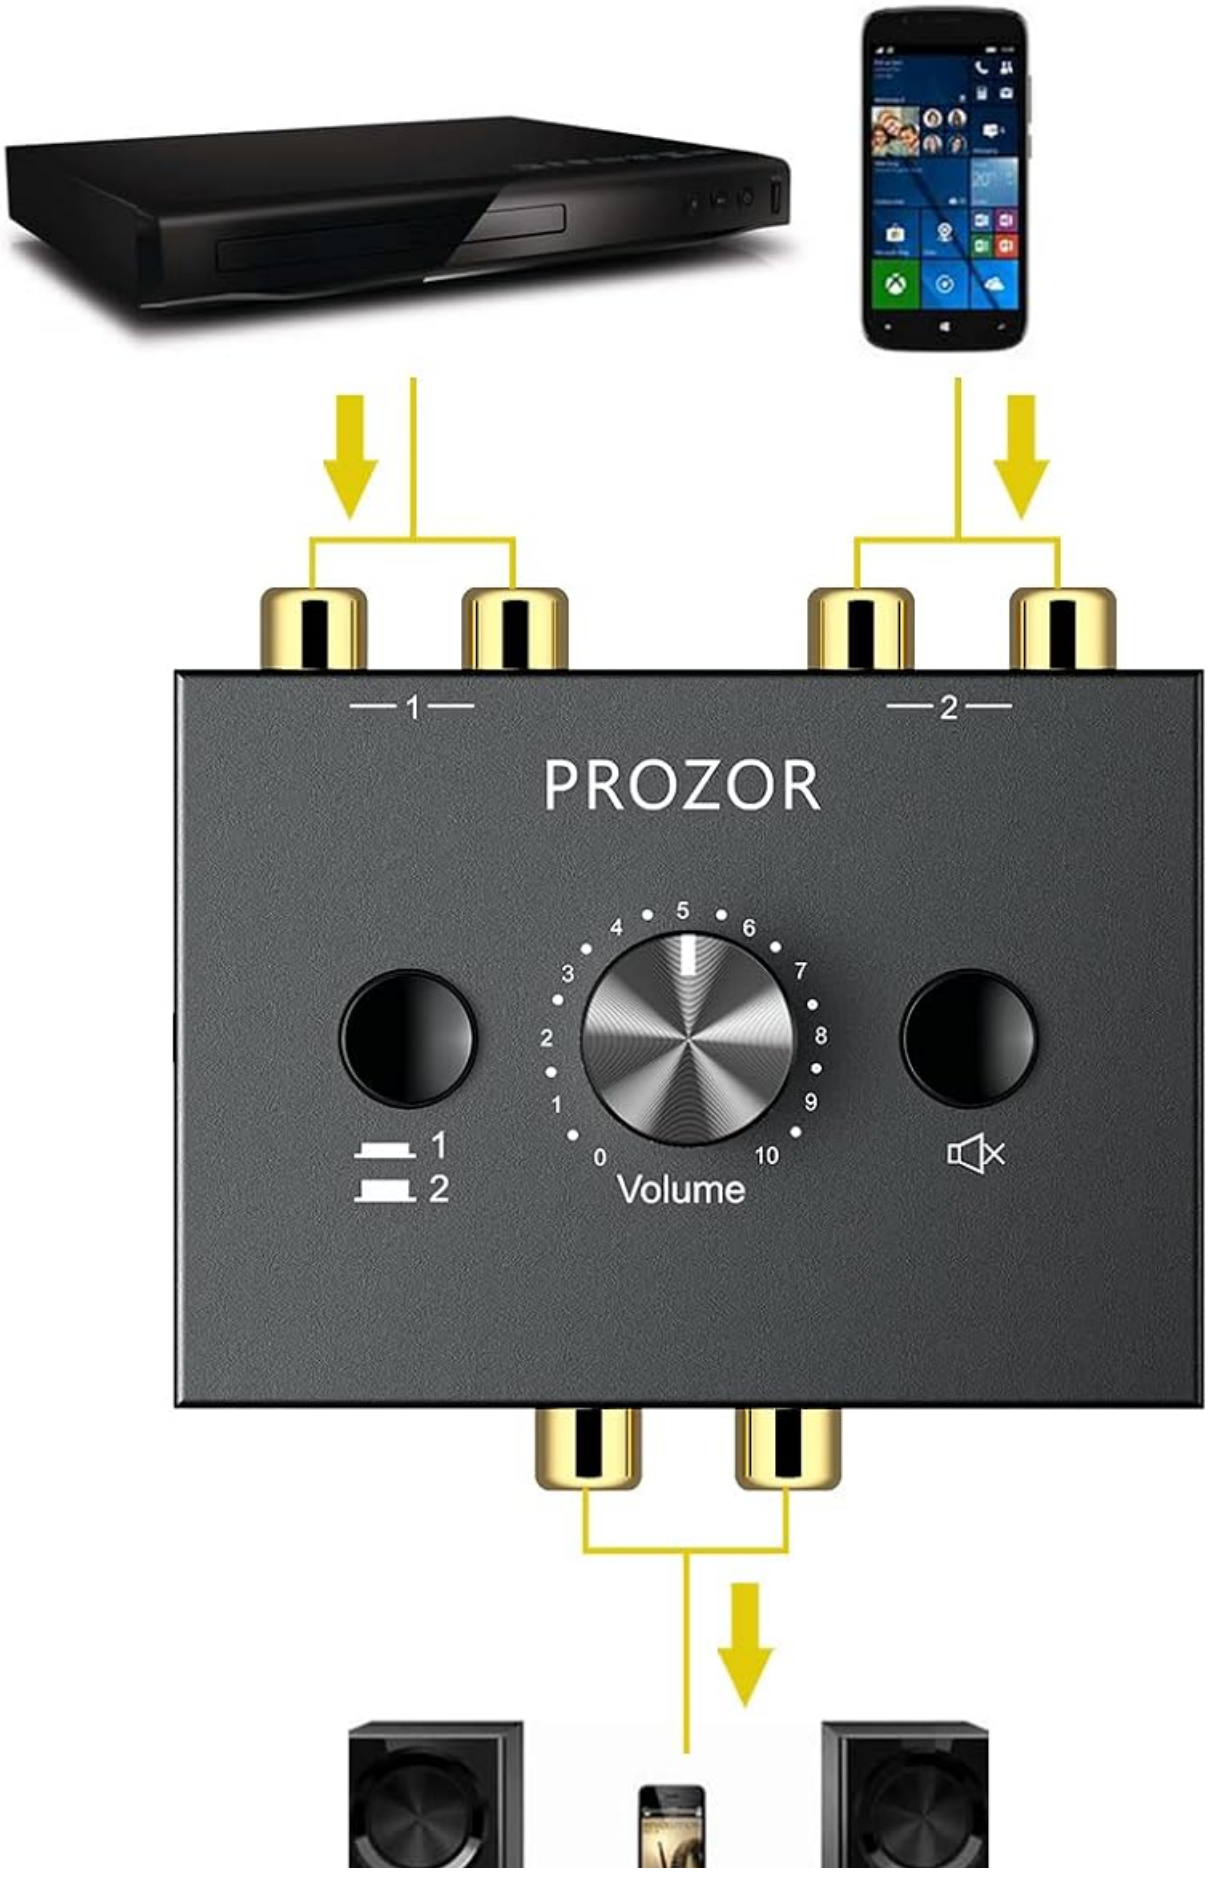




Image: Diagram illustrating the 2-in-1-out connection setup, with two source devices feeding into the switcher and one output device receiving the signal.

Configuration 2: One Input to Two Outputs (1-in-2-out)

1. Connect your single audio source (e.g., DVD player, PC) to the RCA input on the switcher. You can use either input labeled "1" or "2".
2. Connect your first audio output device (e.g., headphones) to the RCA output labeled "1" on the switcher using an RCA cable.
3. Connect your second audio output device (e.g., speakers) to the RCA output labeled "2" on the switcher using an RCA cable.
4. Use the selector switch on the front panel to choose between output 1 or output 2.





Image: Diagram illustrating the 1-in-2-out connection setup, with one source device feeding into the switcher and two output devices receiving the signal.

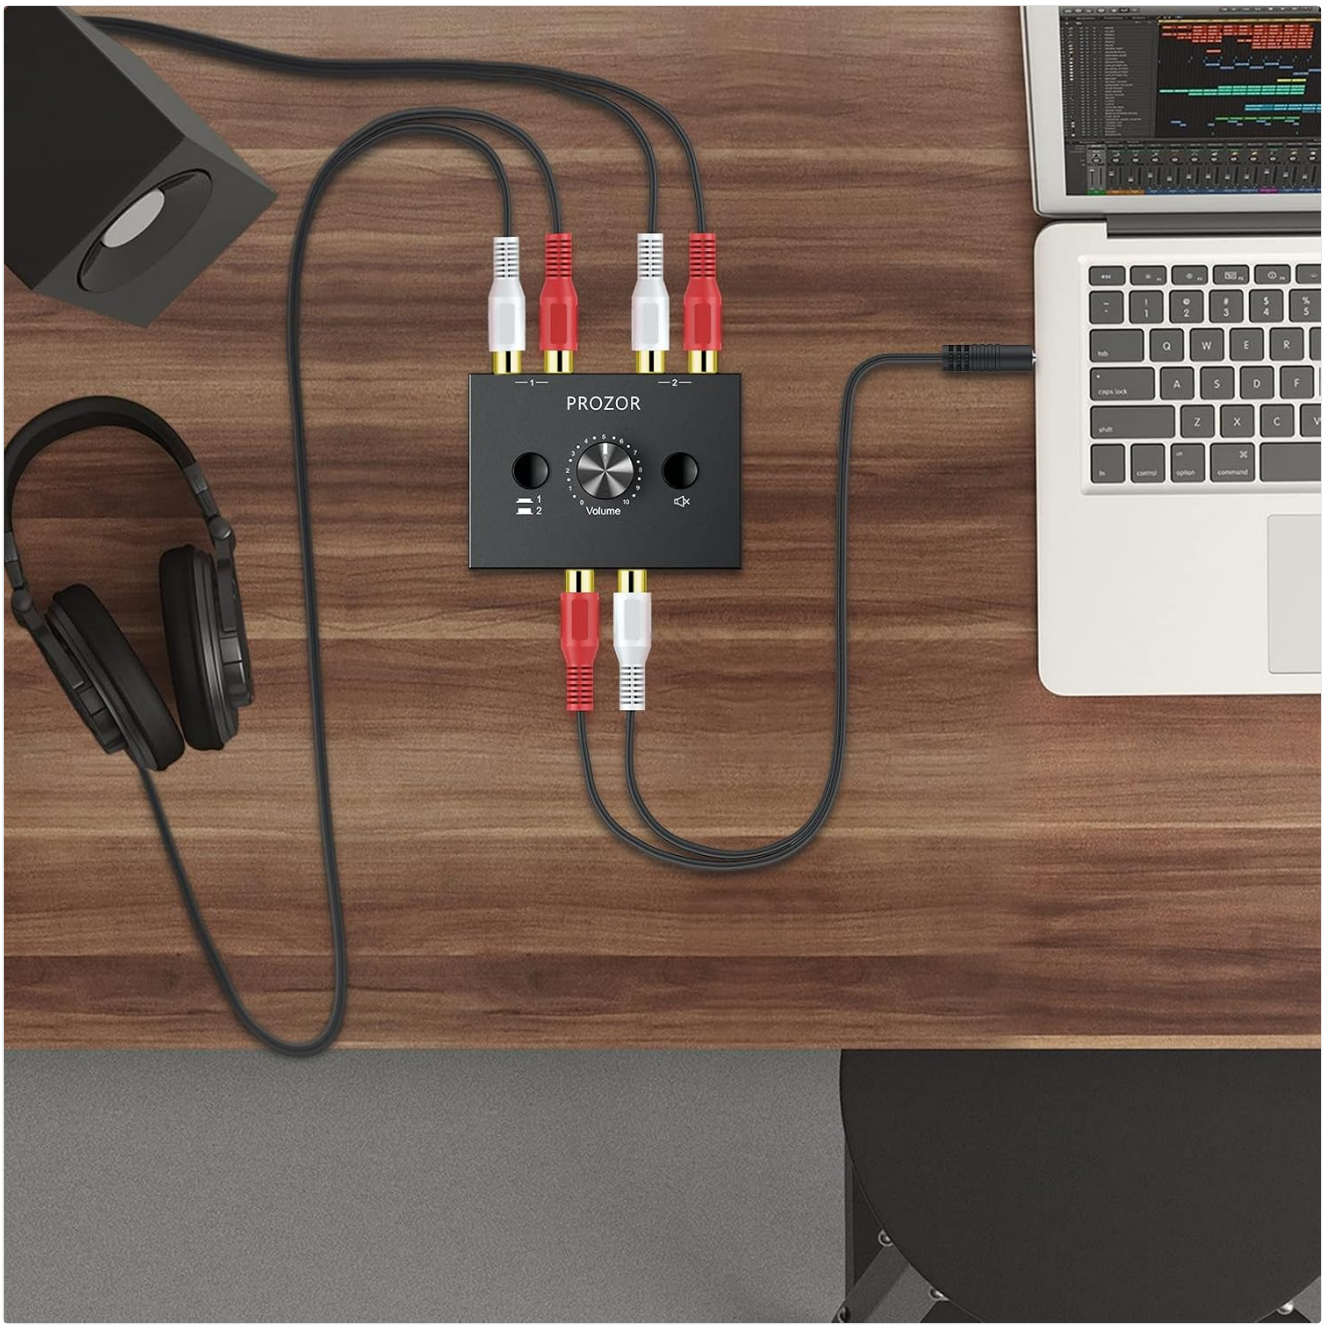


Image: A practical example of the switcher connected to a laptop and headphones on a desk.

Operating Instructions

Once connected, operating the PROZOR RCA Stereo Audio Switcher is straightforward:

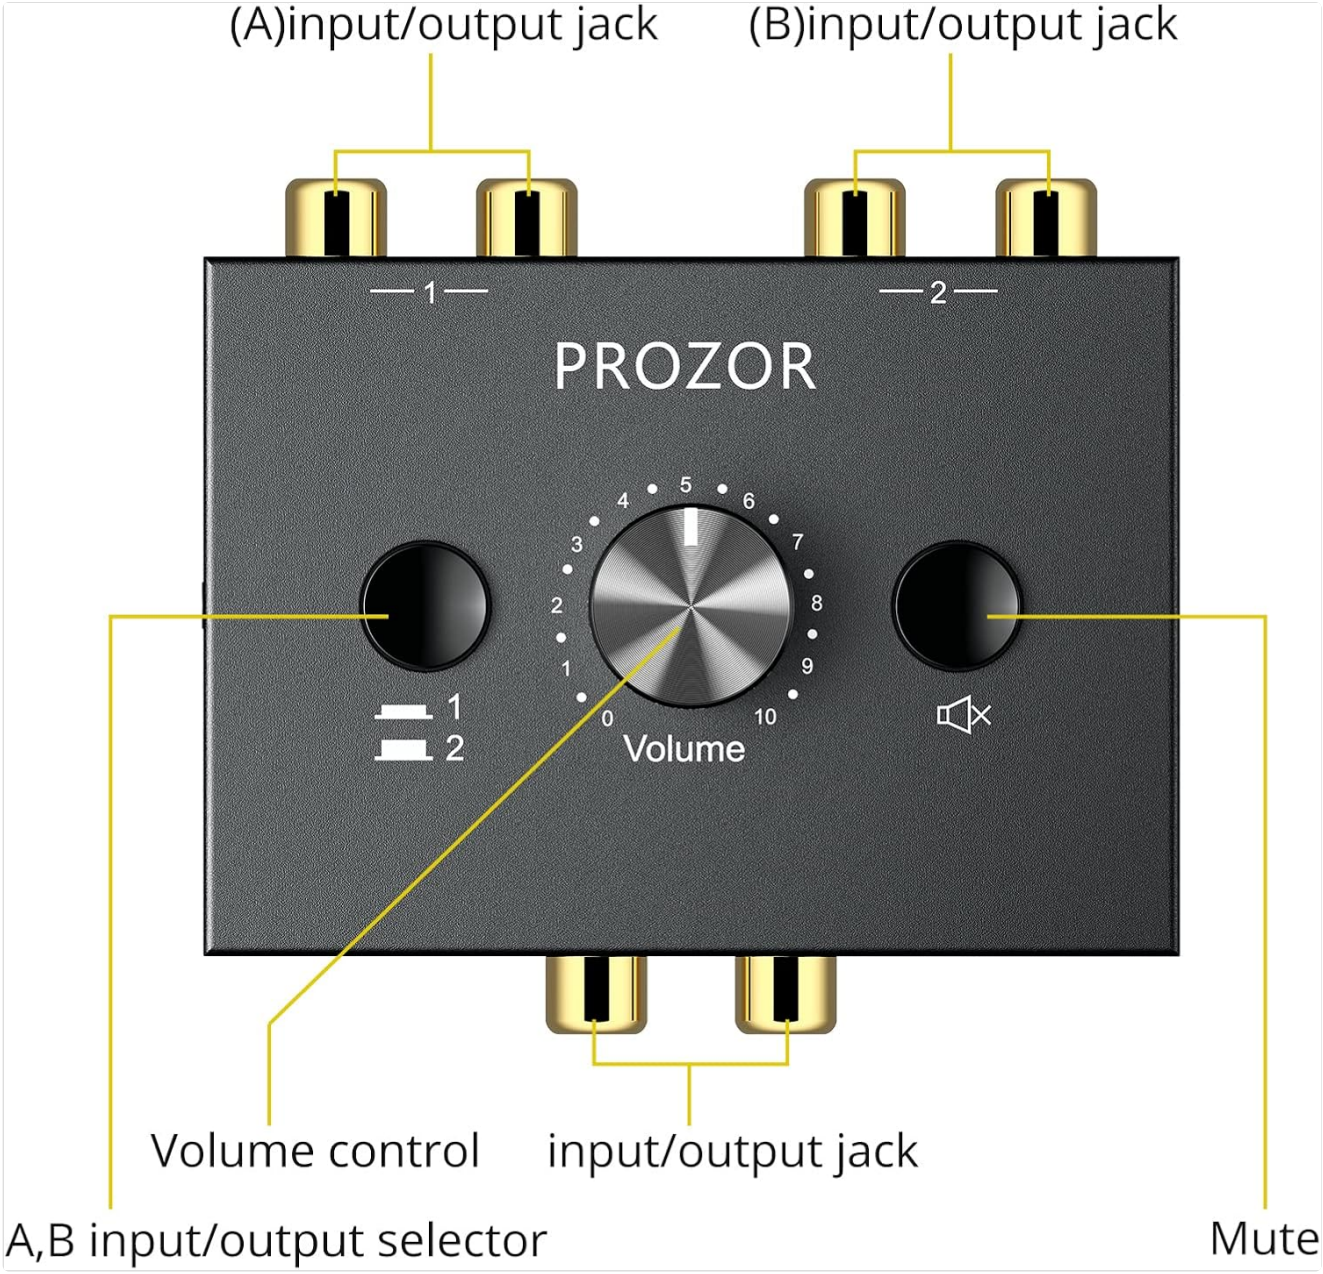


Image: A detailed view of the switcher's front panel, labeling the volume control, input/output selector, and mute button.

1. **Power On/Off:** The device does not require external power. It is always ready for use when connected.
2. **Input/Output Selection:** Use the rotary switch labeled "1" and "2" to select the desired audio input or output channel.
3. **Volume Control:** Adjust the central "Volume" knob to control the audio output level.
4. **Mute Function:** Press the mute button (speaker icon) to instantly mute the audio output. Press it again to unmute.

Note:

- This device allows one input per output, ensuring focused audio playback.
- It does not support simultaneous sound output to multiple devices in a 1-in-2-out configuration.

Demonstration Video

Your browser does not support the video tag.

Video: An official demonstration of the PROZOR RCA Stereo Audio Switcher, showcasing its features and basic

operation.

Care and Maintenance

- Keep the device in a dry environment, away from moisture and extreme temperatures.
- Clean the exterior with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- Ensure cables are connected securely but do not force them.
- Avoid dropping or subjecting the device to strong impacts.



Image: The switcher's robust metal construction, indicating its durability.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No audio output	Incorrect input/output selection; Loose cable connections; Mute function active; Source device issue.	Verify the selector switch is on the correct channel. Check all RCA cable connections. Ensure the mute button is not engaged. Test the audio source directly with the output device.
Buzzing or humming sound	Ground loop interference; Poor quality cables; Device malfunction.	Ensure all devices are on the same power circuit. Try using higher quality, shielded RCA cables. If the issue persists, contact customer support.
Volume control not working	Volume knob turned down; Output device volume too low/high.	Adjust the volume knob on the switcher. Check the volume settings on your connected audio output device.
Selector switch not responding	Mechanical issue; Debris in switch mechanism.	Gently rotate the switch multiple times. If it remains unresponsive, contact customer support.

Technical Specifications

Model Number	VC471LNK
Color	Black
Connector Type	RCA
Compatible Devices	PC, DVD players, CD players, Amplifiers, Speakers, Headphones, etc.
Power Source	No external power required
Audio Output Mode	Stereo
Dimensions (D x W x H)	2.64"D x 3.07"W x 1.38"H

Warranty Information

The PROZOR RCA Stereo Audio Switcher (Model VC471LNK) comes with an 18-month warranty from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper installation.

Please retain your proof of purchase for warranty claims.

Customer Support

If you encounter any issues or have questions regarding your PROZOR RCA Stereo Audio Switcher that are not addressed in this manual, please contact PROZOR customer support.

For further assistance, visit the official PROZOR store on Amazon:PROZOR Store

© 2023 PROZOR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08HV6YRXR

More documents and user manuals: **https://manuals.plus/**