Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Music Sound BTHEADBBASICMSK

Music Sound Basic Bluetooth Headphones

Model: BTHEADBBASICMSK

Instruction Manual

1. Introduction

Thank you for choosing the Music Sound Basic Bluetooth Headphones. This manual provides essential information for the safe and efficient use of your new headphones. Please read it thoroughly before use and retain it for future reference.

2. Safety Information

- **Volume Control:** To prevent hearing damage, do not listen at high volume levels for extended periods.
- **Charging:** Use only the provided charging cable or a certified equivalent. Do not attempt to charge the headphones with damaged cables or in wet conditions.
- **Water Resistance:** The headphones are water-resistant. Avoid submerging them in water or exposing them to heavy rain.
- **Disassembly:** Do not attempt to disassemble, repair, or modify the headphones. This will void the warranty and may cause damage.
- **Disposal:** Dispose of the product and its battery responsibly according to local regulations.

3. Package Contents

Ensure all items are present in the package:

- Music Sound Basic Bluetooth Headphones
- USB Charging Cable
- 3.5mm AUX Audio Cable
- User Manual

4. Product Overview

Familiarize yourself with the components of your headphones.



Figure 4.1: Front view of the Music Sound Basic Bluetooth Headphones, showcasing the over-ear design and branding on the earcup.



Figure 4.2: Top view of the headphones, illustrating the adjustable headband for a comfortable fit.



Figure 4.3: Close-up of the earcup, highlighting the integrated keypad controls for easy operation.



Figure 4.4: Image emphasizing the extended battery life, providing up to 14 hours of music playback on a single charge.

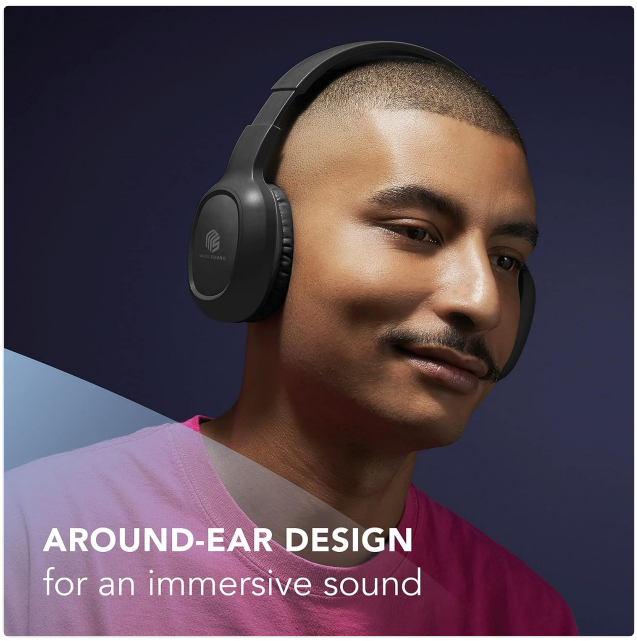


Figure 4.5: A user wearing the headphones, demonstrating the around-ear design for immersive sound and comfort.

5. Setup

5.1 Charging the Headphones

1. Connect the USB charging cable to the charging port on the headphones.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., computer, wall adapter).
3. The LED indicator will illuminate during charging.
4. Charging typically takes approximately 2 hours for a full charge. The LED indicator will change or turn off once charging is complete.

5.2 Bluetooth Pairing

1. Ensure the headphones are fully charged.
2. Press and hold the Power button on the headphones until the LED indicator flashes, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "Music Sound Basic" or similar from the list of devices.
5. Once paired, the LED indicator will stop flashing and remain solid or turn off, depending on the model.

5.3 AUX Connection

For wired listening, use the 3.5mm AUX audio cable:

1. Connect one end of the 3.5mm AUX cable to the AUX input on the headphones.
2. Connect the other end to the 3.5mm audio output of your device.
3. The headphones will automatically switch to wired mode. Bluetooth functionality will be disabled.

6. Operating Instructions

6.1 Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds.
- **Power Off:** Press and hold the Power button for approximately 3-5 seconds.

6.2 Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Press the 'Next' button (usually labeled with a forward arrow or '+') once.
- **Previous Track:** Press the 'Previous' button (usually labeled with a backward arrow or '-') once.

6.3 Volume Control

- **Volume Up:** Press and hold the 'Next' button or a dedicated Volume Up button.
- **Volume Down:** Press and hold the 'Previous' button or a dedicated Volume Down button.

6.4 Call Management

- **Answer/End Call:** Press the Play/Pause button once.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds.
- **Redial Last Number:** Double-press the Play/Pause button.

6.5 LED Indicator Meanings

- **Solid Red:** Charging.
- **Red Off/Blue Solid:** Fully charged (may vary by model).
- **Flashing Blue/Red:** Pairing mode.
- **Slow Flashing Blue:** Connected/Playing music.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the headphones regularly, even if not in frequent use. Avoid fully discharging the battery often.

8. Troubleshooting

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones for at least 30 minutes.
Cannot pair via Bluetooth.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing LED). Turn device Bluetooth off and on. Move headphones closer to the device (within 10 meters).
No sound or low volume.	Volume too low on headphones or device; incorrect audio source; loose AUX cable.	Increase volume on both headphones and device. Check if the correct audio source is selected on your device. Ensure AUX cable is securely connected.

Problem	Possible Cause	Solution
Short battery life.	Not fully charged; aging battery.	Ensure headphones are fully charged (2 hours). Battery performance may degrade over time.

9. Specifications

Feature	Specification
Model Number	BTHEADBBASICMSK
Color	Black
Ear Placement	Over-Ear
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Range	Up to 10 meters
Headphone Jack	3.5 mm Jack (for wired connection)
Noise Control	None
Battery Life	Up to 14 hours
Battery Charge Time	Approximately 2 hours
Frequency Range	20 Hz - 20,000 Hz
Audio Driver Type	Dynamic Driver
Special Features	Integrated Microphone
Material	Plastic
Water Resistance Level	Water Resistant
Compatible Devices	Laptops, Desktop Computers, Tablets, Mobile Phones, Televisions, Smart Speakers, Car Audio Systems, Digital Video Game Consoles

10. Warranty and Support

Your Music Sound Basic Bluetooth Headphones come with a**2-year warranty** from the date of purchase, covering manufacturing defects.

For technical support, warranty claims, or further assistance, please contact your retailer or visit the official Music Sound website.

Please retain your proof of purchase for warranty purposes.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08J49F1KZ

More documents and user manuals: **https://manuals.plus/**