ZdalaMit SE-R0323

ZdalaMit SE-R0323 Replacement Remote Control User Manual

For Toshiba DVD VCR Player Models SD-V296, SD-V296KU, SDV296, SDV296KU, SD-V296-K-TU

1. Introduction

This manual provides comprehensive instructions for the ZdalaMit SE-R0323 replacement remote control. This remote is specifically designed to be compatible with various Toshiba DVD VCR Player models, including SD-V296, SD-V296KU, SDV296, SDV296KU, and SD-V296-K-TU. It is pre-programmed and requires no additional setup or pairing, making it ready for use immediately after battery installation.



Figure 1: Front view of the ZdalaMit SE-R0323 Replacement Remote Control, showing all buttons and layout.

2. Setup

The ZdalaMit SE-R0323 remote control is designed for immediate use without complex programming. Follow these simple steps to begin operation:

1. **Obtain Batteries:** Acquire two (2) 1.5V AA alkaline batteries. These are not included with the remote control.
2. **Open Battery Compartment:** Locate the battery compartment on the back of the remote control. Slide the cover downwards or press the latch to open it.
3. **Insert Batteries:** Insert the two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. **Close Battery Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.
5. **Ready for Use:** The remote control is now ready to operate your compatible Toshiba DVD VCR Player. No programming or pairing is required.

3. Operating Instructions

This section details the functions of the buttons on your ZdalaMit SE-R0323 remote control. Ensure your Toshiba DVD VCR Player is powered on and the remote has fresh batteries.



Figure 2: Angled view of the remote control, highlighting button placement for easier identification.

3.1. Basic Functions

- **I/O (Power):** Turns the DVD VCR Player on or off.
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **VCR** / **DVD:** Toggles between VCR and DVD playback modes.
- **INPUT SELECT** / **MODE:** Selects the input source or changes the operating mode of the player.

- **Number Buttons (0-9, +10):** Used for direct track/chapter selection or entering numerical values.
- **DISPLAY:** Shows on-screen information such as current track, time, or status.

3.2. Playback Controls

- **PLAY (►):** Starts or resumes playback.
- **STOP (■):** Stops playback.
- **PAUSE (‖):** Pauses playback. Press again to resume.
- **SKIP (◄◄ / ►►):** Skips to the previous or next track/chapter.
- **Fast Rewind (◄◄◄) / Fast Forward (►►►):** Fast rewinds or fast forwards through content.
- **REC/OTR (●):** Initiates recording (One-Touch Recording) on the VCR.

3.3. Menu and Navigation

- **TOP MENU:** Accesses the main menu of a DVD.
- **MENU:** Accesses the disc menu or system settings.
- **SETUP:** Enters the system setup menu.
- **Navigation Buttons (▲ ◄ ► ▼):** Navigates through menus and options.
- **ENTER:** Confirms a selection in menus.
- **RETURN:** Returns to the previous menu or screen.

3.4. Special Functions

- **SPEED:** Adjusts playback speed.
- **T-SET:** Timer setting for recording.
- **TRACKING (▲ ▼):** Adjusts VCR tracking for optimal picture quality.
- **ZOOM:** Zooms in on the picture during playback.
- **SUBTITLE:** Toggles subtitle display.
- **ANGLE:** Changes the camera angle on compatible DVDs.
- **REPEAT:** Repeats a track, chapter, or entire disc.
- **A-B:** Repeats a specific segment between points A and B.
- **AUDIO:** Changes the audio track or language.
- **SEARCH MODE:** Used for specific search functions within content.

4. Maintenance

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new 1.5V AA alkaline batteries. Do not mix old and new batteries or different battery types.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops and Impacts:** Protect the remote from physical shock, as internal components can be damaged.

5. Troubleshooting

If you encounter issues with your ZdalaMit SE-R0323 remote control, refer to the following common solutions:

- **Remote Not Responding:**
  - Ensure the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with fresh 1.5V AA alkaline batteries.
  - Ensure there is a clear line of sight between the remote control and the infrared sensor on your DVD VCR Player. Remove any obstructions.
  - Confirm that the DVD VCR Player is powered on.
- **Certain Functions Not Working:**
  - Verify that the remote is in the correct mode (VCR or DVD) using the "VCR / DVD" button.
  - Some functions may only be available for specific media types (e.g., DVD menu buttons for DVDs, tracking for VCR tapes).
- **Remote Requires Programming (Contrary to Product Description):**

  The ZdalaMit SE-R0323 is pre-programmed for the listed Toshiba DVD VCR Player models and should not require additional setup. If you experience issues that suggest programming is needed, double-check battery installation and compatibility with your specific player model. If problems persist, contact customer support.

6. Specifications

Feature	Detail
Model	SE-R0323
Brand	ZdalaMit
Compatible Devices	Toshiba DVD VCR Player models: SD-V296, SD-V296KU, SDV296, SDV296KU, SD-V296-K-TU
Power Supply	2 x 1.5V AA Alkaline Batteries (not included)
Product Dimensions	6.5 x 2 x 0.6 inches (approximately 16.5 x 5.1 x 1.5 cm)
Item Weight	2.2 ounces (approximately 62 grams)
Color	Black
Special Feature	Pre-programmed, no setup required
Max Number of Supported Devices	1 (controls one Toshiba DVD VCR Player)

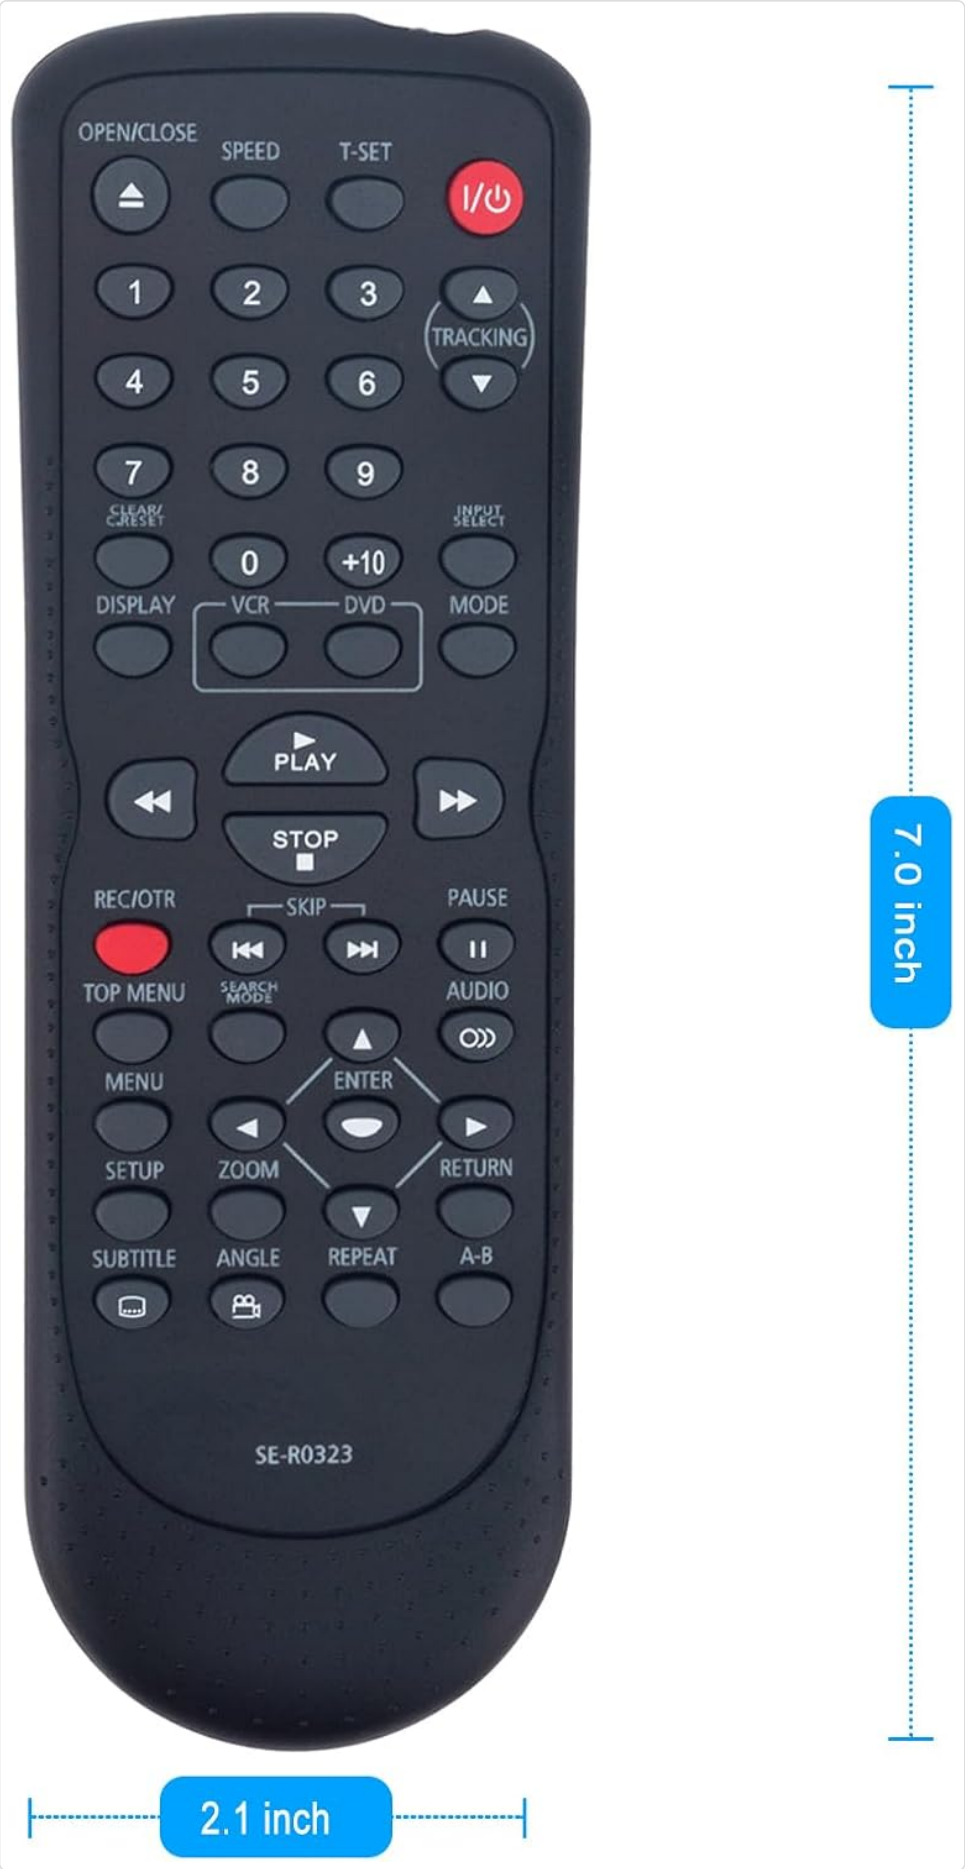


Figure 3: ZdalaMit SE-R0323 Remote Control illustrating its approximate dimensions.

7. Support

For any questions, concerns, or assistance regarding your ZdalaMit SE-R0323 replacement remote control, please contact the manufacturer or seller. Refer to your purchase documentation for specific contact information.

© 2025 ZdalaMit. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question