Quictent ML-A11-QT-PUC-KK1203M-G-1

Quictent 10'x10' Pop-Up Screened Canopy Tent Instruction Manual

Model: ML-A11-QT-PUC-KK1203M-G-1 | Brand: Quictent

1. Safety Information

Please read and understand all safety information before setting up and using your Quictent canopy tent. Failure to follow these instructions may result in injury or product damage.

- **Anchoring:** Always use the provided stakes, ropes, and sandbags to securely anchor the canopy tent. Never leave the tent unattended, especially in windy conditions.
- **Weather Conditions:** Do not use the canopy tent in severe weather conditions, including heavy rain, strong winds (above 45 mph), hail, or snow (above 18 lbs/sqft). Disassemble and store the tent to prevent damage and ensure safety.
- **Assembly:** While designed for easy setup, it is recommended to have at least two people for assembly to ensure stability and prevent injury.
- **Fire Safety:** Keep all flame and heat sources away from the canopy fabric. The fabric is not fireproof.
- **Overhead Obstructions:** Ensure the setup area is clear of overhead power lines, tree branches, and other obstructions.

2. Package Contents

Verify that all components are present before beginning assembly.

- Pre-assembled Pop-Up Frame
- Canopy Top Fabric
- Mosquito Netting Side Walls (with zippers and Velcro)
- Wheeled Carry Bag
- Sandbags (6 units)
- Stakes (8 units)
- Ropes (4 units)
- User Manual

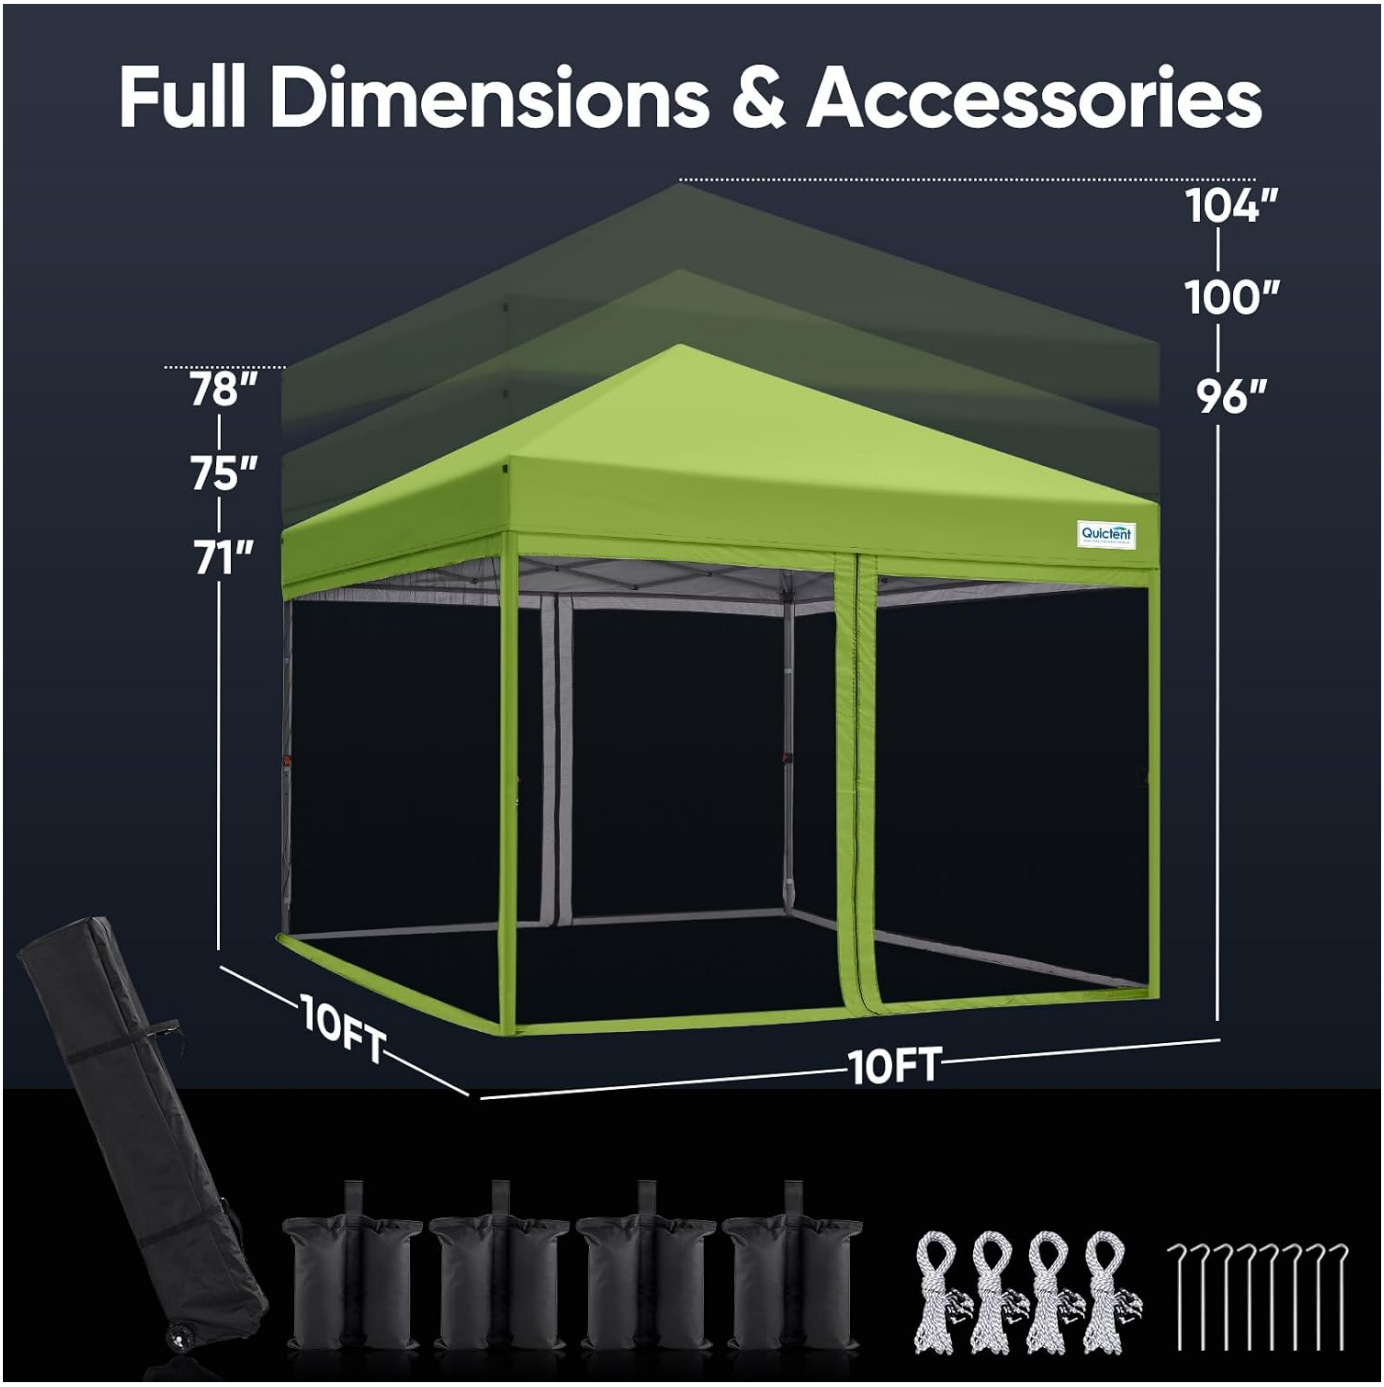


Figure 1: All components included in the package.

3. Setup Instructions

The Quictent canopy tent features an easy pop-up design for quick assembly. While one person can set it up, two people are recommended for optimal ease and safety.

3.1 Unpacking and Frame Extension

1. Remove the folded frame from the wheeled carry bag.
2. Place the frame in the desired setup location. With a person on each side, gently pull the outer legs of the frame outwards to partially extend it.



Figure 2: Partially extending the canopy frame.

3.2 Attaching the Canopy Top

3. Unfold the canopy top fabric and drape it over the partially extended frame. Ensure the corners of the canopy align with the corners of the frame.
4. Secure the canopy top to the frame using the Velcro straps located on the underside of the canopy.

3.3 Fully Extending and Locking the Frame

5. From underneath the canopy, push up on the central locking mechanism until it clicks into place.
6. Push the corner sliders up along each leg until they lock into position.



Figure 3: Engaging the central locking mechanism.

3.4 Adjusting Leg Height

7. Press the push-button on each leg and extend the leg to your desired height. There are multiple height settings available. Ensure all legs are set to the same height for stability.

3.5 Attaching Mosquito Netting

8. Unfold the mosquito netting. The netting features a full Velcro design along the top edge. Attach this Velcro to the corresponding Velcro strip on the underside of the canopy top.
9. Wrap the netting around each leg and secure it using the integrated Velcro straps.
10. Zip up the two entry points to create a fully enclosed screen house.



Figure 4: Mosquito netting fully installed.

3.6 Securing the Canopy

11. Fill the provided sandbags with sand and attach them to the canopy legs for added stability.
12. Use the ropes and stakes to firmly anchor the canopy to the ground. Attach ropes to the canopy corners and stake them into the ground at an angle.

Video Guide: For a visual demonstration of the setup process, please refer to the official setup video below.

Your browser does not support the video tag.

Video 1: Official Quictent Pop-Up Canopy Setup Guide. This video demonstrates the step-by-step assembly of the canopy tent, including frame extension, canopy attachment, and securing methods.

4. Operating Instructions

4.1 Using the Mosquito Netting

- The netting provides 360-degree protection against mosquitoes and other insects.

- Use the heavy-duty zippers on the two entry points to open and close the netting.
- For open access, the netting can be rolled up and secured with the integrated buckles.

4.2 Height Adjustment

- To adjust the height of the canopy, press the push-button on each leg and slide the inner leg up or down to the desired position. Ensure all four legs are adjusted evenly.

4.3 Weather Considerations

- The canopy is designed with waterproof fabric and UV protection for sun and light rain.
- In case of strong winds, heavy rain, or snow, always take down the canopy to prevent damage.

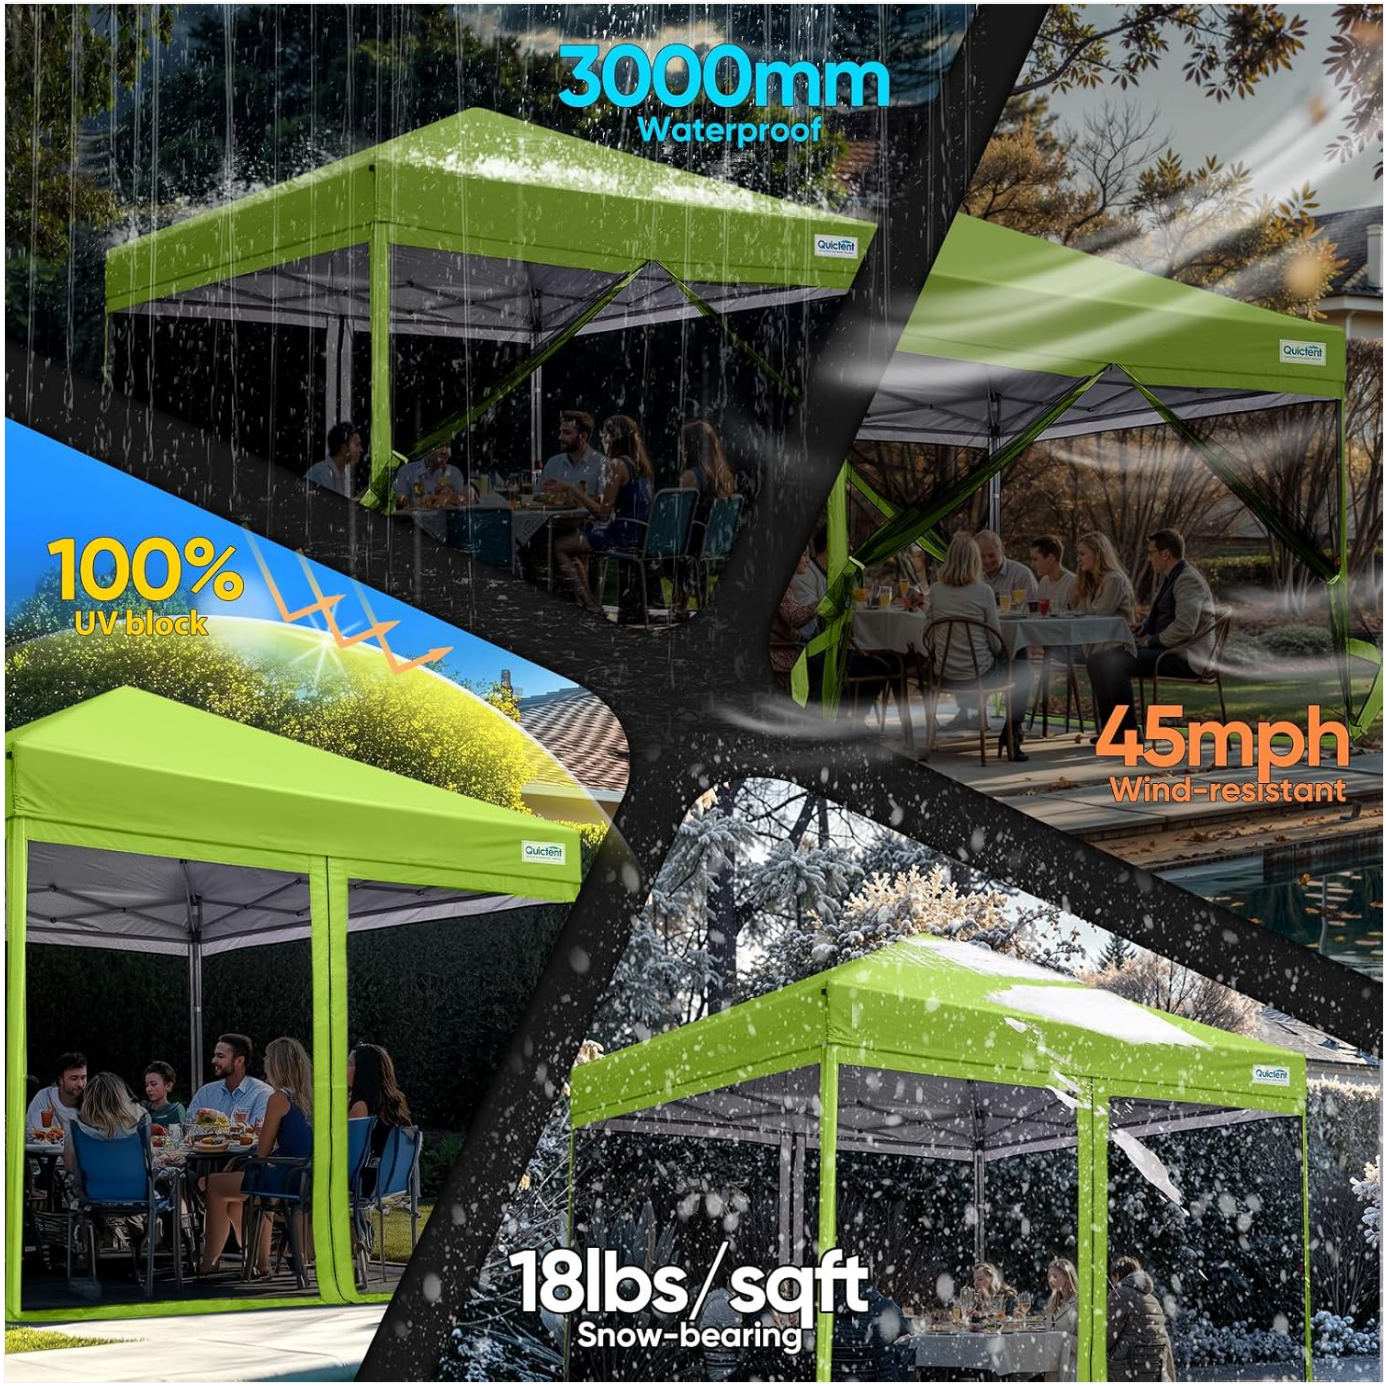


Figure 5: Canopy weather resistance features.

5. Maintenance

5.1 Cleaning

- Clean the canopy fabric and netting with mild soap and water. Do not use harsh chemicals or abrasive cleaners.
- Rinse thoroughly and allow to air dry completely before storage to prevent mildew.

5.2 Storage

- Disassemble the canopy by reversing the setup steps. Ensure all components are clean and dry.
- Store the frame, canopy top, netting, and accessories in the wheeled carry bag in a cool, dry place.

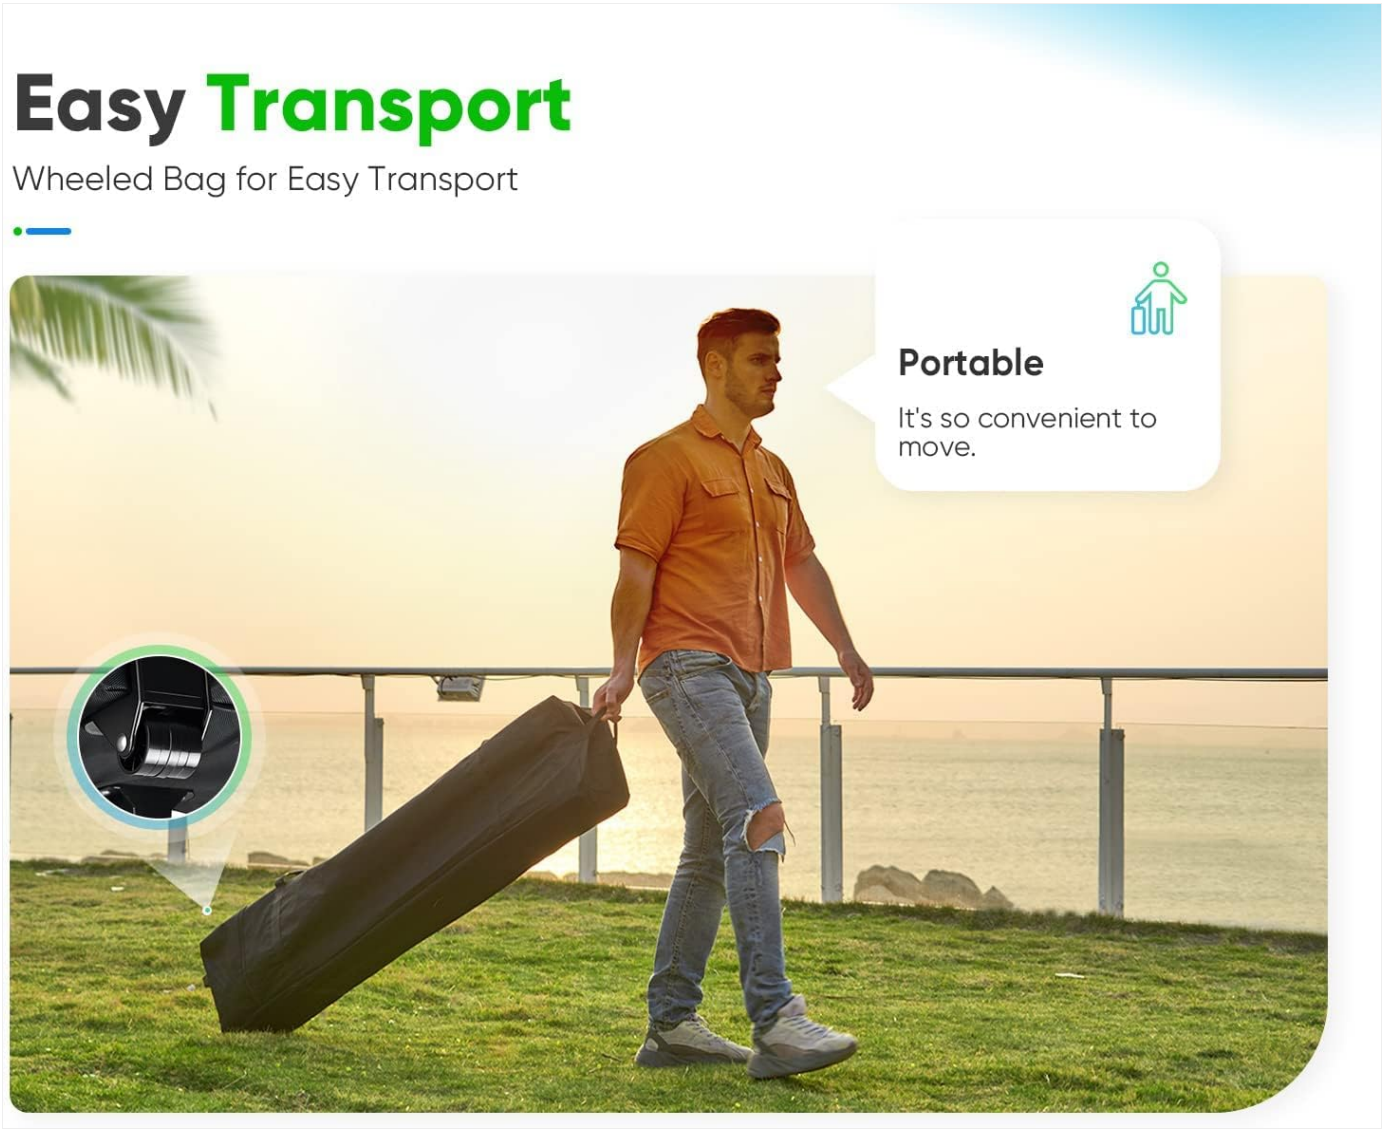


Figure 6: Wheeled carry bag for easy transport and storage.

5.3 Inspection

- Regularly inspect the frame for any signs of damage, rust, or loose connections.
- Check the fabric for tears, holes, or weakened seams. Repair any damage promptly to extend the product's lifespan.

6. Troubleshooting

- **Difficulty Extending Frame:** Ensure the frame is placed on a flat surface and that all legs are slightly pulled outwards before attempting to fully extend. Lubricate moving parts if necessary.
- **Canopy Instability:** Always use all provided anchoring accessories (stakes, ropes, sandbags). Ensure legs are fully extended and locked, and that the central locking mechanism is engaged.
- **Water Pooling on Canopy:** Ensure the canopy top is taut and properly secured to the frame. Adjust leg heights if necessary to create proper tension and allow water runoff.
- **Bugs Entering Screen House:** Verify that all Velcro connections for the netting are securely fastened and that zippers are fully closed.

7. Specifications

Feature	Specification
Size	10' x 10'
Max Ceiling Height	8.5 Feet
Frame Material	Alloy Steel
Canopy Material	420D Polyester Oxford Fabric with Silver Coating & PU Layer
Water Resistance	Water Resistant (3000mm)
UV Protection	Yes (100% UV-block, UPF50+)
Wind Resistance	Up to 45 mph
Snow Bearing Capacity	Up to 18 lbs/sqft
Item Weight	39.1 Pounds
Packed Dimensions	48.8"L x 9.5"W x 9.5"H

8. Warranty and Support

For warranty information, replacement parts, or any product-related inquiries, please contact the seller, Brandline, directly through your purchase platform. Keep your order details handy for faster service.

Your browser does not support the video tag.

Video 2: Quictent Pop-Up Canopy with Netting Screen House Room Tent Overview. This video provides a general overview of the canopy tent's features and benefits, including its screen house functionality.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question