Elechomes MTS-0801

Elechomes Gooseneck Electric Kettle User Manual

Model: MTS-0801

Introduction

Thank you for choosing the Elechomes Gooseneck Electric Kettle. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new kettle. Please read it thoroughly before first use and retain it for future reference.

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the heating cycle.
- This appliance is for household use only.
- Ensure the kettle is filled with water between the MIN and MAX marks before operation.

Product Overview

Familiarize yourself with the components of your Elechomes Gooseneck Electric Kettle.

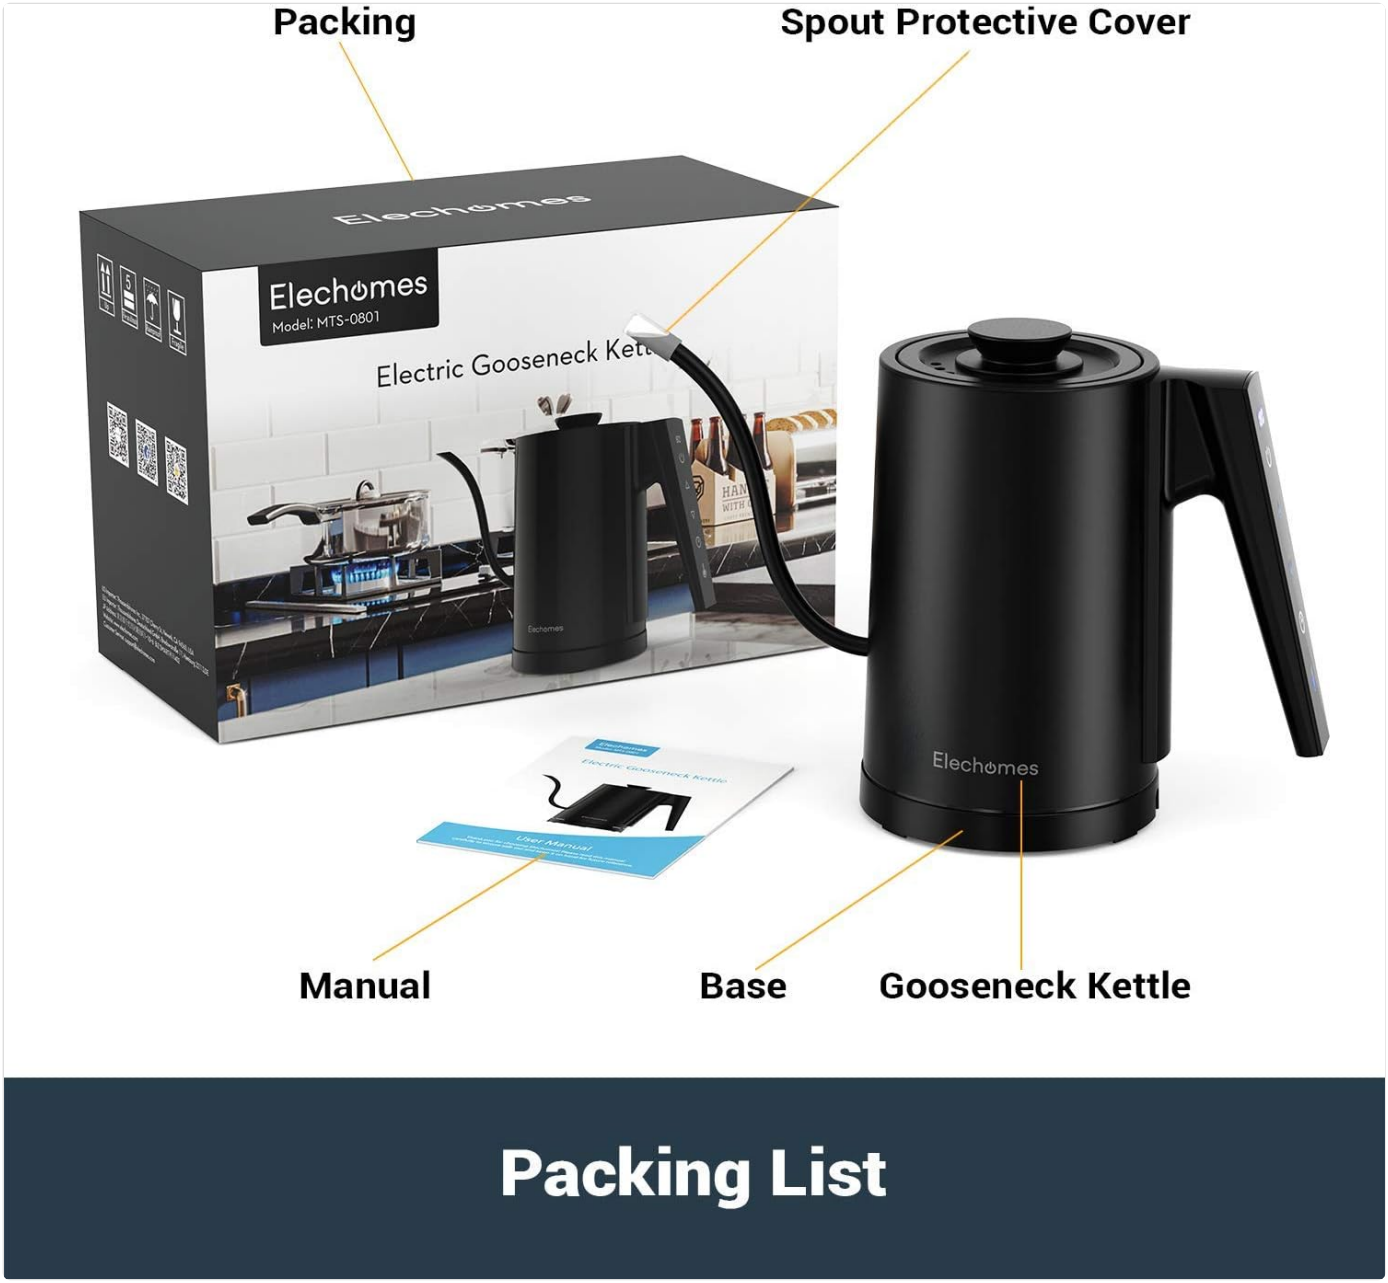


Image: Packing List. This image displays the contents included in the product packaging: the Gooseneck Kettle, its Base, the User Manual, and a Spout Protective Cover.

Main Components:

- **Gooseneck Spout:** Designed for precise pouring control.
- **Lid:** Heat protective lid to cover the kettle opening.
- **Handle:** Ergonomically designed for comfortable grip.
- **Kettle Body:** 0.8L capacity, 100% food-grade stainless steel interior.
- **Power Base:** Provides power to the kettle and features cord storage.
- **Control Panel:** Located on the base, with LED display and control buttons.



Image: Control Panel Functions. This image highlights the various buttons and the LED display on the kettle's control panel. It shows the LED Screen for real-time temperature or start time, the ON/OFF Button, Up/Down Buttons for temperature or delay-start time, the Delay Start Button, and the Keep-Warm Button.

Internal and Safety Features:



Image: Safety Features. This image illustrates key safety and design elements: the Stainless Steel Interior (food-grade 304), the Heat Protective Lid, the Gooseneck Spout, and the Cord Storage Base, emphasizing the kettle's safe construction.

- **Stainless Steel Interior:** Made from 304 food-grade stainless steel for durability and safety.
- **Auto-Off Function:** Automatically shuts off when water reaches the set temperature or boils dry.
- **Cord Storage:** Integrated into the power base for a tidy countertop.

Setup

1. **Unpack:** Carefully remove all packaging materials from the kettle and its base.
2. **Initial Cleaning:** Before first use, fill the kettle with water to the MAX line. Bring the water to a boil, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Connect Power:** Plug the power cord into a grounded electrical outlet.

Operating Instructions

Filling the Kettle:

Remove the kettle from its base and fill it with fresh, cold water. Do not fill below the MIN mark or above the MAX mark (0.8L). Replace the lid securely before placing the kettle back on the power base.

Power On/Off:

- Press the **ON/OFF Button** (power symbol) to turn the kettle on. The LED display will illuminate.
- Press the **ON/OFF Button** again to turn the kettle off at any time.

Setting Desired Temperature:



Image: Set a Desired Temperature. This image illustrates the kettle's ability to set precise temperatures for various beverages, showing recommended temperatures for Coffee (200°F), Oolong Tea (195°F), Green Tea (180°F), White Tea (170°F), and Formula Milk (105°F).

1. With the kettle on the base and powered on, the LED display will show the current water temperature.
2. Use the **Up/Down Buttons** (triangle symbols) to adjust the target temperature. The temperature can be set in single-degree

increments.

3. Once the desired temperature is set, the kettle will begin heating the water. The display will show the real-time temperature as it rises.
4. The kettle will automatically shut off once the target temperature is reached.

Fast Heating:



Image: Fast Heating. This image highlights the kettle's rapid heating capability, indicating it can boil 0.8L of water in under 5 minutes with 1000W power, features a no-leak design, and operates quietly.

The 1000W heating element allows the kettle to boil 0.8L of water in under 5 minutes, providing quick access to hot water.

Keep Warm Function:

Press the **Keep-Warm Button** (thermometer symbol) after setting your desired temperature. The kettle will maintain the water at the set temperature for up to 2 hours.

Delay Start Timer:

Use the **Delay Start Button** (clock symbol) to set a specific time for the kettle to begin heating. Adjust the delay time using the

Up/Down buttons.

Pouring:



Image: Brewing Amazing Quality Coffee. This image demonstrates the precise pouring control offered by the gooseneck spout, showing water being poured into a pour-over coffee dripper.

The gooseneck spout is designed for controlled and steady pouring, ideal for pour-over coffee and tea preparation. Pour slowly and steadily to achieve optimal results.

Cleaning and Maintenance

Regular cleaning ensures the longevity and optimal performance of your kettle.

Exterior Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

- Ensure no water enters the control panel or power base.

Interior Descaling:



Image: Easy to Clean. This image demonstrates the cleaning process for the kettle's interior, showing a 'Before Cleaning with Vinegar' state with mineral deposits and an 'After Cleaning with Vinegar' state, illustrating a clean, shiny stainless steel interior.

Mineral deposits (limescale) can build up inside the kettle over time, especially in hard water areas. Descale your kettle regularly to maintain efficiency.

1. Fill the kettle with 1 part white vinegar and 2 parts water. Alternatively, use a descaling solution specifically designed for kettles.
2. Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy deposits.
3. Pour out the solution and rinse the interior thoroughly with fresh water several times.
4. For stubborn deposits, gently scrub with a soft brush or sponge.

Storage:

When not in use, ensure the kettle is clean, dry, and unplugged. Store it in a cool, dry place. The power cord can be wrapped around the cord storage area under the base.

Troubleshooting

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; power switch not pressed; kettle not properly seated on base; no water.	Ensure plug is securely in outlet; press ON/OFF button; reseat kettle on base; fill with water (between MIN/MAX).
Water boils slowly.	Limescale buildup.	Descale the kettle as per the 'Interior Descaling' instructions.
Kettle turns off before boiling/reaching set temperature.	Limescale buildup; faulty sensor.	Descale the kettle. If problem persists, contact customer support.
Water tastes metallic or unusual.	New kettle residue; mineral deposits.	Perform initial cleaning steps again. Descale if necessary.

If the problem persists after trying these solutions, please contact Elechomes Customer Support.

Specifications

- **Model:** MTS-0801
- **Capacity:** 0.8 Liters
- **Power:** 1000W
- **Voltage:** 120V~60Hz
- **Material:** 304 Food-Grade Stainless Steel Interior
- **Dimensions:** 12 x 5.9 x 8 inches (L x W x H)
- **Item Weight:** 2.42 pounds

Warranty and Support

Elechomes products are manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. For detailed warranty information or if you have any questions or concerns about your product, please contact Elechomes Customer Support.
Please have your model number (MTS-0801) and purchase information ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question