**JVC LT-40MAR305**

# JVC LT-40MAR305 40-Inch Class Roku Full HD LED Smart TV User Manual

Model: LT-40MAR305 | Brand: JVC

## Introduction

This user manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your JVC LT-40MAR305 40-Inch Class Roku Full HD LED Smart TV. Please read this manual thoroughly before using your television to ensure proper and safe operation.



*Front view of the JVC LT-40MAR305 40-Inch Class Roku Full HD LED Smart TV.*

## What's in the Box

Carefully unpack all items from the box. Ensure all components are present before discarding packaging materials.

- JVC LT-40MAR305 40-Inch Class Roku Full HD LED Smart TV
- Roku Remote Control
- TV Stand (2 pieces)
- Screws for TV Stand
- Power Cable
- Quick Start Guide
- Batteries for Remote (AAA x 2)


## Setup Guide


### 1. Unpacking

Remove the TV and all accessories from the packaging. Place the TV screen-down on a soft, clean surface to prevent scratches.

### 2. Attaching the TV Stand

1. Align each stand piece with the corresponding screw holes on the bottom of the TV.
2. Secure each stand piece using the provided screws. Ensure they are tightened firmly.

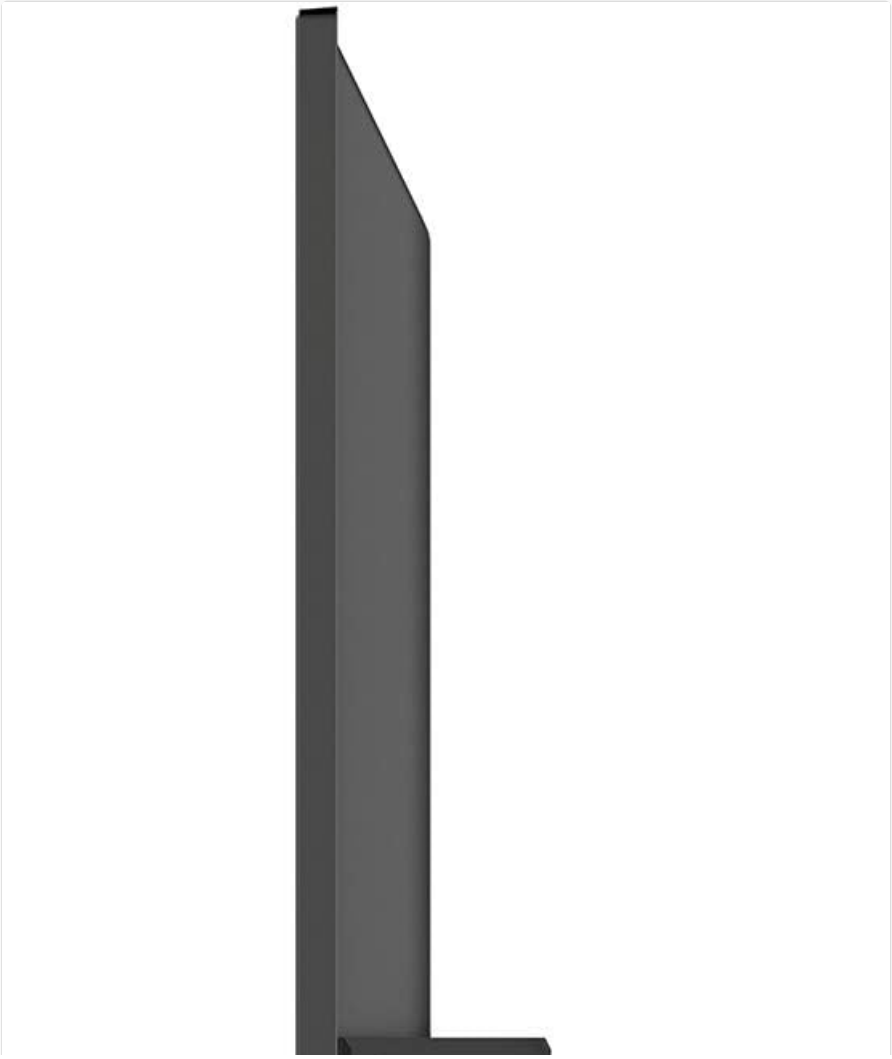

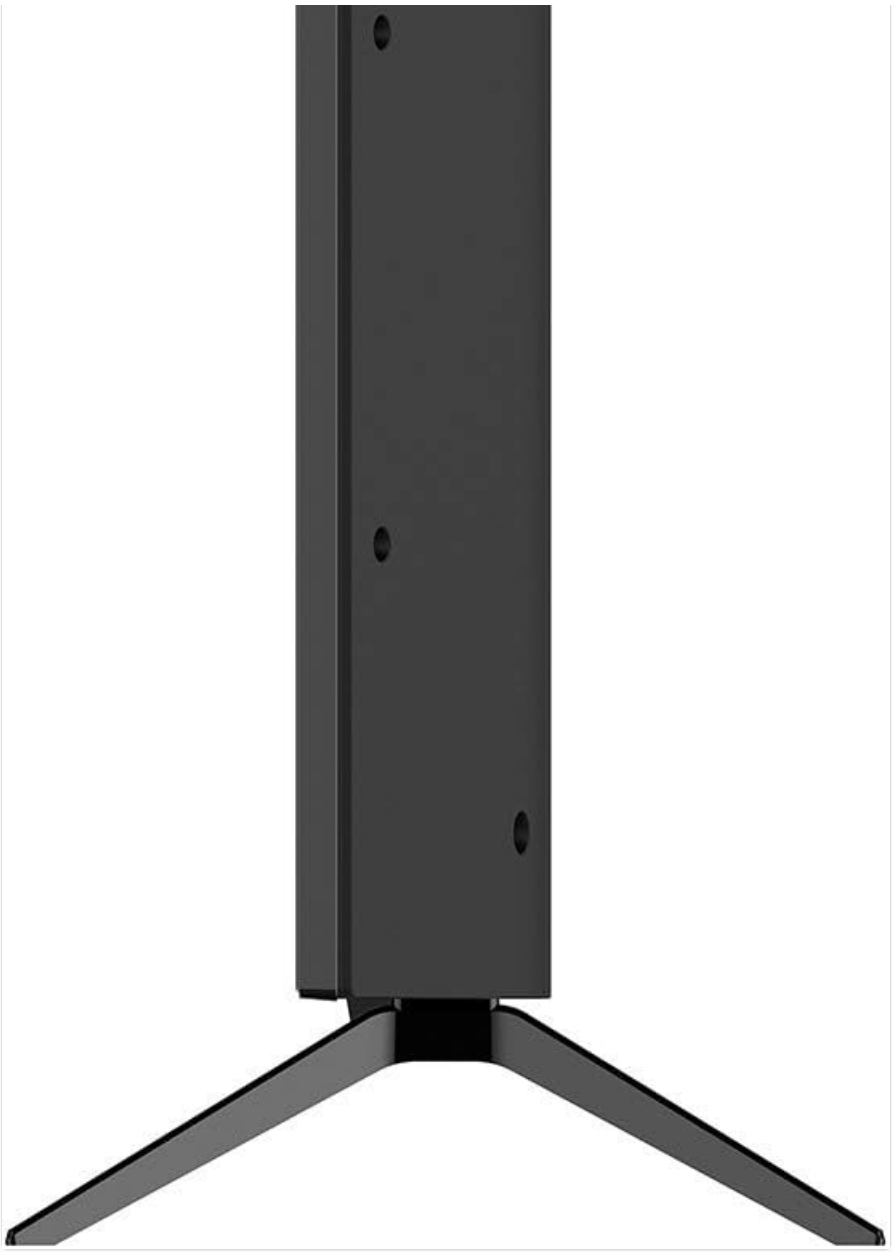

*Side view of the TV with the stand attached.*

## 3. Wall Mounting (Optional)

If you plan to wall mount your TV, refer to the instructions provided with your wall mount kit. The TV supports VESA standard mounting (specific dimensions can be found in the specifications section).

## 4. Connecting Your Devices

Connect your external devices (e.g., cable box, Blu-ray player, gaming console) to the appropriate ports on the back of the TV.

- **HDMI:** For high-definition video and audio.
- **Antenna/Cable In:** For connecting an antenna or cable TV.
- **USB:** For media playback from USB devices.
- **Optical Audio Out:** For connecting to a soundbar or audio receiver.



*Rear view of the TV showing input ports.*

### 5. Initial Power On and Roku Setup

1. Plug the power cable into the TV and then into a wall outlet.
2. Insert the included batteries into the remote control.
3. Press the Power button on the remote to turn on the TV.
4. Follow the on-screen instructions to complete the Roku guided setup, including connecting to your Wi-Fi network and activating your Roku account.

## Operating Your TV


### Remote Control Overview

The Roku remote control is designed for simplicity and ease of use. Key buttons include:

- **Power:** Turns the TV on/off.
- **Home:** Returns to the Roku Home screen.
- **Directional Pad (D-Pad):** Navigates menus and selects items.
- **OK:** Confirms selections.
- **Back:** Returns to the previous screen.
- **Volume Up/Down:** Adjusts TV volume.
- **Mute:** Mutes/unmutes sound.
- **Instant Replay:** Jumps back a few seconds in video playback.
- **Star (*):** Accesses options menu for selected items.
- **Dedicated Channel Buttons:** Quick access to popular streaming services.

## Navigating the Roku Interface

The Roku Home screen provides access to all your streaming channels, inputs, and settings.

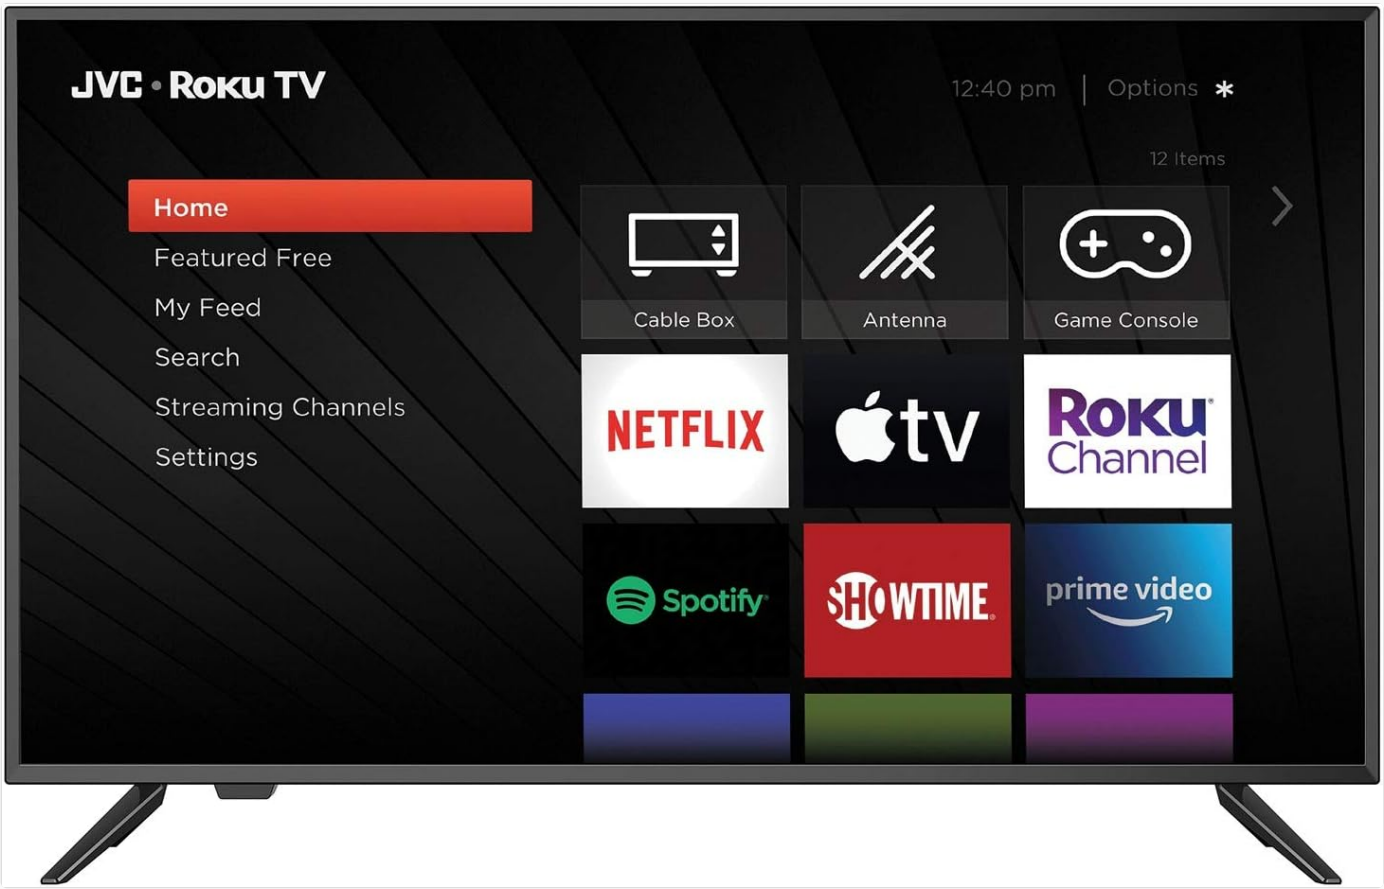


*Roku Home screen interface.*

- Use the **D-Pad** to move between menu options and channels.
- Press **OK** to launch a channel or select an option.
- Select **Streaming Channels** to browse and add new apps.
- Select **Settings** to adjust picture, sound, network, and system options.

## Selecting Inputs

From the Home screen, navigate to the input tile (e.g., HDMI 1, Antenna) corresponding to your connected device and press **OK** to switch to that input.

## Accessing Streaming Services

Once connected to the internet, you can access a wide range of streaming services. Simply select the desired channel icon from the Home screen to launch it. You may need to log in with your existing account credentials for subscription-based services.

## Key Features

- 1920 x 1080p resolution
- Screen size: 39.5 in.
- 16:9 aspect ratio
- Contrast ratio: 1,200:1

- 8-watt speakers x 2

## Technical Specifications

| Specification | Value |
|---|---|
| Brand Name | JVC |
| Model Number | LT-40MAR305 |
| Item Weight | 16.96 pounds |
| Package Dimensions | 37.2 x 24 x 5.4 inches |
| Color Name | Black |
| Special Features | Flat |
| Standing Screen Display Size | 39.5 Inches (visible diagonal) |
| Aspect Ratio | 16:9 |
| Wattage | 8 watts (speakers) |
| Display Technology | LED |
| Resolution | 1080p (1920 x 1080) |
| Refresh Rate | 60 Hz |
| Connectivity Technology | HDMI |
| Supported Internet Services | Browser, Hulu, Netflix (and other Roku channels) |
| Date First Available | September 30, 2020 |

## Care and Maintenance

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen-specific cleaning solution applied to the cloth, not directly to the screen.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure proper ventilation around the TV. Do not block ventilation openings.
- **Power Cord:** Regularly check the power cord for any damage.

## Troubleshooting Common Issues

| Problem | Possible Solution |
|---|---|

| Problem | Possible Solution |
|---|---|
| No Power | Ensure the power cord is securely plugged into both the TV and a working electrical outlet. Try a different outlet. |
| No Picture, But Has Sound | Check the input source. Ensure the connected device is powered on and functioning correctly. Try a different HDMI cable or port. |
| No Sound, But Has Picture | Check the volume level and ensure the TV is not muted. Verify external audio connections if using a sound system. |
| Remote Control Not Working | Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor. |
| Network Connection Issues | Restart your router and modem. Go to Roku Settings > Network > Check connection. Ensure your Wi-Fi password is correct. |

## Warranty and Support

Your JVC LT-40MAR305 TV comes with a limited manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, troubleshooting assistance, or to inquire about warranty service, please visit the official JVC support website or contact their customer service line.

For the most up-to-date support information, please visit:www.jvc.com


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question