Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Balsam Hill 2809218

Balsam Hill 7.5 ft Pre-Lit Classic Blue Spruce Artificial Christmas Tree Instruction Manual

Model: 2809218

1. Introduction

This manual provides essential information for the safe and proper assembly, operation, maintenance, and storage of your Balsam Hill 7.5 ft Pre-Lit Classic Blue Spruce Artificial Christmas Tree. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Your Balsam Hill tree features 540 Twinkly Lights and Easy Plug Technology for convenient setup. The Classic Blue Spruce design incorporates 100% classic needle foliage with over 2960 branch tips, offering a realistic appearance.

2. Safety Information

- Ensure the tree is placed on a stable, level surface to prevent tipping.
- Do not overload electrical outlets. Connect the tree to a properly rated power source.
- Keep all electrical cords and connections away from water or moisture.
- Do not place candles or other open flames near the tree.
- Regularly inspect the tree for any damaged wires or bulbs. Replace any faulty components immediately using the provided spare parts.
- Keep small children and pets away from the tree during assembly and disassembly.

3. Package Contents

Verify that all components are present before beginning assembly:

- Tree Sections (typically 3 sections for a 7.5 ft tree)
- Premium Tree Stand with scratch-proof feet
- Storage Bag
- Cotton Fluffing Gloves (various sizes may be included)

- Foot Pedal for light control
- Spare Bulbs and Fuses
- Instruction Manual



Image: The tree is packaged in a sturdy box, and a red storage bag is included for off-season storage.



Image: A close-up of the included accessories: protective gloves, spare bulbs and fuses, and the tree stand.

4. Setup

4.1 Tree Stand Assembly

1. Unfold the tree stand into an 'X' shape on a flat, stable surface.
2. Ensure the stand is fully open and stable. The scratch-proof feet will protect your flooring.

Size Guide

Generally speaking, you want 6 inches between the ceiling and the top of your tree or tree topper, and your space should have 12 inches of clearance beyond the width of your tree.

Choosing the right height

All heights include tree stands.

UNDER 6'
For cozy rooms and secondary spaces (kitchens, dens).

6' - 6.5'
For homes with low to average ceiling height.

7' - 7.5'
For homes with 8' to 9' ceiling heights.

8' - 9'
For rooms with 10' to 11' ceiling heights.

10' - 14'
For 2-story living rooms and other rooms with very high ceiling heights, as well as commercial spaces.

15' - 30'
For churches, malls, office buildings, and other large public spaces.

Choosing the right shape and style

REGULAR (FULL)
Lush profiles and sturdy branches make these our most popular trees.

SLIM
Our most slender profile for tight spaces, corners, and foyers.

WIDE
Fill up a room and have plenty of space for ornaments and presents beneath.

SPARSE
Branches spaced so your ornaments become the star of the show.

FLATBACK
Space-savers that appear full from the front, but rest flat against a wall or corner.

7.5' CLASSIC BLUE SPRUCE® TREE: 90" X 60" (INCLUDES TREE STAND) | FULL

Image: The sturdy metal tree stand with protective rubber feet, designed to prevent scratches on flooring.

4.2 Tree Section Assembly (Easy Plug Technology)

1. Insert the bottom tree section into the assembled stand. Secure it by tightening the stand key.
2. Continue by inserting the middle section(s) into the section below. The Easy Plug Technology automatically connects the lights as each section is inserted.
3. Finally, insert the top section.
4. Ensure all sections are firmly seated.



Image: A close-up view demonstrating the Easy Plug Technology, where tree sections connect automatically to power the lights.

4.3 Branch Shaping (Fluffing)

For optimal appearance, meticulous branch shaping is recommended. Wear the provided cotton gloves to protect your hands.

1. Starting from the bottom section, work your way up the tree.
2. Gently pull individual branch tips away from the trunk and spread them outwards to fill any gaps.
3. Shape the branches to create a full, natural silhouette. First-time shaping may take over an hour.



Image: Visual guide illustrating the process of fluffing tree branches, showing how to spread tips for a fuller look.

Video: An overview of the Balsam Hill Classic Blue Spruce Christmas Tree, demonstrating its features and assembly process.

5. Operating Twinkly Lights

Your tree is equipped with 540 Twinkly LED lights, offering customizable lighting options.

5.1 Powering On/Off

- Plug the tree's power cord into a standard electrical outlet.
- Use the included foot pedal to easily turn the lights on or off.

5.2 Customizable LED Lights

- The Twinkly lights can be controlled via a dedicated mobile application. Download the Twinkly app from your device's app store.
- Follow the app's instructions to connect to your tree and customize light colors, patterns, and effects.



Image: Detailed view of the Twinkly LED lights integrated into the tree branches, showcasing their vibrant colors.



Image: The fully assembled 7.5 ft Balsam Hill Classic Blue Spruce tree illuminated with its 540 Twinkly LED lights.

6. Maintenance

6.1 Cleaning

To clean your artificial tree, gently dust the branches with a soft cloth or use a vacuum cleaner with a brush attachment. Do not use harsh chemicals or abrasive cleaners.

6.2 Light Replacement

If a light bulb or fuse fails, use the provided spare parts for replacement. Refer to the light string plug for specific bulb and fuse ratings. Always unplug the tree before attempting any light maintenance.

6.3 Storage

At the end of the season, carefully compress the branches and disassemble the tree sections. Store the tree in the provided storage bag in a cool, dry location, away from direct sunlight. This helps maintain the tree's shape and prolong its lifespan.

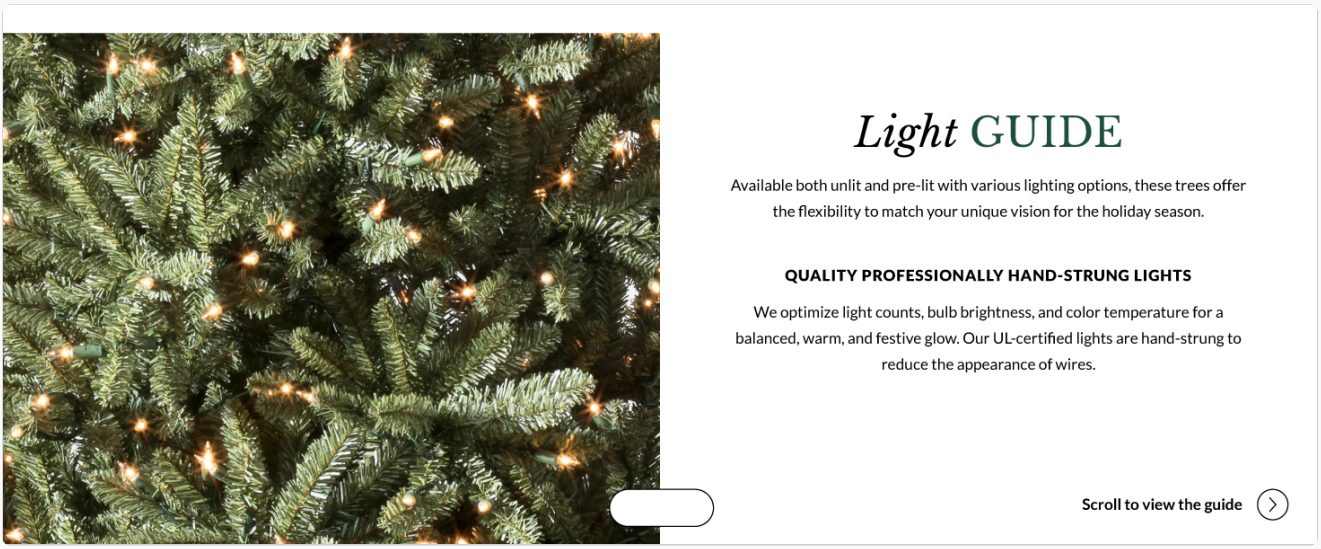


Image: The durable red storage bag provided for convenient off-season storage of your Balsam Hill tree.

7. Troubleshooting

Problem	Possible Cause	Solution
Lights not illuminating	Loose connection, faulty bulb, blown fuse.	Check all Easy Plug connections. Replace any burnt-out bulbs or blown fuses using the provided spares. Ensure the power cord is securely plugged in.
Sections not connecting properly	Sections not fully seated.	Ensure each tree section is fully inserted and aligned with the section below. Twist gently to secure.
Tree appears sparse	Insufficient branch shaping.	Refer to Section 4.3 for detailed branch shaping instructions. Take time to individually spread each branch tip.

8. Specifications

- **Brand:** Balsam Hill
- **Model Number:** 2809218
- **Product Dimensions:** 60"D x 60"W x 90"H (7.5 ft height)
- **Color:** Twinkly LED (Customizable LEDs)
- **Material:** Metal, Polyvinyl Chloride (PVC)
- **Item Weight:** 49 Pounds
- **Tip Count:** 2960+
- **Light Count:** 540 Twinkly Lights
- **Special Features:** App Controlled Lighting, Customizable LED Lights, Easy Plug Technology, Foot Pedal Control
- **Included Components:** Christmas Tree Stand, Christmas Tree Storage Bag, Cotton Fluffing Gloves, Spare Bulbs and Fuses

9. Warranty & Support

9.1 Tree & Foliage Premium Guarantee

Balsam Hill Tree & Foliage Premium Warranties guarantee the quality of our frames, foliage, hinges, and tree stands. Any repair or replacement of defects in these parts are fully covered by the specified time frame.

9.2 Light Warranty

Repair or replacement of lights are covered by the Balsam Hill light warranty.

To view your tree's specific warranty terms, please visit the official Balsam Hill website or contact customer service.

9.3 Customer Support

For any questions, assistance, or to chat with a specialist, please visit the Balsam Hill website or call their customer service line. Contact details are typically found on the product packaging or the official website.

© 2025 Balsam Hill. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08KJGJZYF

More documents and user manuals: **https://manuals.plus/**