Whirlpool WFO 3O41 PL X

Whirlpool WFO 3O41 PL X Freestanding Dishwasher User Manual

Model: WFO 3O41 PL X

1. Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Whirlpool WFO 3O41 PL X freestanding dishwasher. Please read these instructions carefully before using the appliance and retain them for future reference.



Image 1.1: Front view of the Whirlpool WFO 3O41 PL X Dishwasher.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after a wash cycle.
- Sharp items should be loaded with points and sharp edges down to prevent injury.

3. Product Overview and Key Features

Your Whirlpool WFO 3O41 PL X dishwasher is equipped with advanced technologies to ensure optimal cleaning and drying performance while conserving resources.

- **6th SENSE Technology:** This program utilizes intelligent sensors to continuously monitor the wash cycle and detect the level of soil, adapting resource usage accordingly for optimal cleaning.
- **MultiZone:** When washing a small load, this option allows you to select a single basket for washing, optimizing water and energy consumption.
- **Turbo:** This function reduces the duration of main programs while maintaining the same washing and drying performance quality.
- **Natural Dry:** An automatic door opening system at the end of the cycle that uses natural airflow to improve drying performance by up to 99% and reduce energy consumption by up to 40%.

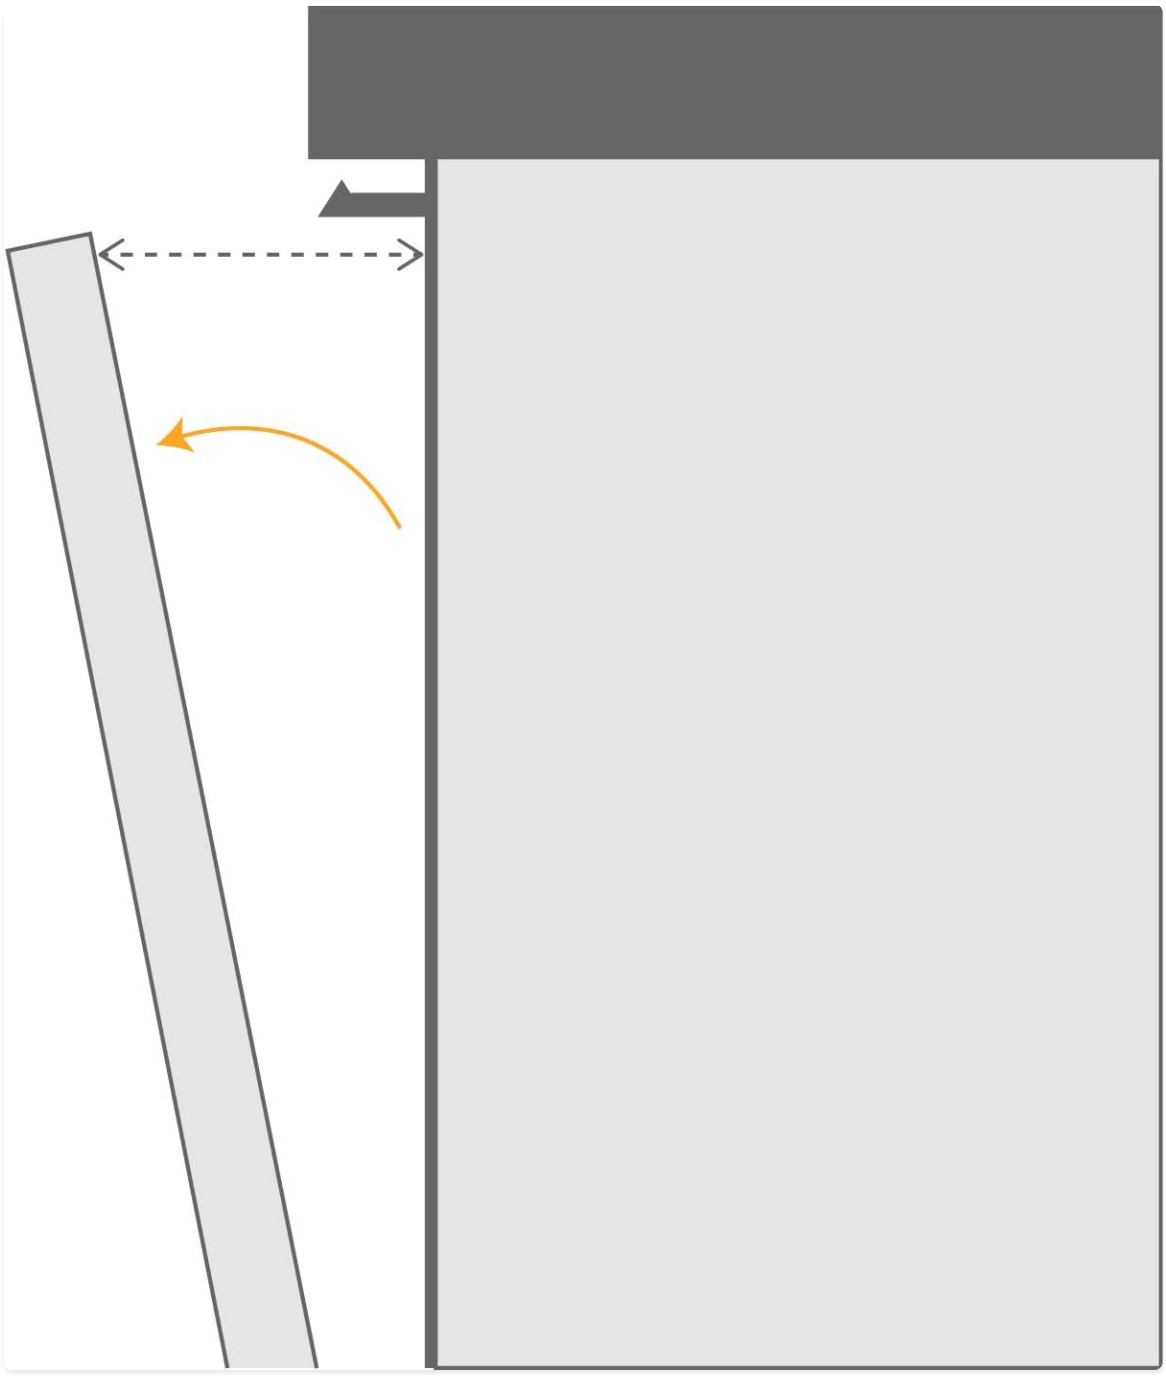


Image 3.1: Natural Dry automatic door opening diagram.

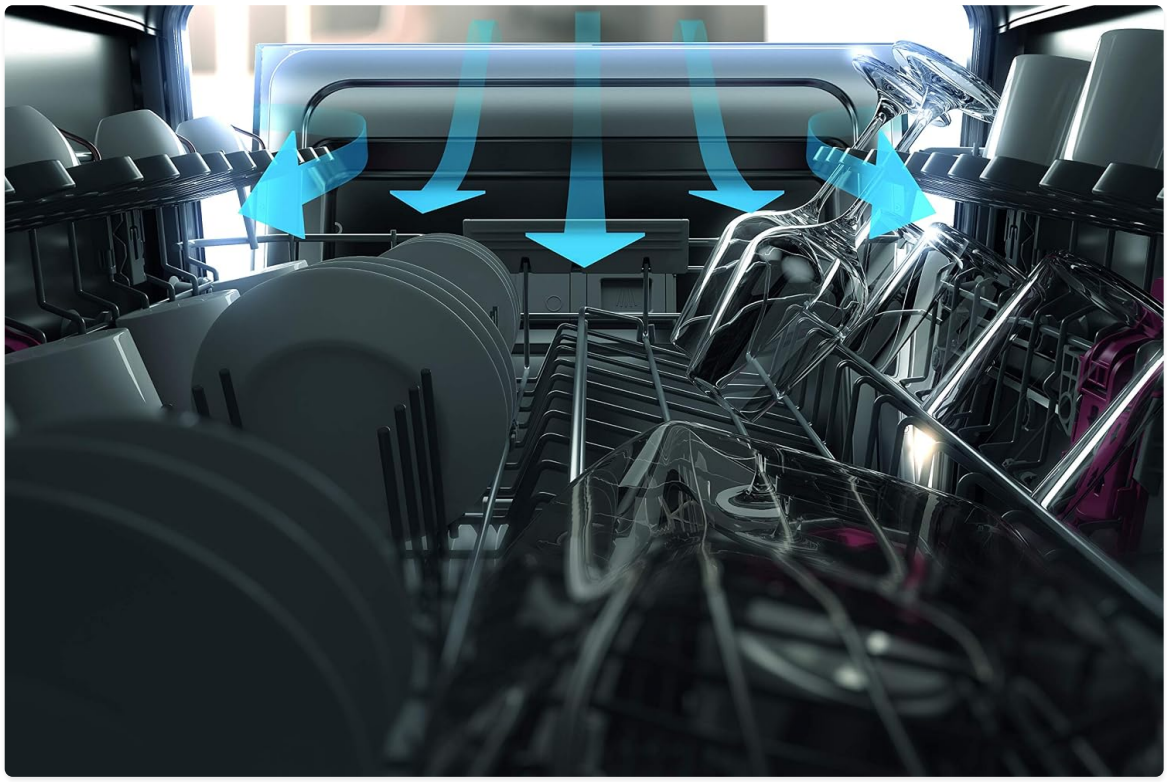


Image 3.2: Interior view illustrating Natural Dry airflow.

- **Power Clean:** Powerful supplementary water jets in the lower basket can be activated with this option, providing more intense and effective cleaning for heavily soiled items.

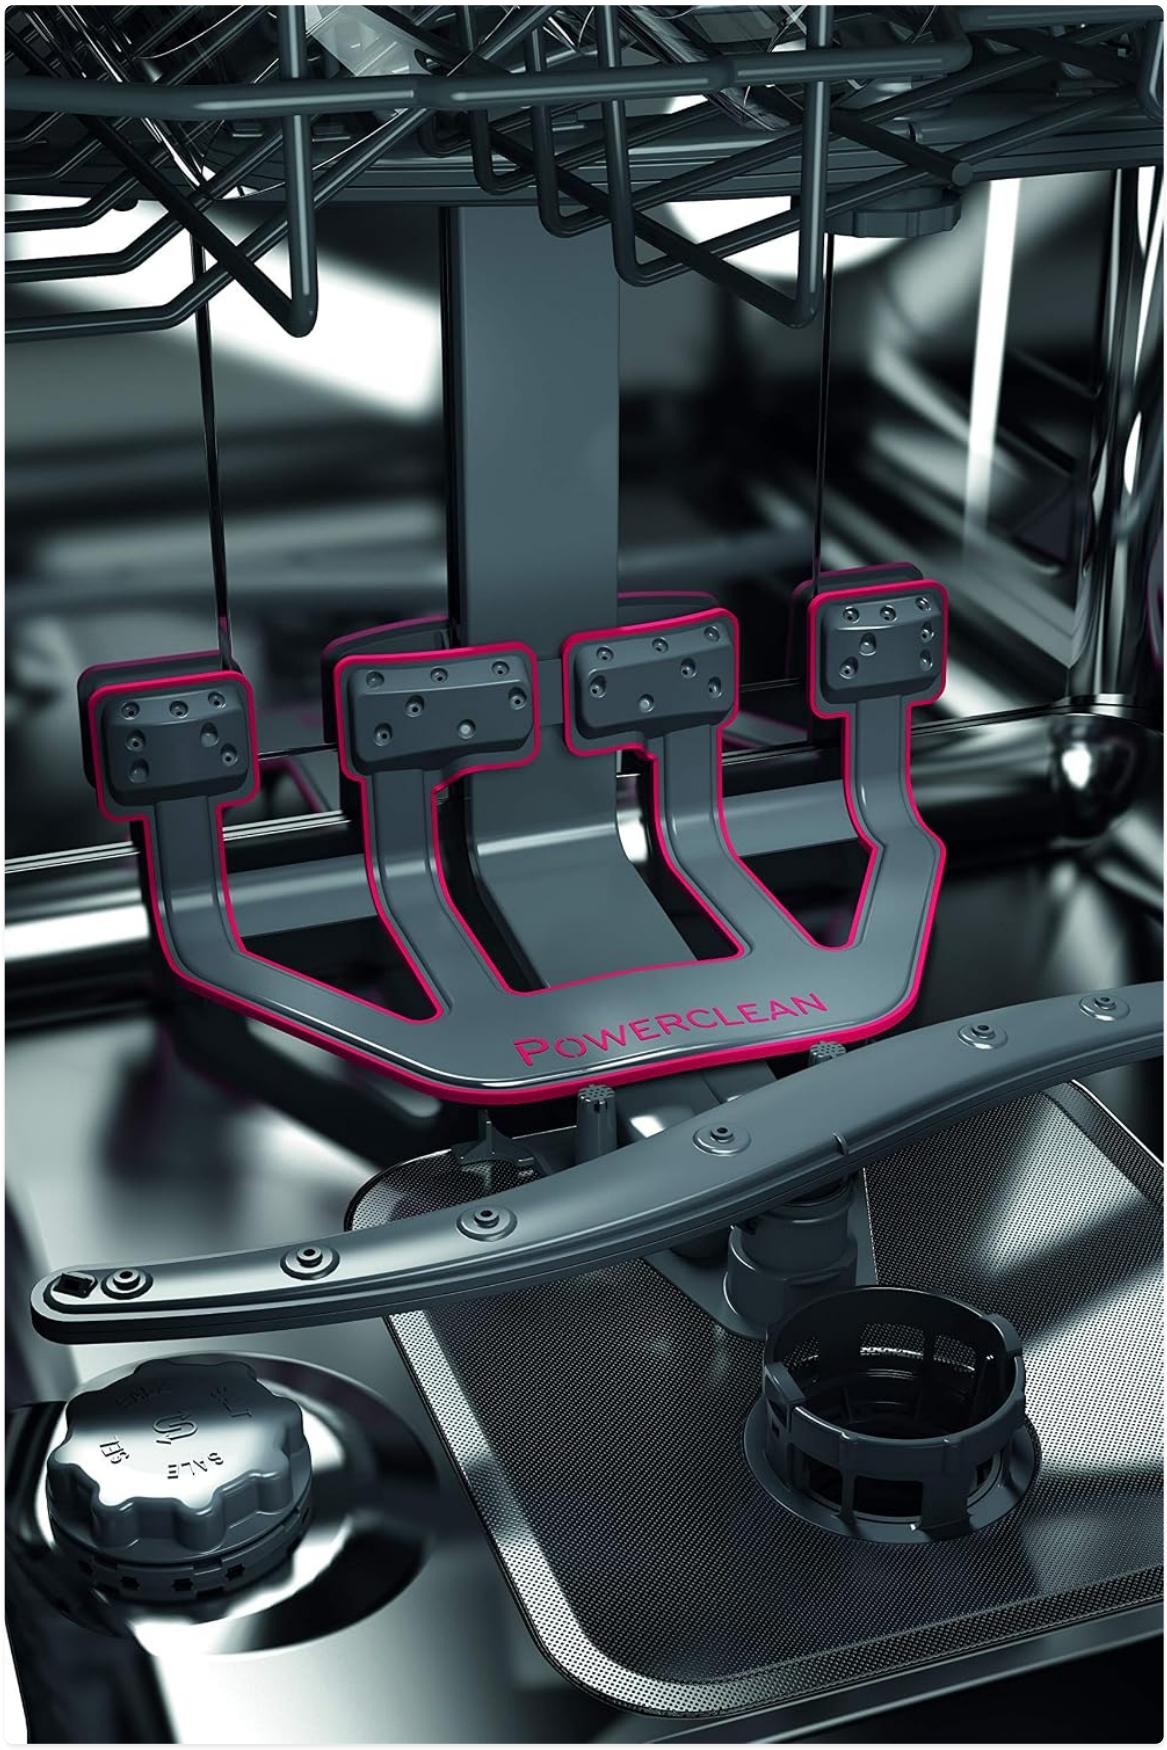


Image 3.3: Close-up of Power Clean jets.



Image 3.4: Power Clean jets in operation.

4. Installation

Proper installation is crucial for the performance and longevity of your dishwasher. It is recommended to have the appliance installed by a qualified technician.

4.1 Placement

The dishwasher is a freestanding model. Choose a suitable location near water and drainage connections. Ensure the floor is level and capable of supporting the appliance's weight.

4.2 Connections

- **Water Supply:** Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is secure to prevent leaks.
- **Drainage:** Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked or obstructed.
- **Electrical Connection:** Plug the appliance into a properly grounded electrical outlet (220 Volts). The power cable length is approximately 10 cm, so ensure the outlet is within reach.



Image 4.1: Dishwasher dimensions (Depth: 59cm, Width: 60cm, Height: 85cm).

5. First Use

Before using your dishwasher for the first time, perform the following steps:

1. **Add Dishwasher Salt:** Fill the salt dispenser with dishwasher salt to soften the water. Refer to the water hardness settings in your full manual.
2. **Add Rinse Aid:** Fill the rinse aid dispenser. Rinse aid helps with drying and prevents streaks.
3. **Run an Empty Cycle:** Run a short wash cycle without dishes to clean the interior and flush out any manufacturing residues.

6. Operating Instructions

6.1 Control Panel

The digital control panel allows you to select programs and functions.



Image 6.1: Digital Control Panel.

6.2 Loading the Dishwasher

Load dishes efficiently to ensure proper water circulation and cleaning. The dishwasher has a capacity for 14 place settings.

- Place larger, heavily soiled items in the lower basket.
- Glasses, cups, and smaller items go in the upper basket.
- Cutlery should be placed in the cutlery basket or third basket, if available, with handles down for forks and spoons, and handles up for knives.



Image 6.2: Dishwasher interior with loaded racks.

6.3 Selecting a Program

Choose a wash program based on the type and soil level of your dishes:

- **6th SENSE:** Automatic program for mixed loads and varying soil levels.
- **Eco:** Energy-efficient program for normally soiled dishes.
- **Intensive:** For heavily soiled pots, pans, and dishes.
- **Rapid (Quick Wash & Dry):** For lightly soiled dishes that need a quick wash.
- **Glassware:** Gentle program for delicate items.
- **Pre-wash** / **Rinse:** For rinsing dishes that will be washed later.
- **Upper Rack:** For washing items only in the upper basket (MultiZone).

6.4 Starting a Cycle

1. Load the dishwasher and add detergent.
2. Close the dishwasher door.
3. Select the desired program using the control panel.
4. Press the Start button.

7. Maintenance and Cleaning

Regular maintenance ensures optimal performance and extends the life of your dishwasher.

7.1 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7.2 Interior Cleaning

Periodically clean the interior with a dishwasher cleaner or a mixture of vinegar and baking soda.

7.3 Filter Cleaning

The filter system should be cleaned regularly to prevent blockages and ensure efficient washing. Remove the filter assembly, rinse it under running water, and brush away any food particles. Reassemble correctly.

7.4 Salt and Rinse Aid Refill

Monitor the indicator lights on the control panel for salt and rinse aid levels and refill as needed.

8. Troubleshooting


Before contacting customer service, consult the following table for common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes, clean spray arm nozzles, add more detergent, clean filters.
Water not draining	Clogged drain hose or filter, drain pump issue.	Clean filters, check drain hose for kinks or blockages.
Excessive noise	Improperly loaded dishes, foreign object in pump, leveling issues.	Rearrange dishes, check for obstructions, ensure dishwasher is level.

9. Specifications

Feature	Detail
Brand	Whirlpool
Model Name	WFO 3O41 PL X

Feature	Detail
Installation Type	Freestanding
Capacity	14 Place Settings
Product Dimensions (DxWxH)	59 cm x 60 cm x 85 cm
Item Weight	47 kg
Color	Stainless Steel (Inox)
Interior Material	Stainless Steel
Voltage	220 Volts
Noise Level	41 Decibels
Energy Efficiency Class	C
Water Consumption (Eco Program)	9.5 Liters/cycle
Energy Consumption (Eco Program)	0.746 kWh/cycle
Program Duration (Eco Program)	3:10 (h:min)
Display Type	Digital
Cable Length	10 cm
Included Components	Dishwasher

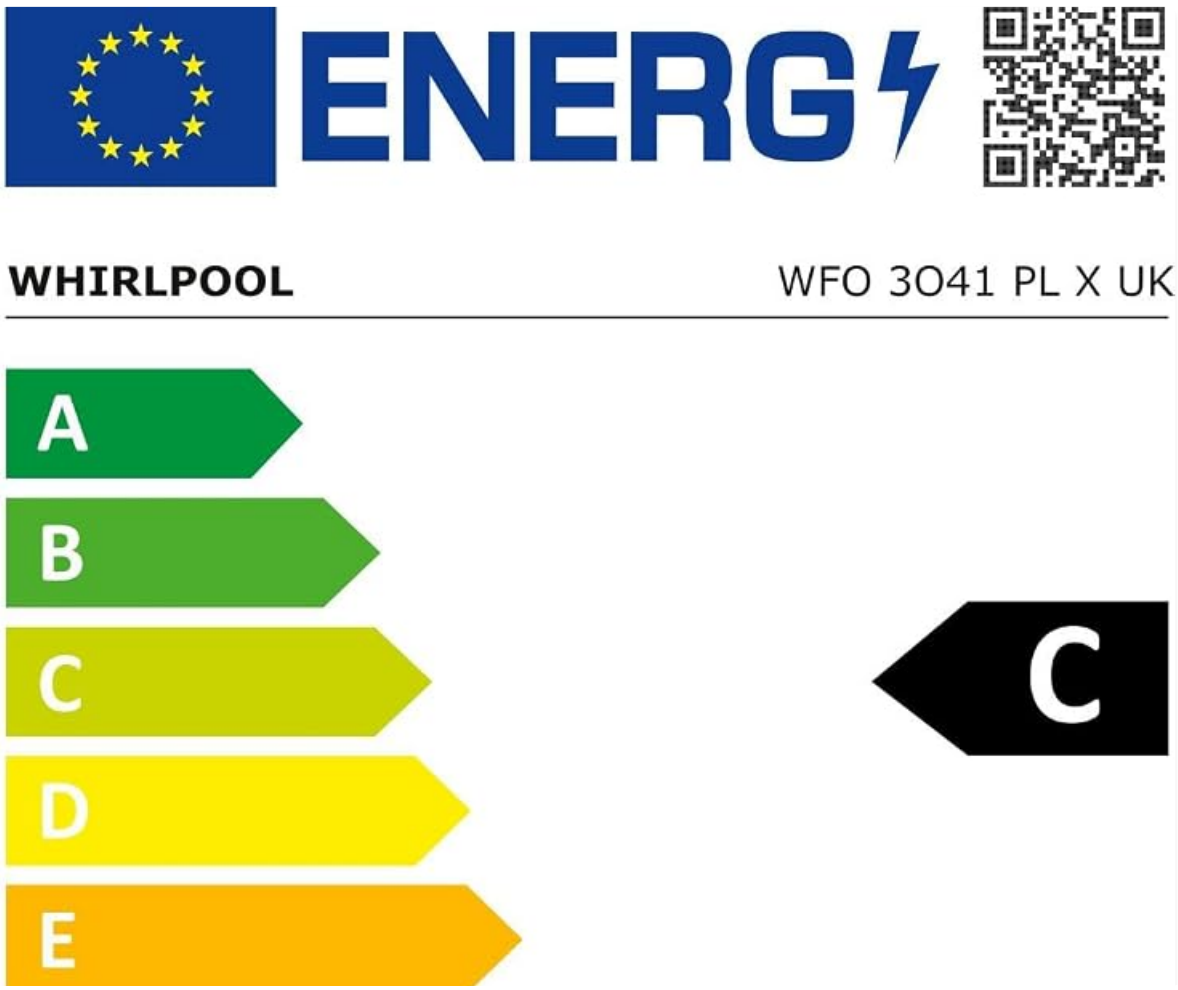

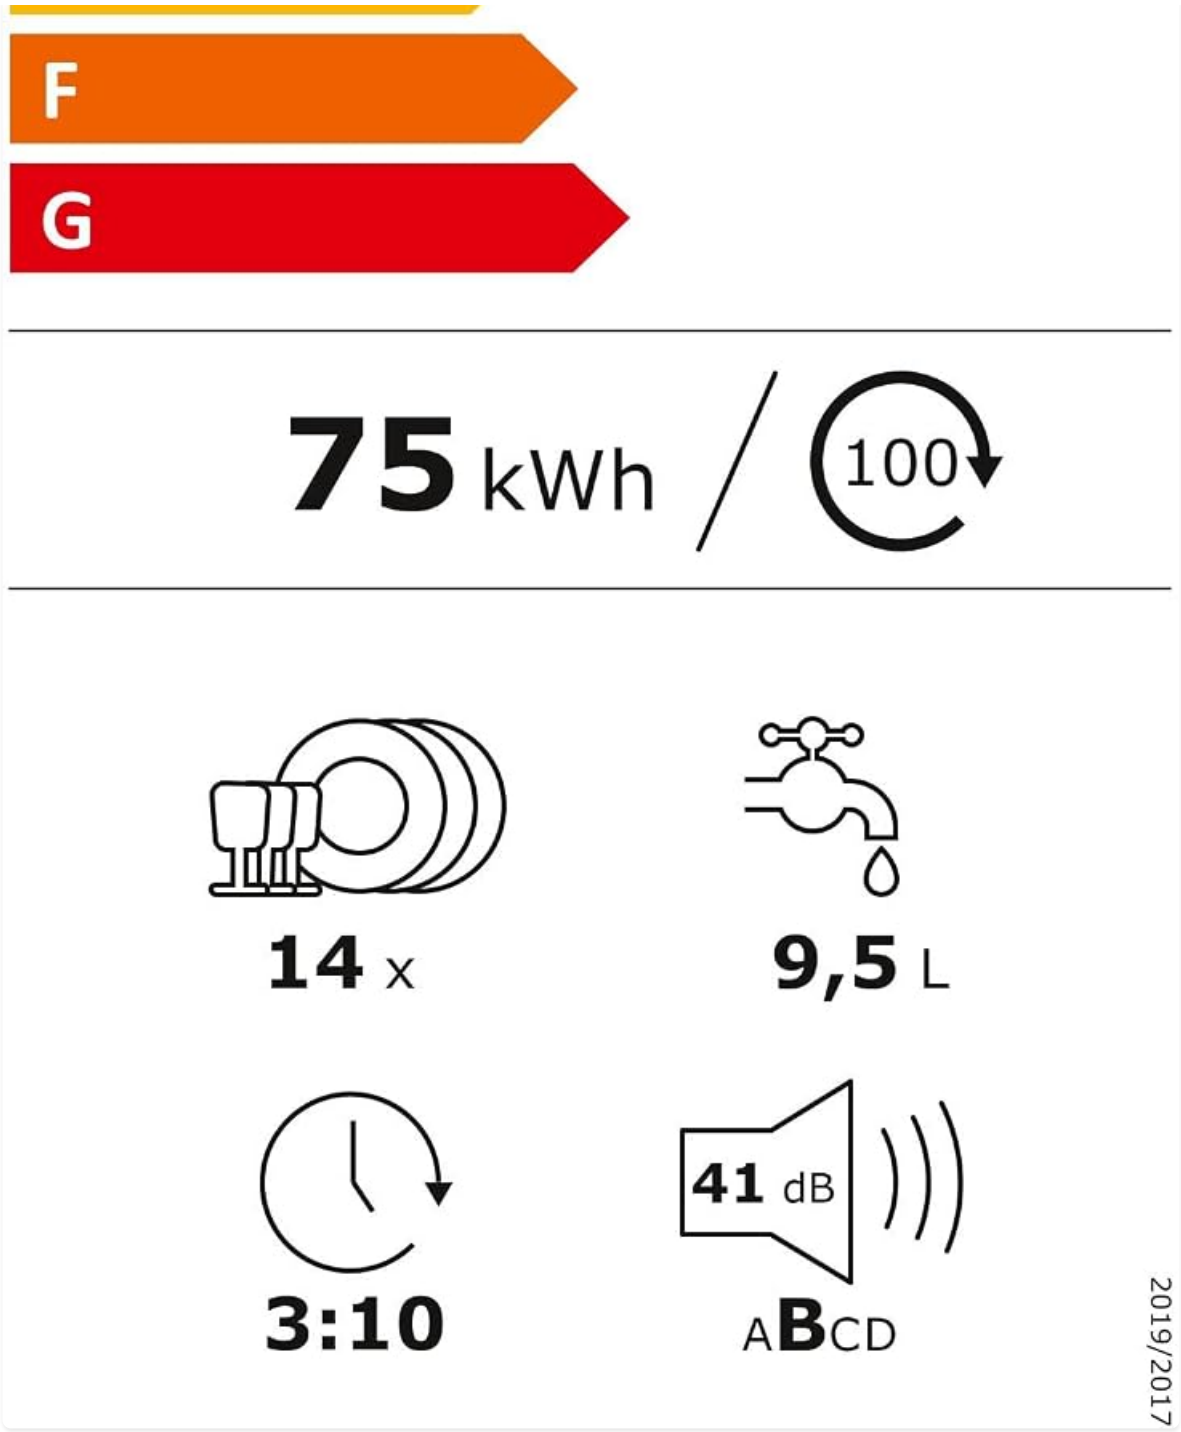


Image 9.1: Energy Label for WFO 3O41 PL X.
For detailed product information, refer to the official EU EPREL database: https://eprel.ec.europa.eu/qr/258030

Fiche d'information sur le produit

RÈGLEMENT DÉLÉGUÉ (UE) 2019/2017 DE LA COMMISSION en ce qui concerne l'étiquetage énergétique des lave-vaisselle ménagers

Nom du fournisseur ou marque commerciale: WHIRLPOOL

Adresse du fournisseur: EMEA Compliance Team, VIA VARESINA, 204 20156 MILANO ITALY

Référence du modèle: WFO 3O41 PL X UK

Paramètres généraux du produit:

Paramètre	Valeur	Paramètre	Valeur	
Capacité nominale[a)] (ps)	14	Dimensions en cm	Hauteur	85
			Largeur	60
			Profon-deur	59

IEE[a)]	43,9	Classe d'efficacité énergétique[a)]	C
Indice de performance de lavage[a)]	1,130	Indice de performance de séchage[a)]	1,070
Consommation d'énergie en kWh [par cycle], sur la base du programme eco avec alimentation en eau froide. La consommation réelle d'énergie dépend des conditions d'utilisation de l'appareil.	0,746	Consommation d'eau en litres [par cycle], sur la base du programme eco. La consommation d'eau réelle dépend des conditions d'utilisation de l'appareil et de la dureté de l'eau.	9,5
Durée du programme[a)] (h:min)	3:10	Type	À pose libre
Émissions de bruit acoustique dans l'air[a)] Hrup (dB(A) re 1 pW)	41	Classe d'émission de bruit acoustique dans l'air[a)]	B
Mode arrêt (W) (le cas échéant)	-	Mode veille (W) (le cas échéant)	0,50
Démarrage différé (W) (le cas échéant)	4,00	Mode veille avec maintien de la connexion au réseau (W) (le cas échéant)	-
Durée minimale de la garantie offerte par le fournisseur: 24 mois			
Informations supplémentaires: Les années de garanties peuvent être différentes selon les différentes lois nationales. Exceptions: Irlande, Royaume-Uni: 12 mois; Espagne, Portugal: 36 mois; Norvège: 60 mois			
Lien internet vers le site web du fournisseur où se trouvent les informations visées à l'annexe II, point 6, du règlement (UE) 2019/2022 de la Commission https://docs.whirlpool.eu/			

[a)] pour le programme eco.

Page 1 / 2

Modèle mis sur le marché de l'Union du 07/10/2020

Numéro d'enregistrement EPREL: 258030 https://eprel.ec.europa.eu/qr/258030

Fournisseur: BEKO EUROPE MANAGEMENT S.R.L. (Fabricant) **Site web:** www.bekoeurope.com

Service après-vente:

Nom: EMEA Compliance Team **Site web:**

Courriel: public_inquiry@europeanappliances.com **Téléphone:** +39 02 83715807

Adresse:
VIA VARESINA, 204
20156 MILANO
ITALY

Image 9.2: Product Data Sheet.

10. Warranty and Support

Your Whirlpool WFO 3O41 PL X dishwasher comes with a minimum warranty of 24 months provided by the

supplier. Warranty periods may vary based on national legislation. For example, exceptions include Ireland and the United Kingdom (12 months), Spain and Portugal (36 months), and Norway (60 months).
For specific information regarding purchases made on marketplaces or for returns within 30 days, please consult the retailer's help pages.

Customer Service Contact:

- **Name:** EMEA Compliance Team
- **Email:** public_inquiry@europeanappliances.com
- **Phone:** +39 02 83715807
- **Supplier Website:** https://docs.whirlpool.eu/