Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Whirlpool UW8 F2Y WBI F2

Whirlpool UW8 F2Y WBI F2 Upright Freezer Instruction Manual

Model: UW8 F2Y WBI F2

1. Important Safety Information

Please read these instructions carefully before using your appliance and retain them for future reference. This manual provides essential information for the safe installation, use, and maintenance of your Whirlpool UW8 F2Y WBI F2 upright freezer.

- Ensure the appliance is disconnected from the power supply before performing any maintenance or cleaning.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- This appliance is intended for household use only.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Children should be supervised to ensure that they do not play with the appliance.

2. Product Overview

Familiarize yourself with the components of your Whirlpool UW8 F2Y WBI F2 upright freezer.



Figure 2.1: Front view of the Whirlpool UW8 F2Y WBI F2 upright freezer. This image shows the sleek white exterior and the integrated handle.



Figure 2.2: Interior view of the freezer, revealing multiple transparent storage drawers for organized food storage.



Figure 2.3: Detailed view of the electronic control panel, featuring temperature display, '6th Sense' function, and 'No-Frost' indicator.

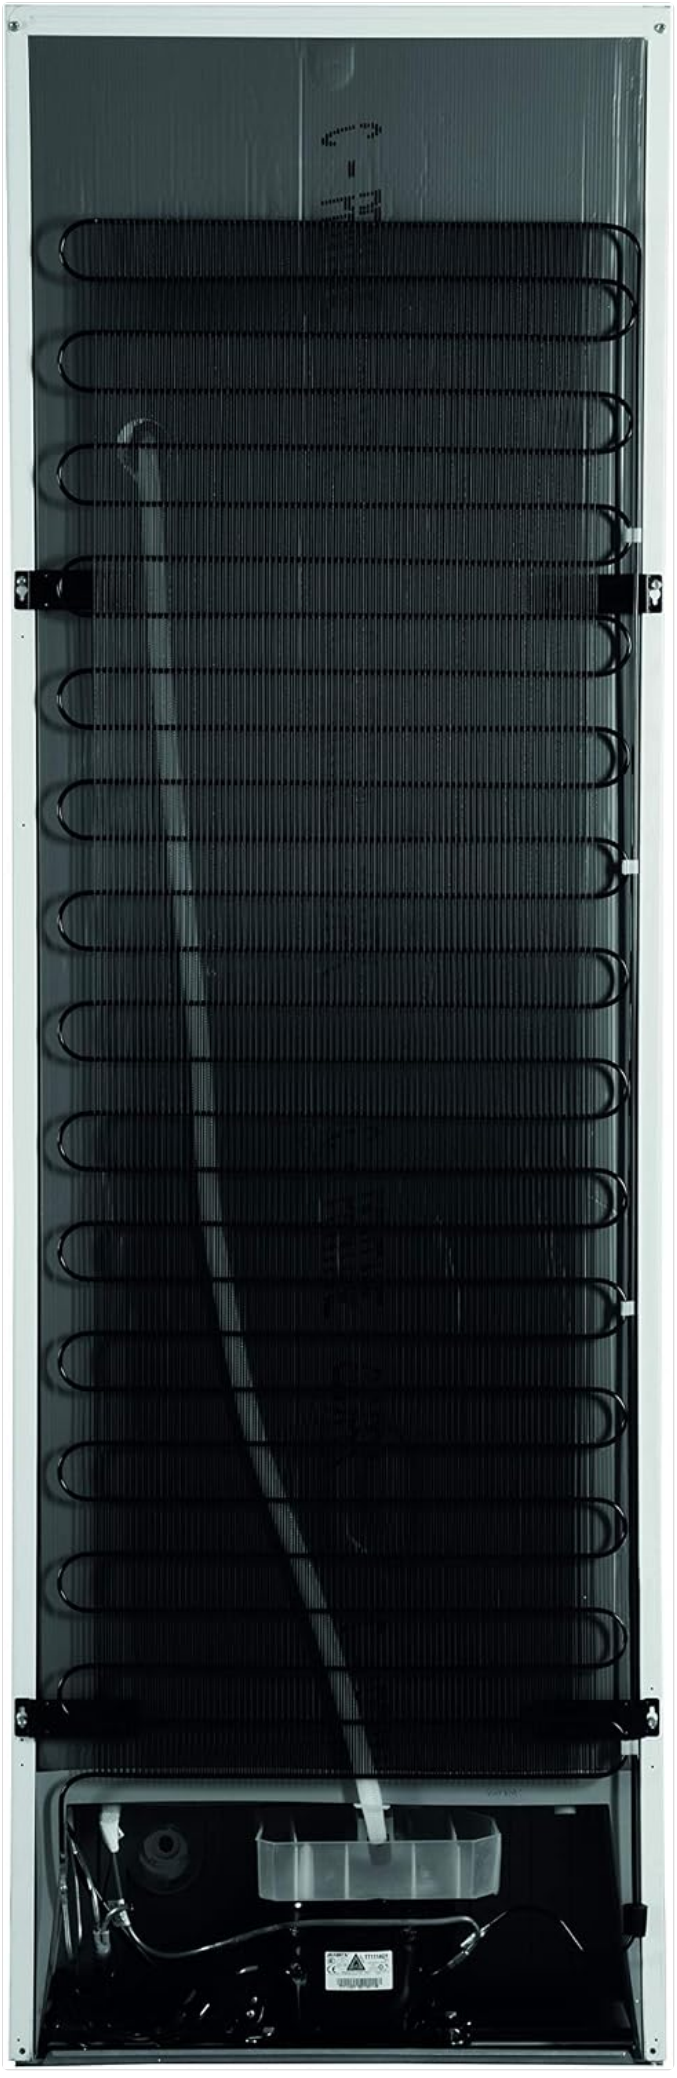


Figure 2.4: Rear view of the freezer, illustrating the condenser coils and compressor unit. Ensure adequate space for ventilation around this area.

3. Setup and Installation

3.1 Unpacking

- Remove all packaging materials, including foam and adhesive tape.
- Check the appliance for any transport damage. Report any damage immediately to your retailer.

3.2 Placement

- Place the freezer on a firm, level floor. Use the adjustable feet to level the appliance if necessary.
- Ensure adequate ventilation around the freezer. Leave at least 5-10 cm of space at the back and sides for proper air circulation.
- Avoid placing the freezer in direct sunlight or near heat sources such as ovens, radiators, or stoves, as this will increase energy consumption.
- The appliance is designed to operate in ambient temperatures corresponding to its climate class (SN-T: 10°C to 43°C).

3.3 Electrical Connection

- Before plugging in, ensure the voltage and frequency indicated on the rating plate match your household power supply (230 Volts).
- Connect the appliance to a properly earthed socket. Do not use extension cords or multiple adapters.
- Allow the freezer to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

3.4 Door Reversibility

The door of this freezer is designed to be reversible, allowing it to open from either the left or right side. Refer to the separate door reversal instructions provided with your appliance for detailed steps. (Note: The factory default door orientation is left-hinged).

4. Operating Instructions

4.1 Initial Start-up and Temperature Setting

- Plug in the appliance. The internal light will illuminate, and the display on the control panel (Figure 2.3) will show the current temperature.
- Use the temperature control buttons on the panel to set the desired freezing temperature. A typical recommended temperature for frozen food storage is -18°C.
- Allow the freezer to operate for several hours (at least 4-6 hours) before placing food inside to ensure it reaches the set temperature.

4.2 '6th Sense' Technology

Your Whirlpool freezer is equipped with '6th Sense' technology, which continuously monitors the temperature inside the freezer and automatically adjusts cooling to maintain optimal conditions, minimizing temperature fluctuations and preserving food quality.

4.3 No-Frost System

This appliance features a No-Frost system, which prevents the formation of ice inside the freezer compartment. This eliminates the need for manual defrosting, making maintenance easier and ensuring consistent cooling performance.

4.4 Freezing Fresh Food


- For best results, freeze fresh food in small portions.
- Place food in airtight containers or freezer bags to prevent freezer burn and odor transfer.
- Avoid placing warm food directly into the freezer; allow it to cool down first.
- Distribute fresh food evenly across the drawers to allow for proper air circulation and efficient freezing.



Figure 4.1: Example of food stored in transparent freezer drawers, demonstrating organized storage.



Figure 4.2: Another view of a freezer drawer, showing bags of frozen vegetables, ideal for quick access.

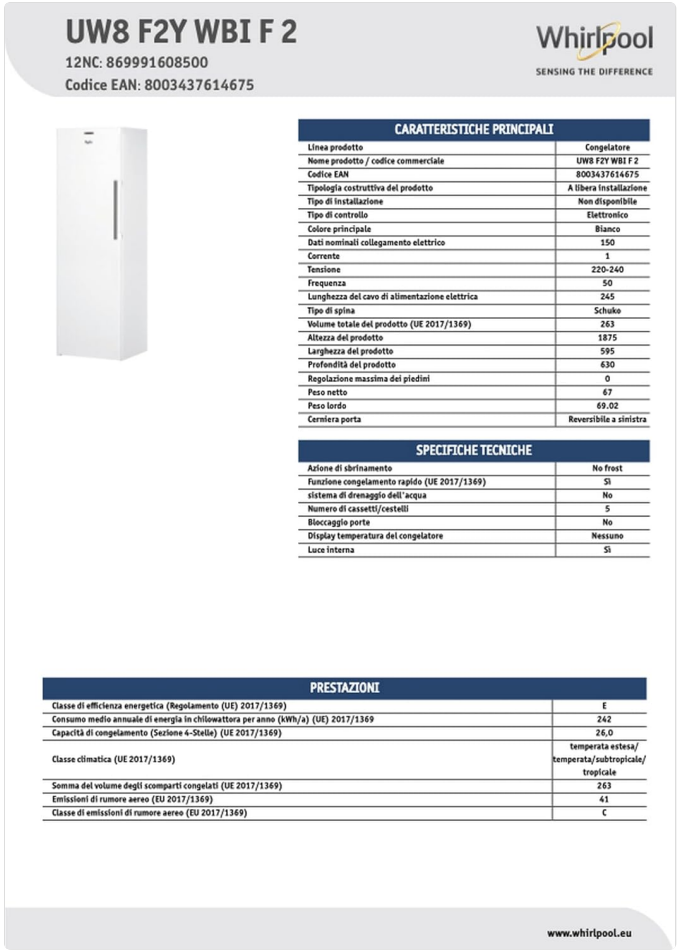

UW8 F2Y WBI F 2

12NC: 869991608500

Codice EAN: 8003437614675

Whirlpool

SENSING THE DIFFERENCE

CARATTERISTICHE PRINCIPALI	
Linea prodotto	Congelatore
Nome prodotto / codice commerciale	UW8 F2Y WBI F 2
Codice EAN	8003437614675
Tipologia costruttiva del prodotto	A libera installazione
Tipo di installazione	Non disponibile
Tipo di controllo	Elettronico
Colore principale	Bianco
Dati nominali collegamento elettrico	150
Corrente	1
Tensione	220-240
Frequenza	50
Lunghezza del cavo di alimentazione elettrica	245
Tipo di spina	Schuko
Volume totale del prodotto (UE 2017/1369)	263
Altezza del prodotto	1875
Larghezza del prodotto	595
Profondità del prodotto	630
Regolazione massima dei piedini	0
Peso netto	67
Peso lordo	69.02
Cerniera porta	Reversibile a sinistra

SPECIFICHE TECNICHE	
Azione di sbrinamento	No frost
Funzione congelamento rapido (UE 2017/1369)	Sì
sistema di drenaggio dell'acqua	No
Numero di cassetti/cestelli	5
Bloccaggio porte	No
Display temperatura del congelatore	Nessuno
Luce interna	Sì

PRESTAZIONI	
Classe di efficienza energetica (Regolamento (UE) 2017/1369)	E
Consumo medio annuale di energia in chilowattora per anno (kWh/a) (UE) 2017/1369	242
Capacità di congelamento (Sezione 4-Stelle) (UE 2017/1369)	26,0
Classe climatica (UE 2017/1369)	temperata estesa/ temperata/subtropicale/ tropicale
Somma del volume degli scomparti congelati (UE 2017/1369)	263
Emissioni di rumore aereo (EU 2017/1369)	41
Classe di emissioni di rumore aereo (EU 2017/1369)	C

www.whirlpool.eu

Figure 4.3: Top compartment or shelf, suitable for smaller items or items requiring quick freezing.

4.5 Storage Guidelines

- Always check the 'best before' or 'use by' dates on food packaging.
- Label all homemade frozen items with the date of freezing.
- Do not refreeze thawed food.

5. Maintenance and Cleaning

5.1 Cleaning the Interior

- Before cleaning, unplug the appliance from the power socket.
- Clean the interior regularly with a solution of lukewarm water and a mild, non-abrasive detergent.
- Wipe dry thoroughly after cleaning. Do not use abrasive cleaners, scouring pads, or solvents.
- Remove and wash drawers and shelves with warm soapy water.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft cloth dampened with water and a mild detergent.
- Regularly clean the condenser coils at the back of the appliance (Figure 2.4) with a soft brush or vacuum cleaner to ensure efficient operation.

5.3 Power Cord Care

Regularly inspect the power cord for any signs of damage. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.


6. Troubleshooting

Before contacting customer service, check the following common issues and their solutions:

Problem	Possible Cause	Solution
Freezer does not operate	No power supply	Check if the power plug is properly inserted and the fuse/circuit breaker is not tripped.
Temperature is not cold enough	Door not closed properly; too much food loaded; ambient temperature too high; temperature setting too high	Ensure door is sealed; reduce food load; move freezer to cooler location; lower temperature setting.
Excessive noise	Appliance not level; contact with wall/furniture	Adjust leveling feet; ensure adequate space around the appliance.
Water on the floor	Drainage hole blocked (if applicable); excessive humidity	Clear any blockages; ensure door is closed properly.

7. Specifications

Detailed technical specifications for the Whirlpool UW8 F2Y WBI F2 upright freezer.

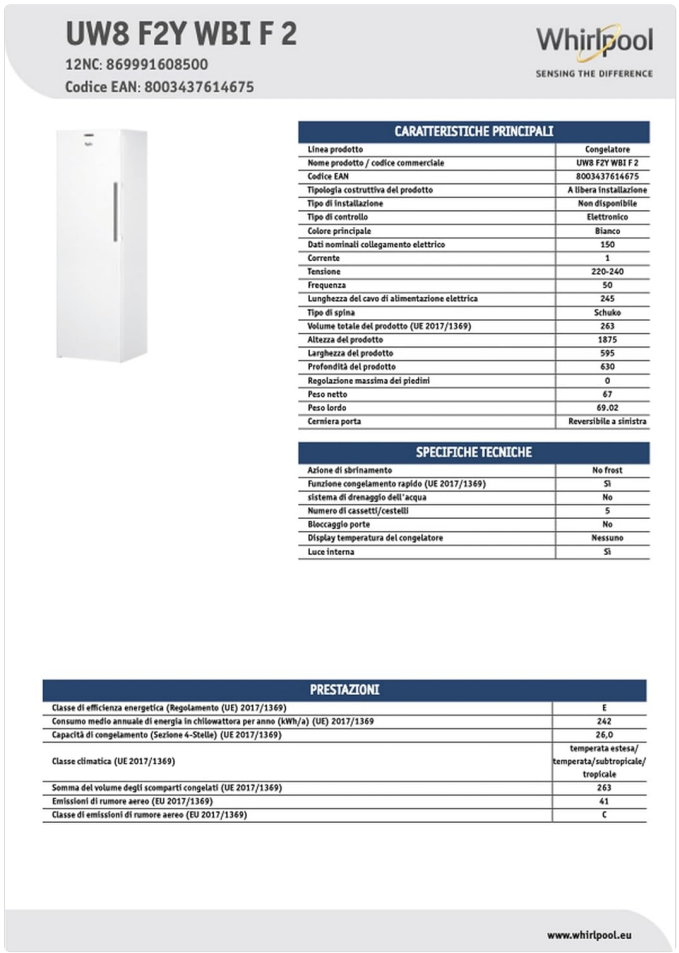

UW8 F2Y WBI F 2

12NC: 869991608500

Codice EAN: 8003437614675

Whirlpool

SENSING THE DIFFERENCE

CARATTERISTICHE PRINCIPALI

Linea prodotto	Congelatore
Nome prodotto / codice commerciale	UW8 F2Y WBI F 2
Codice EAN	8003437614675
Tipologia costruttiva del prodotto	A libera installazione
Tipo di installazione	Non disponibile
Tipo di controllo	Elettronico
Colore principale	Bianco
Dati nominali collegamento elettrico	150
Corrente	1
Tensione	220-240
Frequenza	50
Lunghezza del cavo di alimentazione elettrica	245
Tipo di spina	Schuko
Volume totale del prodotto (UE 2017/1369)	263
Altezza del prodotto	1875
Larghezza del prodotto	595
Profondità del prodotto	630
Regolazione massima dei piedini	0
Peso netto	67
Peso lordo	69.02
Cerniera porta	Reversibile a sinistra

SPECIFICHE TECNICHE

Azione di sbrinamento	No frost
Funzione congelamento rapido (UE 2017/1369)	Sì
sistema di drenaggio dell'acqua	No
Numero di cassetti/cestelli	5
Bloccaggio porte	No
Display temperatura del congelatore	Nessuno
Luce interna	Sì

PRESTAZIONI

Classe di efficienza energetica (Regolamento (UE) 2017/1369)	E
Consumo medio annuale di energia in chilowattora per anno (kWh/a) (UE) 2017/1369	242
Capacità di congelamento (Sezione 4-Stelle) (UE 2017/1369)	26,0
Classe climatica (UE 2017/1369)	temperata estesa/ temperata/subtropicale/ tropicale
Somma del volume degli scomparti congelati (UE 2017/1369)	263
Emissioni di rumore aereo (EU 2017/1369)	41
Classe di emissioni di rumore aereo (EU 2017/1369)	C

www.whirlpool.eu

Figure 7.1: Example of a technical specification sheet, providing detailed product information.

Feature	Specification

Feature	Specification
Brand	Whirlpool
Model	UW8 F2Y WBI F2
Product Type	Upright Freezer
Dimensions (H x W x D)	187.5 cm x 59.5 cm x 63 cm
Item Weight	67 kg
Voltage	230 Volts
Wattage	242 KW
Noise Level	10 Decibels (Note: This value is exceptionally low and may refer to a specific component or be a misprint. Typical freezer noise levels are 35-45 dB.)
No-Frost System	Yes
Door Orientation	Left (Reversible)
Energy Efficiency Class (EU 2017/1369)	E
Annual Energy Consumption (EU 2017/1369)	242 kWh/annum
Freezing Capacity (4-star section, EU 2017/1369)	12 kg/24h
Climate Class (EU 2017/1369)	SN-T (Extended Temperate to Tropical: 10°C to 43°C)
Total Volume of Frozen Compartments (EU 2017/1369)	263 Liters

8. Warranty and Support

Your Whirlpool UW8 F2Y WBI F2 upright freezer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration.

For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool customer support. Contact details can typically be found on the Whirlpool official website or in the documentation provided with your appliance.

When contacting support, please have your appliance model number (UW8 F2Y WBI F2) and serial number ready. The serial number is usually located on a label inside the freezer compartment or on the back of the appliance.

© 2023 Whirlpool Corporation. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08LBMJ2PJ

More documents and user manuals: **https://manuals.plus/**