Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Soundcore A3118

Soundcore Motion Boom Waterproof Bluetooth Speaker User Manual

Model: A3118

Brand: Soundcore

Introduction

This manual provides comprehensive instructions for the Soundcore Motion Boom Waterproof Bluetooth Speaker. Please read this manual carefully before using your device to ensure proper operation and to maximize its lifespan.

For additional support, please visit the Soundcore Store.

Package Contents

- Soundcore Motion Boom Speaker
- 60cm USB A-C Charging Cable
- Quick Start Guide (QSG)
- Brand Card
- Safety Card

Product Overview

The Soundcore Motion Boom is a portable Bluetooth speaker designed for outdoor use, featuring powerful stereo sound, BassUp Technology, and IPX7 waterproofing.



Image: Front view of the Soundcore Motion Boom speaker, showcasing its robust design and integrated handle.

Setup

Charging the Speaker

Before first use, fully charge your Motion Boom speaker.

1. Open the protective flap on the back of the speaker.
2. Connect the provided USB-A to USB-C cable to the charging port on the speaker and to a compatible USB power adapter (not included).
3. The charging indicator lights will illuminate. Once fully charged (approximately 4 hours), the lights will indicate a full charge.



Image: The Soundcore Motion Boom speaker connected to a charging cable, demonstrating the charging process.

Powering On/Off

- To power on, press and hold the Power button until the indicator lights illuminate.
- To power off, press and hold the Power button again until the indicator lights turn off.

Bluetooth Pairing

1. Power on the Motion Boom speaker. The Bluetooth indicator light will flash blue, indicating it's in pairing mode.
2. On your mobile device, enable Bluetooth and search for "Soundcore Motion Boom" in the list of available devices.
3. Select "Soundcore Motion Boom" to connect. Once connected, the Bluetooth indicator light will turn solid blue.



Image: A Soundcore Motion Boom speaker next to a smartphone, illustrating the Bluetooth pairing process.

Operating the Speaker

Basic Controls

Control Functions

Button	Function
Power	Press and hold to power on/off.
Volume -	Decrease volume.
Play/Pause	Press once to play/pause. Double press for next track. Triple press for previous track.
Volume +	Increase volume.
BassUp	Press to activate/deactivate BassUp Technology for enhanced bass.
Bluetooth	Press to enter Bluetooth pairing mode.



Image: Top view of the Soundcore Motion Boom speaker, highlighting the control buttons for power, volume, play/pause, BassUp, and Bluetooth.

Soundcore App

Download the Soundcore app for additional features, including custom equalizer settings and firmware updates.



Image: Screenshots of the Soundcore app interface on a smartphone, demonstrating equalizer and control options.

Wireless Stereo Pairing (TWS)

You can pair two Soundcore Motion Boom speakers together for a true wireless stereo experience.

1. Ensure both Motion Boom speakers are powered on and not connected to any other Bluetooth devices.
2. On one speaker, press and hold the Bluetooth button for 2 seconds until you hear a tone. This speaker will be the primary speaker.
3. The other speaker will automatically connect to the primary speaker. Once connected, both speakers will play audio in stereo.

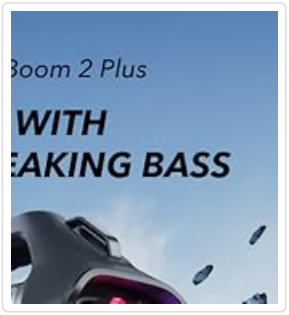


Image: Two Soundcore Motion Boom speakers shown wirelessly connected, illustrating the TWS pairing feature.

Charging Other Devices (PowerIQ)

The Motion Boom speaker can act as a power bank to charge your mobile devices via its USB-A output port.



Image: The Soundcore Motion Boom speaker connected to a smartphone via a USB cable, demonstrating its power bank capability.

Maintenance

Cleaning

Use a soft, damp cloth to clean the speaker's exterior. Do not use any abrasive cleaners or solvents.

Water Resistance (IPX7)

The Motion Boom speaker is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. Ensure the charging port cover is securely closed before exposing the speaker to water.



Image: The Soundcore Motion Boom speaker partially submerged in water, demonstrating its IPX7 waterproof rating.

Storage

Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

Speaker will not power on

Ensure the speaker is fully charged. Connect it to a power source and try again.

No sound

- Check the volume level on both the speaker and your connected device.
- Ensure the speaker is properly paired via Bluetooth.
- Try disconnecting and re-pairing the Bluetooth connection.

Bluetooth connection is unstable or disconnects

- Move the speaker closer to your Bluetooth device.
- Avoid obstacles between the speaker and your device.
- Disconnect other Bluetooth devices from your source device.
- Reset the speaker (refer to the Soundcore app or official support for specific reset instructions).

Sound distortion at high volumes

- Reduce the volume on both the speaker and your connected device.
- Adjust the equalizer settings in the Soundcore app.

Specifications

Product Specifications

Feature	Detail
Model Name	A3118
Speaker Type	Outdoor
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Maximum Range	15 Meters
Audio Output Mode	Stereo
Speaker Maximum Output Power	30 Watts
Frequency Response	55 Hz
Battery Life	24 Hours
Battery Capacity	10000 Milliamp Hours
Charging Time	4 Hours
Water Resistance Level	Waterproof (IPX7)
Product Dimensions	13.62"D x 5.83"W x 7.87"H
Item Weight	4.36 pounds
Control Method	App
Special Feature	Stereo pairing; BassUp Technology; 24-Hour Playtime; waterproof; Ultra-portable

Official Product Videos

Watch this official video for more information on your Soundcore Motion Boom speaker.

Your browser does not support the video tag.

Video: An unboxing and first look at the Soundcore Motion Boom speaker, detailing its initial appearance and features.

Warranty and Support

The Soundcore Motion Boom speaker comes with a Limited Warranty. For detailed warranty information and support, please refer to the Safety Card included in your package or visit the official Soundcore website.

You can also find the full User Manual (PDF)here.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08LQNL42Z

More documents and user manuals: **https://manuals.plus/**