Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nostalgia Nostalgia

Nostalgia Classic Retro 3-in-1 Breakfast Station Instruction Manual

Model: Nostalgia

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating this appliance.
- DO NOT touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or any part of the unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
- DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
- DO NOT place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- DO NOT use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

- DO NOT attempt to dislodge food when appliance is plugged in.
- DO NOT operate unattended.

Introduction

The Nostalgia Classic Retro 3-in-1 Breakfast Station is a versatile appliance designed to simplify your morning routine. This compact unit combines a 2-slice toaster, an egg steamer, and a non-stick griddle, allowing you to prepare a complete breakfast with ease.



Image: The Nostalgia Classic Retro 3-in-1 Breakfast Station in aqua, showcasing its toaster, griddle with sausages and an egg, and egg steamer components.

Its retro design adds a touch of style to any kitchen, while its multi-functional capabilities make it an essential tool for quick and convenient meal preparation. The wide toaster slots accommodate various bread types, the steamer can cook up to 6 eggs, and the non-stick griddle is perfect for frying bacon, sausages, or pancakes.

Parts & Features

Familiarize yourself with the components of your Breakfast Station:



Image: Labeled diagram highlighting the key features of the Breakfast Station.

- **Wide 2-Slot Toaster:** Accommodates bread, bagels, and English muffins. Features custom toast settings and functions for Toast, Defrost, Cancel, and Bagel.
- **Removable Steamer:** Designed to cook up to 6 eggs (soft, medium, or hard-boiled). Includes a removable egg tray, water measuring cup, and lid with steam vents.
- **Non-Stick Griddle Pan:** Ideal for cooking bacon, sausages, eggs, and pancakes. Features a non-stick coating for easy food release and cleaning.
- **Multiple Heating Modes and Timer:** Controls for toaster settings and griddle heat.
- **Removable Crumb Tray:** Located at the bottom of the toaster for easy cleaning of crumbs.
- **Reusable Silicone Cooking Ring:** For perfectly shaped eggs or pancakes on the griddle.

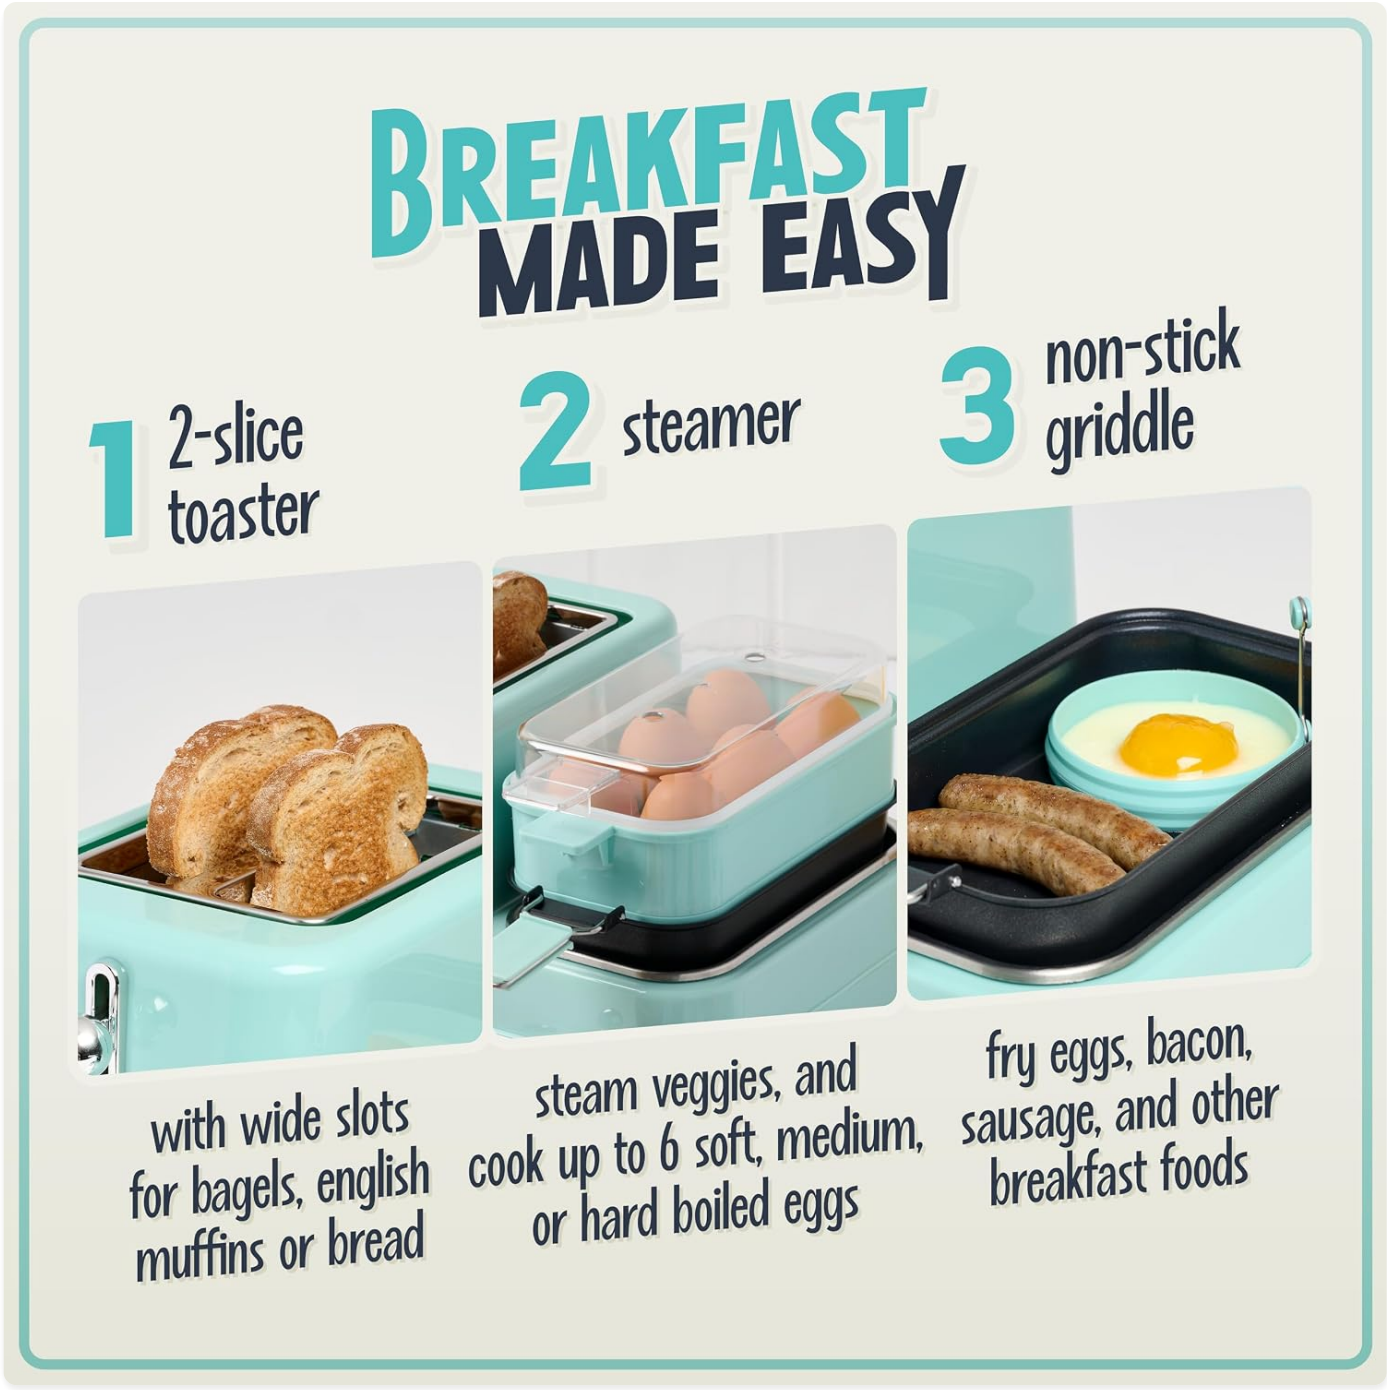


Image: Detailed view of the toaster, steamer, and griddle sections, emphasizing their individual functions.

Setup

Before First Use

1. Carefully unpack the Breakfast Station and remove all packaging materials.
2. Wipe down the exterior of the unit with a damp cloth.
3. Wash the removable egg steamer, egg tray, water measuring cup, silicone cooking ring, and non-stick griddle pan in warm, soapy water. Rinse thoroughly and dry completely.
4. Ensure the crumb tray is properly inserted into the toaster section.
5. Place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.

Operating Instructions

Using the Toaster

The toaster features wide slots and multiple settings for perfect toast every time.

1. Insert up to two slices of bread, bagels, or English muffins into the toaster slots.
2. Adjust the browning control dial to your desired setting (1 for lightest, 6 for darkest).
3. Press down the toast lever until it locks into place. The toaster will begin toasting.
4. Use the

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08N1M851S

More documents and user manuals: **https://manuals.plus/**