Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Ikea HÖGKLASSIG 700

Ikea HÖGKLASSIG Induction Hob User Manual

Model: HÖGKLASSIG 700 (IK.404.678.26)

Brand: Ikea

1. Introduction

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Ikea HÖGKLASSIG induction hob. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. Safety Information

Important Safety Instructions:

- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Do not use abrasive cleaning agents or sharp metal scrapers to clean the hob surface, as they can scratch the surface.
- Ensure proper ventilation around the appliance during operation.
- Keep children away from the appliance during operation and cooling.
- Do not place metallic objects such as knives, forks, spoons, and lids on the hob surface as they can get hot.
- This appliance is intended for household use only.

3. Product Overview

The Ikea HÖGKLASSIG induction hob features multiple cooking zones, including a flexible "Bridge Zone" for larger cookware, and touch controls for precise temperature adjustments. It is designed for efficient and safe cooking.

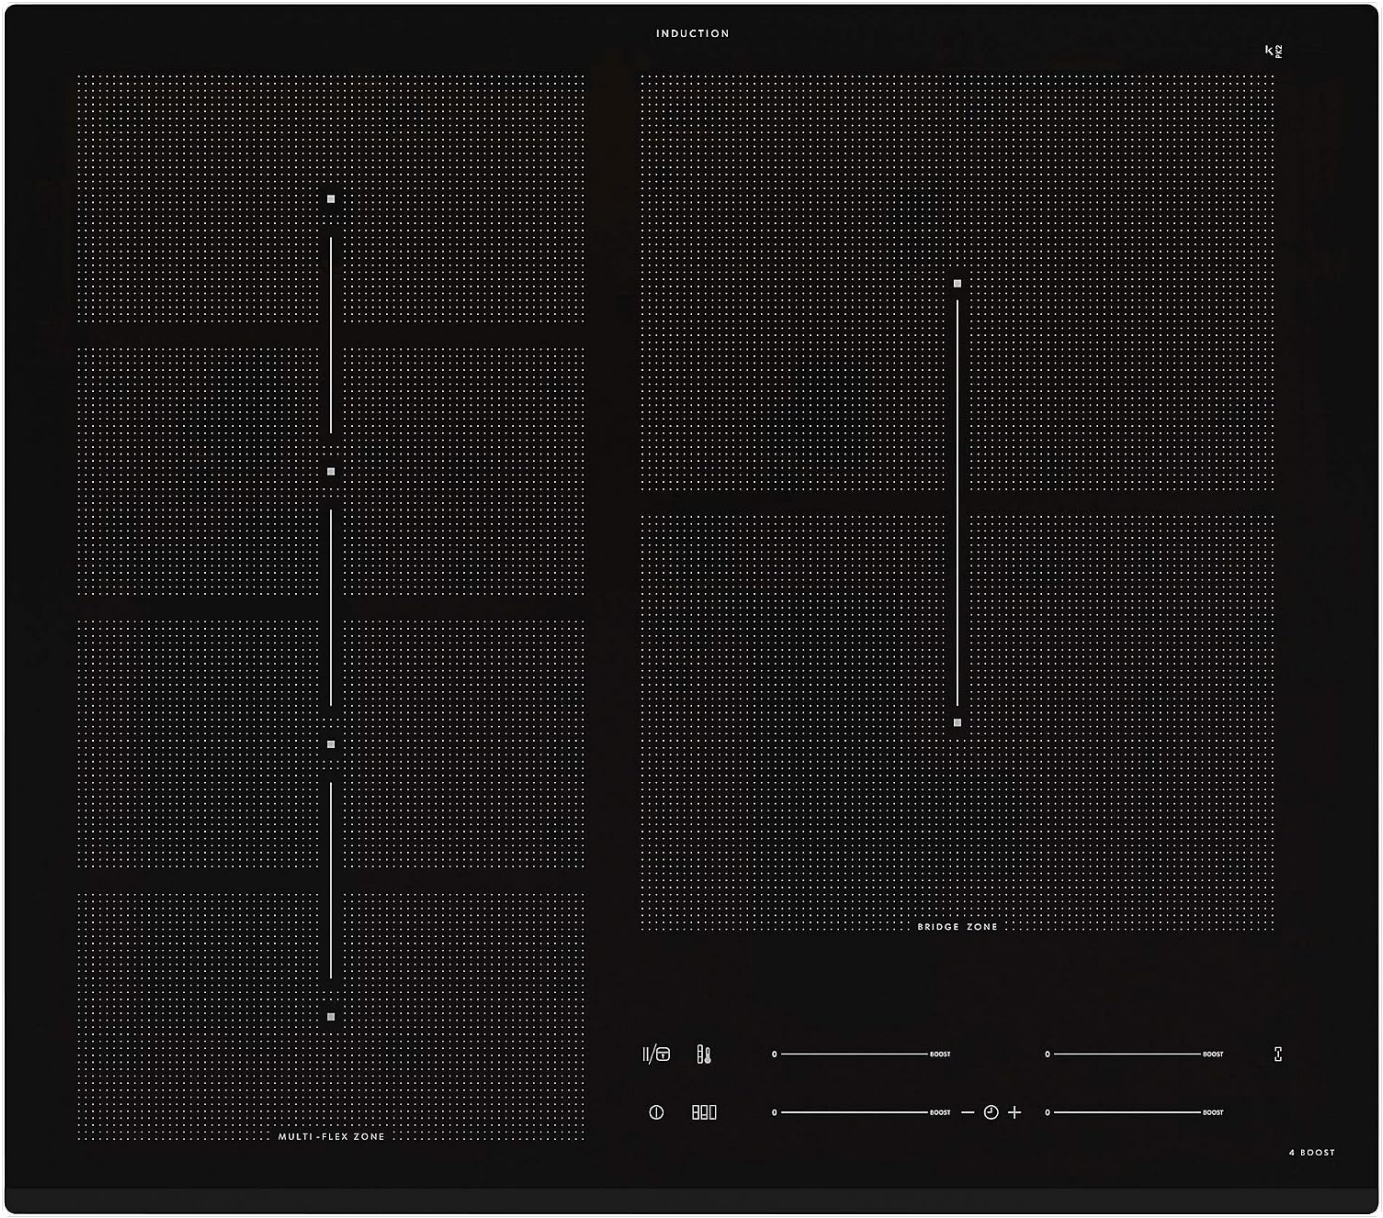


Figure 3.1: Top-down view of the Ikea HÖGKLASSIG induction hob, showing the cooking zones and control panel.



Figure 3.2: Detailed view of the touch control panel and the "Bridge Zone" marking on the hob surface.

4. Setup and Installation

Proper installation is crucial for the safe and optimal performance of your induction hob. It is recommended that installation be performed by a qualified professional.

4.1. Unpacking

- Carefully remove the hob from its packaging.
- Inspect the appliance for any signs of damage. Do not install if damaged.
- Retain packaging materials for potential future transport or service.

4.2. Countertop Preparation and Dimensions

Ensure your countertop is suitable for induction hob installation. Refer to the diagram below for precise cutout and clearance dimensions.

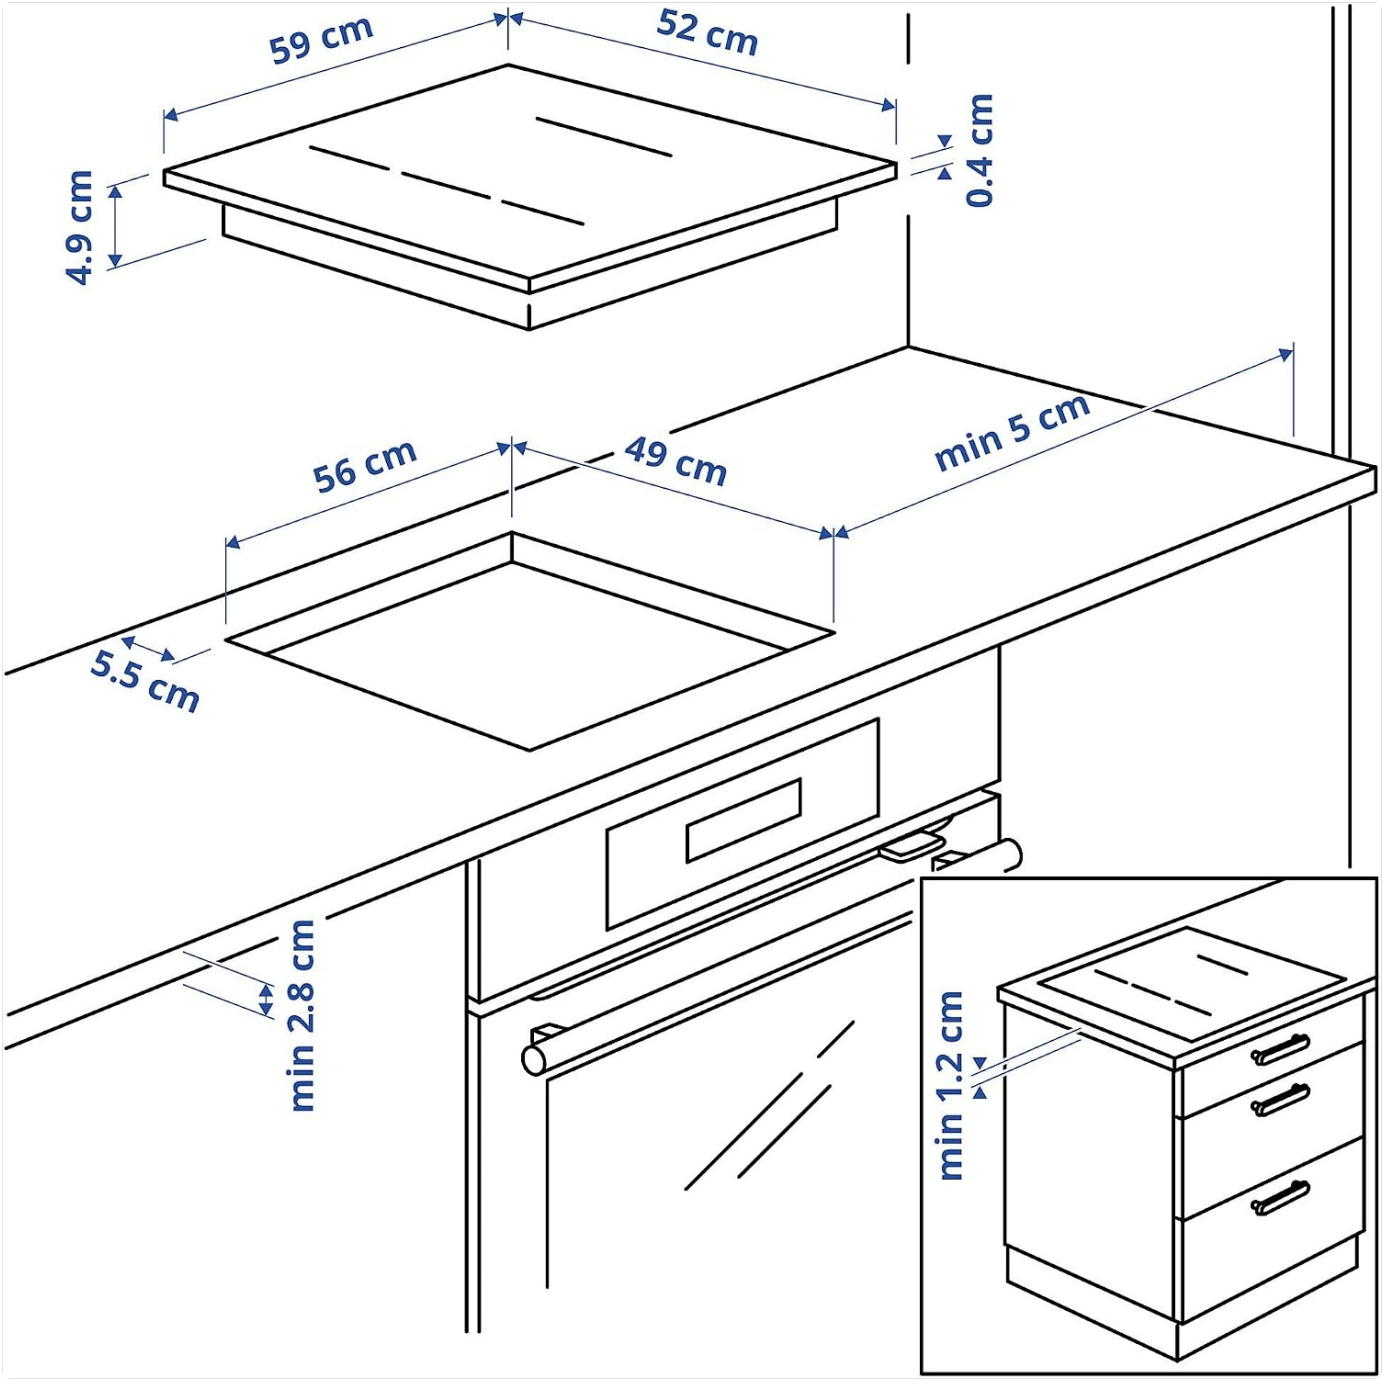


Figure 4.1: Installation diagram with dimensions. The hob measures 59 cm x 52 cm with a height of 4.9 cm. The cutout dimensions are 56 cm x 49 cm. Minimum clearances are also indicated.

4.3. Electrical Connection

The hob requires a 230 Volts electrical supply. The electrical connection must comply with local wiring regulations. Consult a qualified electrician for connection.

5. Operating Instructions

The HÖGKLASSIG induction hob features intuitive touch controls for easy operation.

5.1. Suitable Cookware

Only use cookware suitable for induction hobs. This includes pots and pans made of ferromagnetic materials (cast iron, enameled steel, stainless steel with a magnetic base). A simple test is to see if a magnet sticks to the bottom of the pan.



Figure 5.1: The hob in a kitchen setting, demonstrating a frying pan on one of the cooking zones.

5.2. Turning On/Off

- To turn on: Touch the power symbol (**I/O**) on the control panel.
- To turn off: Touch the power symbol again.

5.3. Selecting a Cooking Zone and Adjusting Power

- Place suitable cookware on the desired cooking zone.
- Select the cooking zone by touching its corresponding sensor.
- Adjust the power level using the '+' and '-' touch controls. Power levels typically range from 1 to 9.



Figure 5.2: The hob in operation with two pots, demonstrating the use of multiple cooking zones simultaneously.

5.4. Using the Bridge Zone

The "Bridge Zone" allows you to combine two cooking zones into one large zone, ideal for griddle pans or large oval pots.

- Place large cookware across the two designated zones.
- Activate the bridge function (refer to specific symbol on control panel, usually indicated by a bridge icon).
- Adjust the power level for the combined zone.



Figure 5.3: A large pot positioned over the bridge zone, illustrating its capability for larger cookware.

5.5. Boost Function

The Boost function provides maximum power to a selected cooking zone for a short period, ideal for rapidly boiling water.

- Select the desired cooking zone.
- Touch the 'Boost' symbol (often indicated by 'P' or 'Boost').
- The function will automatically reduce power after a set time to prevent overheating.



Figure 5.4: The hob in a kitchen environment, showing a wok being used on one of the cooking zones.

5.6. Cooking Zone Dimensions

Understanding the cooking zone dimensions helps in selecting appropriate cookware.

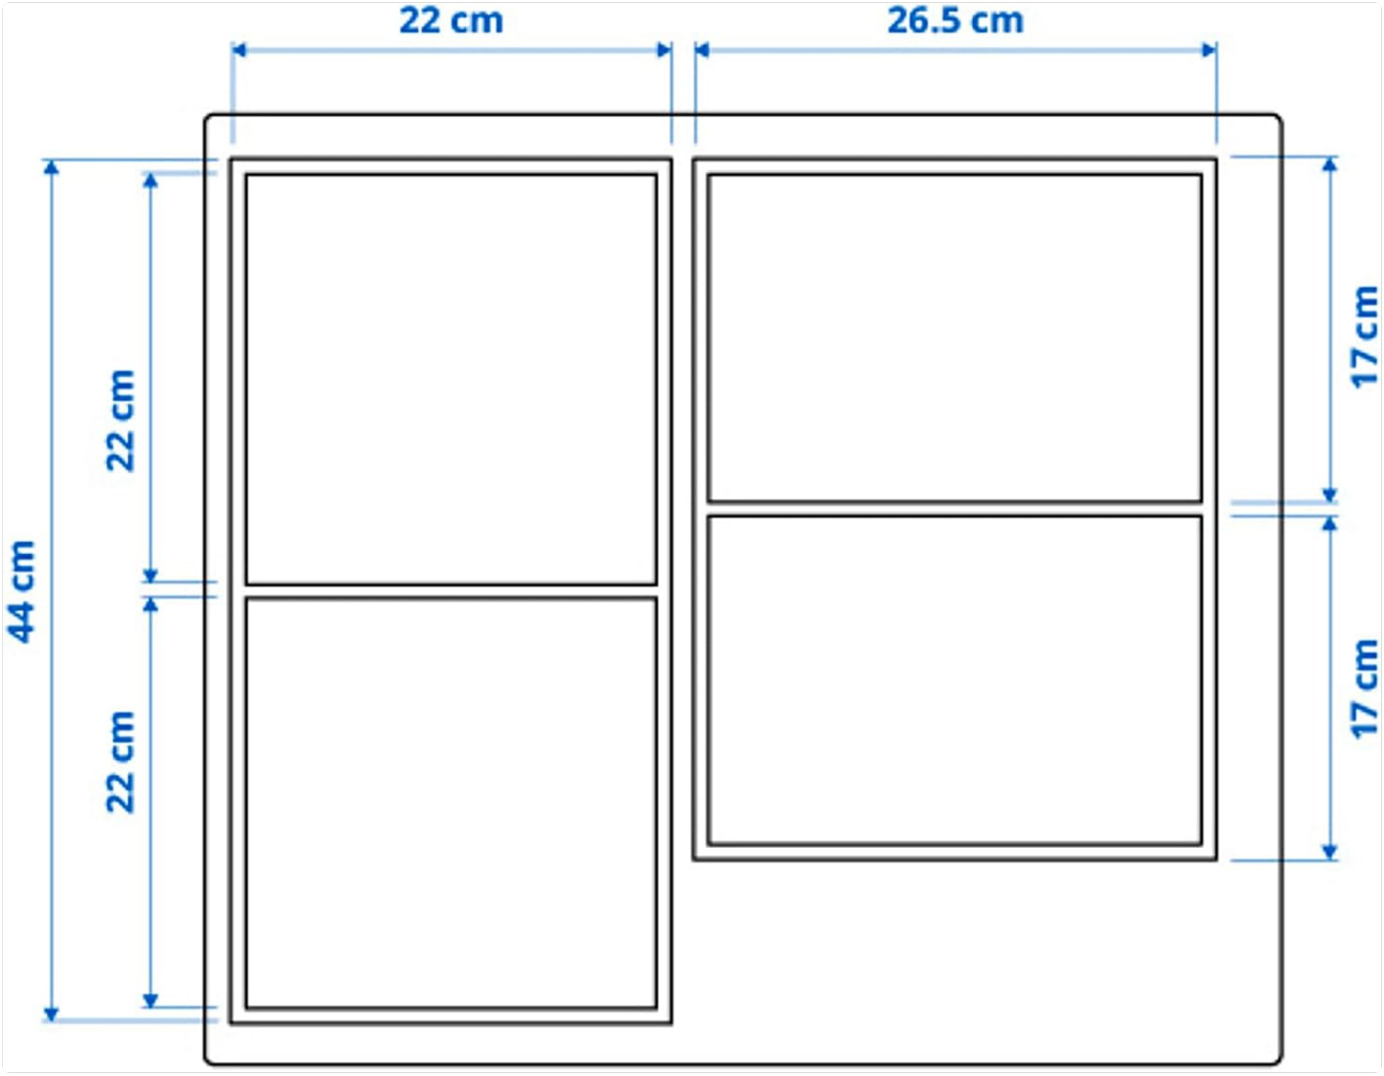


Figure 5.5: Diagram illustrating the dimensions of the individual cooking zones. The left zones are 22 cm x 22 cm, and the right zones are 26.5 cm x 17 cm.

6. Maintenance and Cleaning

Regular cleaning and maintenance will prolong the life of your induction hob and ensure its optimal performance.

6.1. Daily Cleaning

- Allow the hob to cool completely before cleaning.
- Wipe the ceramic glass surface with a soft cloth and a mild detergent.
- For stubborn stains, use a specialized ceramic hob cleaner.
- Dry the surface thoroughly to prevent water marks.

6.2. Avoiding Damage

- Do not use abrasive sponges, scouring pads, or harsh chemicals.
- Avoid dropping heavy or sharp objects on the hob surface.
- Do not drag cookware across the surface, as this can cause scratches.

7. Troubleshooting

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; control panel locked.	Check power connection; unlock control panel (refer to specific lock symbol in manual).
Cooking zone not heating.	Incorrect cookware; cookware not centered; small pan.	Use induction-compatible cookware; center pan; use appropriate size pan for zone.
Display shows an error code.	Internal fault; overheating.	Turn off hob, wait a few minutes, then restart. If error persists, contact service.
Unusual noises during operation.	Normal induction sounds (humming, buzzing); pan material.	These are usually normal. If sounds are excessively loud or unusual, contact service.

8. Specifications

Feature	Detail
Brand	Ikea
Model Number	HÖGKLASSIG 700 (IK.404.678.26)
ASIN	B08NF213MK
Control Type	Touch
Voltage	230 Volts
Heating Elements	Multiple (Induction zones, including Bridge Zone)
Dimensions (Hob)	59 cm (Width) x 52 cm (Depth) x 4.9 cm (Height)
Cutout Dimensions	56 cm (Width) x 49 cm (Depth)

9. Warranty and Support

For warranty information, technical support, or service requests, please contact Ikea customer service or visit their official website. Keep your purchase receipt as proof of purchase.
Ikea Official Website: www.ikea.com

© 2023 Ikea. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08NF213MK

More documents and user manuals: **https://manuals.plus/**