Bell+Howell 7542

Bell+Howell PawPerfect Pet Fur and Hair Trimmer

Model: 7542

Introduction

The Bell+Howell PawPerfect Pet Fur and Hair Trimmer is designed to provide a safe, quiet, and efficient grooming experience for your pets. Featuring stainless steel and ceramic blades, a low-noise motor, and a cordless rechargeable design, this trimmer allows for convenient at-home grooming for both small and large pets.



Image: The Bell+Howell PawPerfect Pet Fur and Hair Trimmer, shown with its retail packaging, highlighting its features for safe and perfect pet fur trimming.

Safety Information

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- Read all instructions before using this appliance.
- Keep the appliance dry. Do not use it while bathing or showering.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.

- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach the plug to the appliance first, then to the outlet. To disconnect, turn all controls to OFF, then remove the plug from the outlet.
- Always ensure the pet is calm and comfortable before and during grooming.
- Inspect blades regularly for damage or dullness. Replace if necessary.

Product Overview

The PawPerfect trimmer features a compact, cordless design with a built-in light for enhanced visibility during grooming. It is equipped with durable stainless steel and ceramic blades for precise trimming.



Image: Detail view of the trimmer's head, highlighting the precise stainless steel and ceramic blades and the integrated light for improved visibility.

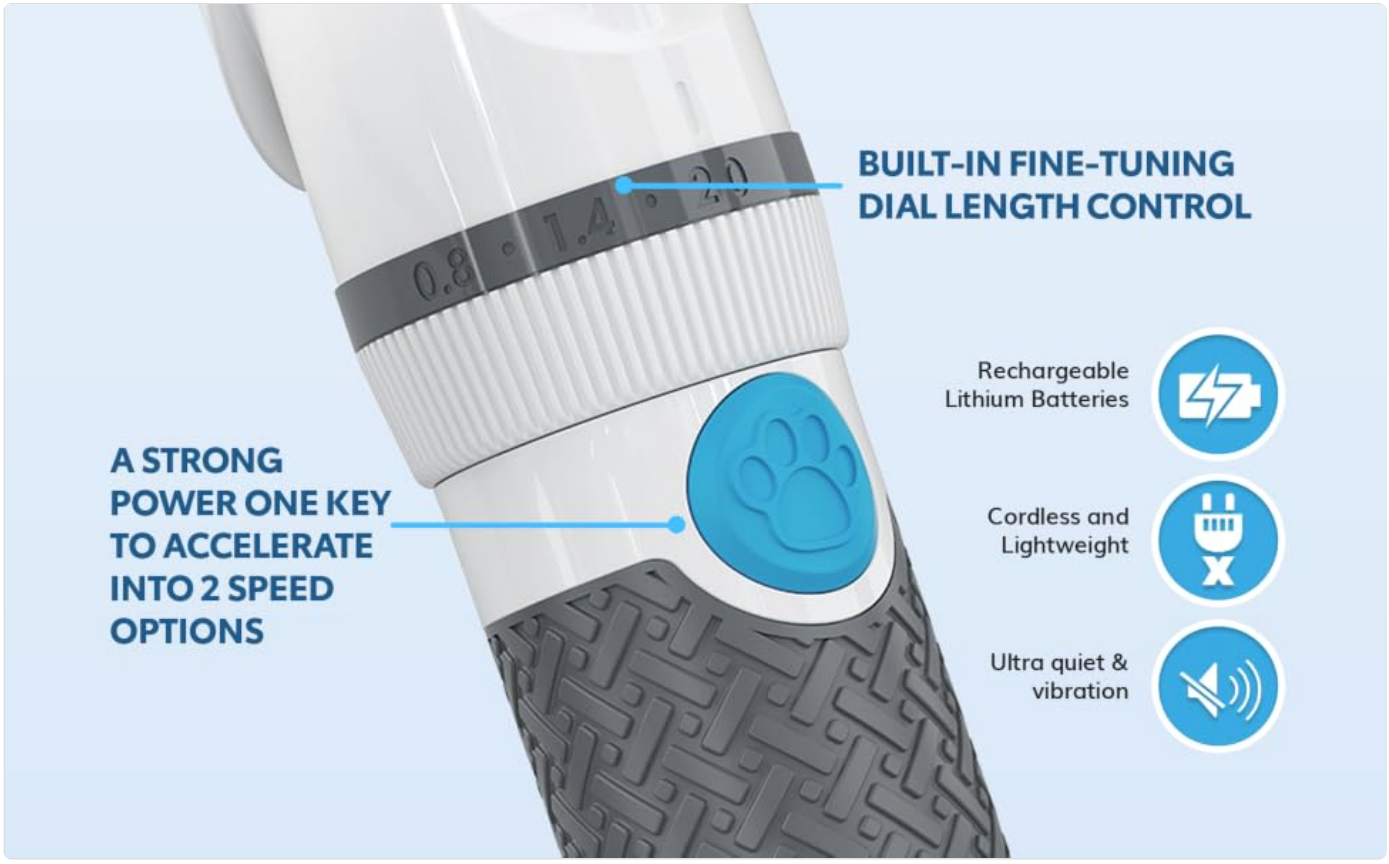


Image: The trimmer's body, illustrating the built-in fine-tuning dial length control and the power button, along with icons indicating its rechargeable lithium battery, cordless and lightweight design, and ultra-quiet operation.



Image: The four included comb attachments (3mm, 6mm, 9mm, and 12mm) that provide different trim lengths for versatile grooming.

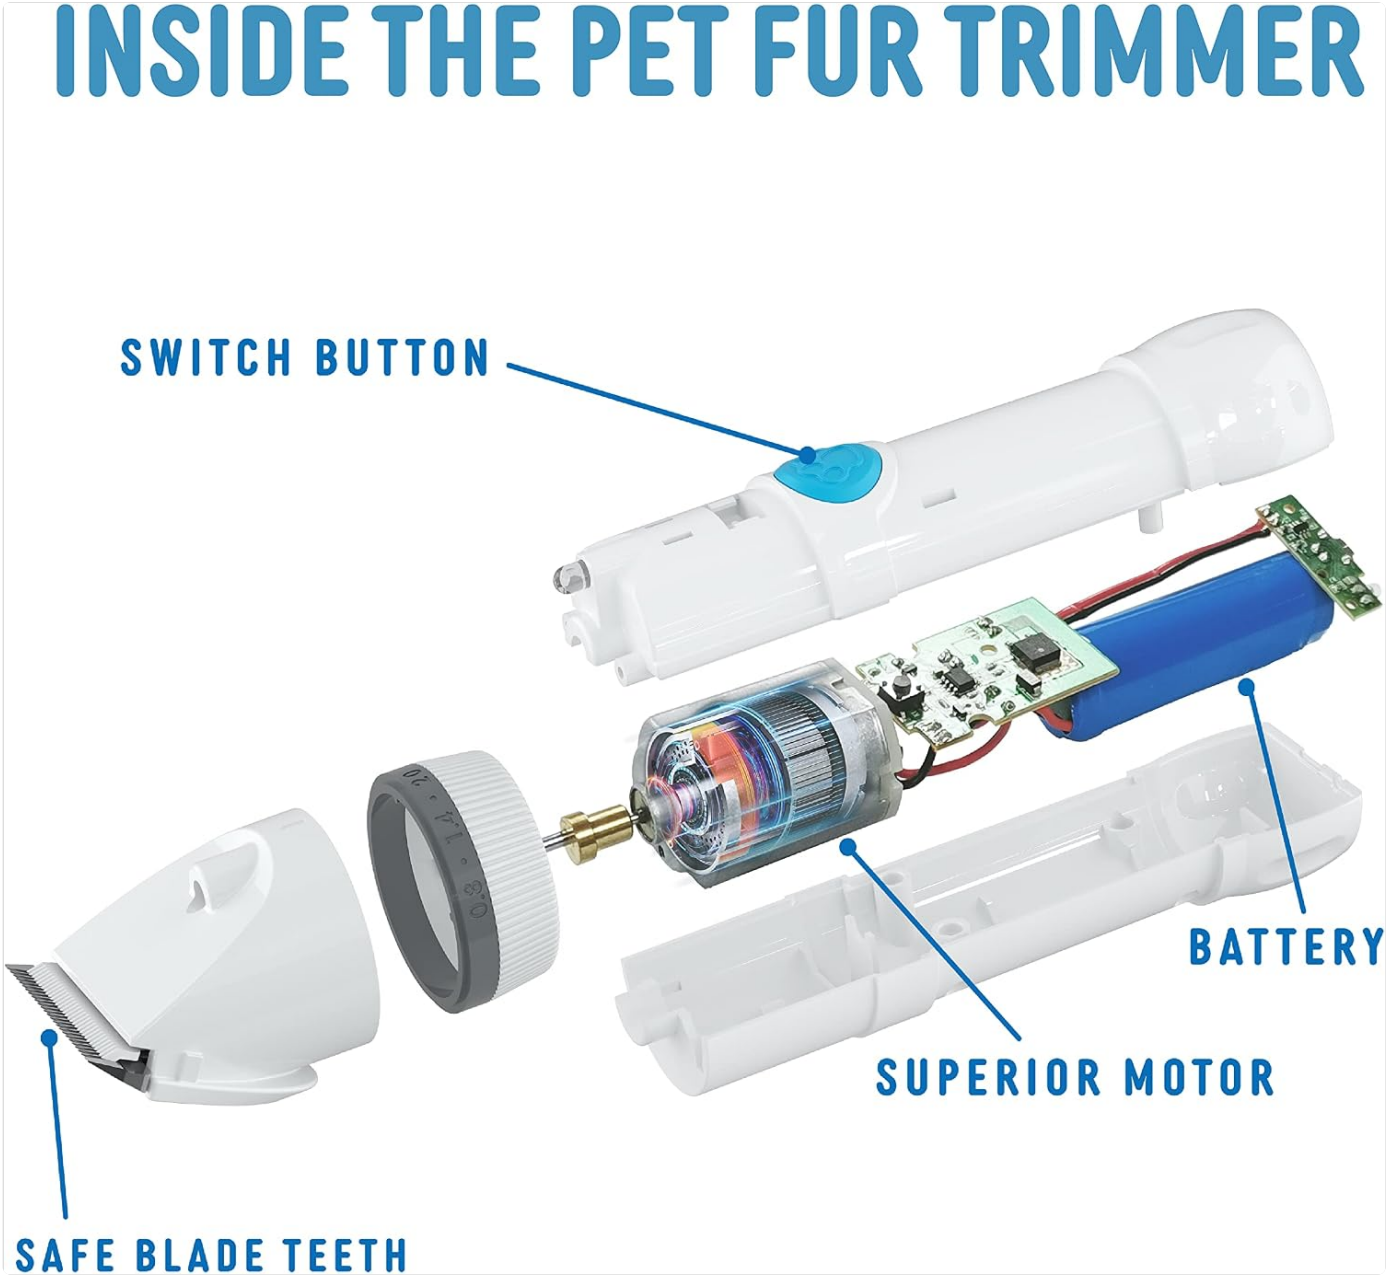


Image: An internal view of the PawPerfect trimmer, detailing its components including the switch button, superior motor, battery, and safe blade teeth.

Setup

Charging the Trimmer

The PawPerfect Pet Fur Trimmer is equipped with a powerful Li-ion battery for cordless operation. Before first use, or when the battery is low, charge the device using the included USB cord.

1. Locate the USB charging port on the trimmer.
2. Plug the included USB cord into the trimmer.
3. Connect the other end of the USB cord to a compatible USB power source, such as a laptop, USB wall adapter (not included), or power bank.
4. Allow the trimmer to charge fully. An indicator light (if present) will typically change color or turn off when charging is complete.

Attaching Comb Guides

To achieve desired fur length, select one of the four comb attachments (3mm, 6mm, 9mm, or 12mm).

1. Ensure the trimmer is turned off.
2. Align the chosen comb attachment with the trimmer's blade head.
3. Gently slide the comb onto the blade until it clicks securely into place.
4. To remove, gently push the comb attachment off the blade.

Operating Instructions

Preparing Your Pet for Grooming

For best results and to ensure your pet's comfort, it is recommended to brush your pet thoroughly before trimming to remove any tangles or mats. For breeds with very long fur, consider trimming with scissors first to avoid unevenness and reduce strain on the trimmer.



Image: A person using the PawPerfect trimmer on a small dog, emphasizing its user-friendly design, safety for skin contact, and gentle operation.

Trimming Procedure

The PawPerfect trimmer is designed to be ultra-quiet, helping to keep your pet calm during grooming.

Your browser does not support the video tag.

Video: An official demonstration of the PawPerfect Hair and Fur Trimmer in use, showcasing its quiet operation and effectiveness on various pet fur types. (Duration: 1 minute 20 seconds)

1. Turn on the trimmer by pressing the power button. The built-in light will illuminate, providing visibility of the grooming area.
2. The trimmer offers two speed options. Press the power button once for the first speed, and again for the second speed.
3. Gently guide the trimmer through your pet's fur in the direction of hair growth.
4. Use smooth, even strokes. The powerful motor and sharp blades will efficiently cut through fur.

5. Pay attention to sensitive areas and use extra caution. The blades are designed to be safe to the touch, minimizing the risk of nicks or cuts.
6. Regularly check the comb attachment for fur buildup and clear as needed to maintain optimal performance.
7. When finished, turn off the trimmer and clean the blades.



Image: A visual representation of the PawPerfect trimmer's ultra-quiet operation (less than 40dB), showing a calm dog and cat, emphasizing its suitability for sensitive pets.

Maintenance

Cleaning the Blades

Regular cleaning ensures the longevity and performance of your PawPerfect trimmer.

1. After each use, turn off the trimmer and remove the comb attachment.
2. Use the included cleaning brush to remove any loose hair from the blades and the trimmer head.
3. For a more thorough cleaning, you may carefully wipe the blades with a soft, damp cloth. Ensure the trimmer is completely dry before storage or next use.
4. Apply a small amount of lubricating oil (often included or recommended for trimmers) to the blades periodically to

keep them sharp and moving smoothly.

Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Keep it out of reach of children and pets.

Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully using the USB cord.
Trimmer is not cutting effectively.	Blades are clogged with fur or dull.	Clean the blades thoroughly. Apply lubricating oil. If blades are dull, consider replacement.
Trimmer is making unusual noise.	Blades need lubrication or are misaligned.	Apply lubricating oil to the blades. Ensure comb attachment is properly secured. If problem persists, contact customer support.
Pet is agitated by the trimmer.	Pet is not accustomed to grooming or noise.	Introduce the trimmer gradually. Start with short sessions. Reward your pet for calm behavior. The PawPerfect is designed to be quiet, which helps.

Specifications

Brand: Bell+Howell

Model Name: Bell+Howell PawPerfect Pet Fur and Hair Trimmer Dog Hair Clippers with Stainless Steel and Ceramic Blades Low Noise Rechargeable and Cordless Shaver for Dogs Cats and Other Furry Pets As Seen On TV

Model Number: 7542

Item Weight: 0.5 Pounds

Item Dimensions (LxWxH): 2.3 x 6.5 x 11 inches

Package Dimensions (LxWxH): 9.1 x 6.38 x 2.6 inches

Package Weight: 0.4 Kilograms

Color: White

Material: Plastic

Blades: Stainless Steel and Ceramic

Motor Speed: Over 5,000 RPMs

Power Source: Rechargeable Li-ion Battery (Cordless)

Included Components: Trimmer, USB charging cord, 4 comb attachments (3mm, 6mm, 9mm, 12mm)

Noise Level: Ultra-quiet (Less than 40dB)

Recommended Uses: Clipping, trimming, shaving pet fur

Warranty and Support

This product comes with a manufacturer's warranty. Please refer to the warranty information provided with your purchase for specific terms and conditions. For customer support, product inquiries, or to purchase replacement parts, please visit the official Bell+Howell website or contact their customer service department.

You can also visit the Bell+Howell Store on Amazon for more information and products.

© 2025 Bell+Howell. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question